

## 10-2 Service and Maintenance

# SCHEDULED MAINTENANCE

## SERVICE SCHEDULES

Maintenance services and record retention are the owner's responsibility. You should retain evidence that proper maintenance has been performed on your vehicle in accordance with the scheduled maintenance services chart.

*For vehicles with normal annual mileage.*

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months, whichever comes first													
		6 Months/7500	1 Year/15000	1.5 Years/22500	2 Years/30000	2.5 Years/37500	3 Years/45000	3.5 Years/52500	4 Years/60000	4.5 Years/67500	5 Years/75000	5.5 Years/82500	6 Years/90000	6.5 Years/97500	7 Years/105000

### ENGINE CONTROL SYSTEM

Drive Belt (Alternator, Power Steering and A/C Compressor)		I		I		I		I		I		I		I
Engine Oil and Engine Oil Filter (1) (3)	I	R	I	R	I	R	I	R	I	R	I	R	I	R
Cooling System Hose and Connections	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine Coolant (3)	I	I	I	I	I	I	R	I	I	I	I	I	I	R
Fuel Filter	I	I	R	I	I	R	I	I	R	I	I	R	I	I
Fuel Line and Connections	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Air Cleaner Element (2)	I	R	I	R	I	R	I	R	I	R	I	R	I	R
PCV System	I	I	I	I	I	I	I	I	I	I	I	I	I	I

### Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

- (1) If a vehicle is operated under severe conditions: short distance driving, extensive idling or driving in dusty conditions, change engine oil and the filter every 7,500 kms or 6 months, whichever comes first.
- (2) Inspect the air cleaner element every 7,500 kms or 6 months if vehicle is driven under dusty driving conditions. If necessary correct, clean or replace.
- (3) Refer to "Recommended Fluids and Lubricants".

For vehicles with normal annual mileage.

MAINTENANCE INTERVAL	Kilometers or time in months, whichever comes first													
	6 Months/7500	1 Year/15000	1.5 Years/22500	2 Years/30000	2.5 Years/37500	3 Years/45000	3.5 Years/52500	4 Years/60000	4.5 Years/67500	5 Years/75000	5.5 Years/82500	6 Years/90000	6.5 Years/97500	7 Years/105000

**CHASSIS AND BODY**

Exhaust Pipe & Mountings	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake / Clutch Fluid (3) (4)	I	I	I	R	I	I	I	R	I	I	I	R	I	I
Front Brake Pads & Discs (5)	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Rear Brake Pads & Discs (5)	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Parking Brake	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Line and Connections (Including Booster )	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Manual Transaxle : Leak Check (3)	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Transfer Case / Rear Differential : Leak Check (3)	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Chassis and Underbody Bolts and Nuts Tight / Secure	I	I	I	I	I	I	I	I	I	I	I	I	I	I

**Chart Symbols:**

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

(3) Refer to "Recommended Fluids and Lubricants".

(4) Change the brake fluid every 15,000 kms or 1 year (whichever is earlier) if the vehicle is mainly driven under severe conditions:

- Driving in hilly or mountainous terrain, or
- Towing a trailer frequently.

(5) More frequent maintenance is required if under severe condition: frequent low-speed operation in stop-and go traffic or driving in dusty conditions.

## 10-4 Service and Maintenance

*For vehicles with normal annual mileage.*

MAINTENANCE ITEM	Kilometers or time in months, whichever comes first													
	6 Months/7 500	1 Year/15000	1.5 Years/22500	2 Years/30000	2.5 Years/37500	3 Years/45000	3.5 Years/52500	4 Years/60000	4.5 Years/67500	5 Years/7 5000	5.5 Years/82500	6 Years/90000	6.5 Years/97500	7 Years/105000

### CHASSIS AND BODY

Automatic Transaxle Fluid (7)(3)	See remarks (7) under "Chart Symbols"													
Tire Condition and Inflation Pressure (8)	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Wheel Alignment (6)	As and when required or as suggested by CHEVROLET retailer													
Wheel Balancing (6)	As and when required or as suggested by CHEVROLET retailer													
Steering Wheel & Linkage	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Power Steering Fluid & Lines	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Drive Shaft Boots	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Safety Belts, Buckles & Anchorages	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Lubricate Locks, Hinges & Hood Latch	L	L	L	L	L	L	L	L	L	L	L	L	L	L
A/C Filter (9)	I	R	I	R	I	R	I	R	I	R	I	R	I	R

#### Chart Symbols:

- I - Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.
- R - Replace or change
- L - Lubricate

(3) Refer to "Recommended Fluids and Lubricants".

(6) If necessary, rotate and balance wheels.

(7) Replace every 1,57,500 kms for normal driving condition (Inspection is not required. A fluid inspection is only required if there is a transmission failure or a fluid leak.)  
Replace every 75,000 kms for severe driving condition as below

- For vehicles mainly driven in heavy city traffic in hot weather, in hilly or mountainous terrain, when frequently towing a trailer, or used for taxi, police or delivery service.

(8) Tire condition should be inspected before driving and tire pressure should be checked each time you fill your fuel tank or at least every 14 days using a tire pressure gauge.

(9) More frequent maintenance is required if under dusty driving conditions.