

SCHEDULED MAINTENANCE

SERVICE SCHEDULES

Maintenance services and record retention are the owner’s responsibility. You should retain evidence that proper maintenance has been performed on your vehicle in accordance with the scheduled maintenance services chart.

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months/years, whichever comes first										
		1 Month/1000	6 Months/5000	1 Years/10000	2 Years/20000	3 Years/30000	4 Years/40000	5 Years/50000	6 Years/60000	7 Years/70000	8 Years/80000	9 Years/90000

ENGINE CONTROL SYSTEM												
Drive Belt (Alternator, Power Steering and A/C Compressor)	I	I	I	I	I	I	I	I	I	I	I	I
Engine Oil and Engine Oil Filter (1) (3)	I	R	R	R	R	R	R	R	R	R	R	R
Cooling System Hose and Connections	I	I	I	I	I	I	I	I	I	I	I	I
Engine Coolant (3)		I	I	I	I	I	R	I	I	I	I	R
Fuel Filter	I	I	I	R	I	R	I	R	I	R	I	R
Fuel Line and Connections	I	I	I	I	I	I	I	I	I	I	I	I
Air Cleaner Element (2)	I	I	I	R	I	R	I	R	I	R	I	R
Spark Plugs	I	I	I	I	R	I	I	R	I	I	R	I
Spark Plug Wires	I	I	I	I	I	I	I	I	I	I	I	I
EVAP Canister, Vapor Lines & Solenoid Valve Filter				I		I		I		I		I
PCV System				I		I		I		I		I
Throttle Body		I	I	I	I	I	I	I	I	I	I	I

Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

- (1) If a vehicle is operated under severe conditions: short distance driving, extensive idling or driving in dusty conditions, change engine oil and the filter every 5,000 kms or 6 months, whichever comes first.
- (2) Inspect the air cleaner element every 5,000 kms or 6 months if vehicle is driven under dusty driving conditions. If necessary correct, clean or replace.
- (3) Refer to “Recommended Fluids and Lubricants” on page 10-6.

10-4 Service and Maintenance

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months/years, whichever comes first											
		1 Month/1000	6 Months/5000	1 Years/10000	2 Years/20000	3 Years/30000	4 Years/40000	5 Years/50000	6 Years/60000	7 Years/70000	8 Years/80000	9 Years/90000	10 Years/100000
CHASSIS AND BODY													
Exhaust Pipe & Mountings	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Fluid (3) (4)	I	I	I	R	I	R	I	R	I	R	I	R	I
Front Brake Discs & Pads (5)	I	I	I	I	I	I	I	I	I	I	I	I	I
Rear Brake Drums & Linings (5)		I	I	I	I	I	I	I	I	I	I	I	I
Parking Brake	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Line and Connections (Including Booster)	I	I	I	I	I	I	I	I	I	I	I	I	I
Manual Transaxle : Fluid / Leak Check (3)	I	R	I	I	R	I	I	R	I	I	R	I	I
Rear Axle Differential : Fluid / Leak Check (3)	I	R	I	I	R	I	I	R	I	I	R	I	I
Chassis and Underbody Bolts and Nuts Tight / Secure	I	I	I	I	I	I	I	I	I	I	I	I	I

Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

(3) Refer to "Recommended Fluids and Lubricants" on page 10-6.

(4) Change the brake fluid every 10,000 kms or 1 year (whichever is earlier) if the vehicle is mainly driven under severe conditions:

- Driving in hilly or mountainous terrain, or
- Towing a trailer frequently.

(5) More frequent maintenance is required if under severe condition: frequent low-speed operation in stop-and go traffic or driving in dusty conditions.

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL		Kilometers or time in months/years, whichever comes first										
	1 Month/1000	6 Months/5000	1 Years/10000	2 Years/20000	3 Years/30000	4 Years/40000	5 Years/50000	6 Years/60000	7 Years/70000	8 Years/80000	9 Years/90000	10 Years/100000	
CHASSIS AND BODY													
Tire Condition and Inflation Pressure (7)	I	I	I	I	I	I	I	I	I	I	I	I	
Wheel Alignment (6)	As and when required or as suggested by CHEVROLET retailer												
Wheel Balancing (6)	As and when required or as suggested by CHEVROLET retailer												
Steering Wheel & Linkage	I	I	I	I	I	I	I	I	I	I	I	I	
Power Steering Fluid (3)	I	I	I	I	R	I	I	R	I	I	R	I	
Power Steering Lines	I	I	I	I	I	I	I	I	I	I	I	I	
Propeller Shaft and Universal Joints	I	I	I	I	I	I	I	I	I	I	I	I	
Safety Belts, Buckles & Anchorages	I	I	I	I	I	I	I	I	I	I	I	I	
Lubricate Locks, Hinges & Hood Latch	L	L	L	L	L	L	L	L	L	L	L	L	

Chart Symbols:

I - Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R - Replace or change

L - Lubricate

(3) Refer to "Recommended Fluids and Lubricants" on page 10-6.

(6) If necessary, rotate and balance wheels.

(7) Tire condition should be inspected before driving and tire pressure should be checked each time you fill your fuel tank or at least once a month using a tire pressure gauge.