

SCHEDULED MAINTENANCE SERVICES

Maintenance services and record retention are the owner’s responsibility. You should retain evidence that proper maintenance has been performed on your vehicle in accordance with the scheduled maintenance services chart.

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months, whichever comes first											
		1 Month / 1000	6 Months / 5000	1 Year / 10000	2 Years / 20000	3 Years / 30000	4 Years / 40000	5 Years / 50000	6 Years / 60000	7 Years / 70000	8 Years / 80000	9 Years / 90000	10 Years / 100000
ENGINE CONTROL SYSTEM													
Drive Belt (Alternator, Power Steering and A/C Compressor)		I	I	I	I	I	I	I	I	I	I	I	I
Engine Oil and Engine Oil Filter (1) (3)		I	I	R	R	R	R	R	R	R	R	R	R
Cooling System Hose and Connections		I	I	I	I	I	I	I	I	I	I	I	I
Engine Coolant (3)		I	I	I	I	I	I	R	I	I	I	I	R
Fuel Filter		I	I	I	I	R	I	I	R	I	I	R	I
Fuel Line and Connections		I	I	I	I	I	I	I	I	I	I	I	I
Air Cleaner Element (2)		I	I	I	R	I	R	I	R	I	R	I	R
Spark Plugs		I	I	I	I	R	I	I	R	I	I	R	I
Ignition Cable		I	I	I	I	I	I	I	I	I	I	I	I
Valve Clearance			I	I	I	I	I	I	I	I	I	I	I
Charcol Canister and Vapor Lines						I			I			I	
PCV System		I				I			I			I	
Timing Belt						I			R			I	

Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

- (1) If a vehicle is operated under severe conditions: short distance driving, extensive idling or driving in dusty conditions, change engine oil and the filter every 5,000 kms or 6 months, whichever comes first.
- (2) Inspect the air cleaner element every 5,000 kms or 6 months if vehicle is driven under dusty driving conditions. If necessary, correct, clean, or replace.
- (3) Refer to “FLUID CHART”.

For vehicles with normal annual mileage.

MAINTENANCE ITEM	Kilometers or time in months, whichever comes first											
	1 Month /1000	6 Months / 5000	1 Year / 10000	2 Years / 20000	3 Years / 30000	4 Years / 40000	5 Years / 50000	6 Years / 60000	7 Years / 70000	8 Years / 80000	9 Years / 90000	10 Years / 100000

CHASSIS AND BODY

Exhaust Pipe and Mountings	I	I	I	I	I	I	I	I	I	I	I	I
Brake / Clutch Fluid (3) (4)	I	I	I	R	I	R	I	R	I	R	I	R
Front Brake Discs & Pads (5)	I	I	I	I	I	I	I	I	I	I	I	I
Rear Brake Drums & Linings (5)	I	I	I	I	I	I	I	I	I	I	I	I
Parking Brake	I	I	I	I	I	I	I	I	I	I	I	I
Brake Line & Connections (Including Booster)	I	I	I	I	I	I	I	I	I	I	I	I
Rear Hub Bearing and Clearance	I	I	I	I	I	I	I	I	I	I	I	I
Manual Transaxle Fluid : Leak Check (3)	I	I	I	I	I	I	I	I	I	I	I	I
Clutch and Brake Pedal Free Play	I	I	I	I	I	I	I	I	I	I	I	I
Chassis and Underbody Bolts and Nuts Tight/Secure	I	I	I	I	I	I	I	I	I	I	I	I

Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

(3) Refer to "FLUID CHART".

(4) Change the brake fluid every 10,000 kms or 1 years (whichever is earlier) if the vehicle is mainly driven under severe conditions:

- Driving in hilly or mountainous terrain, or
- Towing a trailer frequently.

(5) More frequent maintenance is required if under severe condition: short distance driving, extensive idling, frequent low-speed operation in stop-and go traffic or driving in dusty conditions.

8-6 MAINTENANCE SCHEDULE

For vehicles with normal annual mileage.

MAINTENANCE ITEM	Kilometers or time in months, whichever comes first										
	1 Month / 1000	6 Months / 5000	1 Year / 10000	2 Years / 20000	3 Years / 30000	4 Years / 40000	5 Years / 50000	6 Years / 60000	7 Years / 70000	8 Years / 80000	9 Years / 90000

CHASSIS AND BODY												
Tire Condition, Inflation Pressure & Rotation	I	I	I	I	I	I	I	I	I	I	I	I
Wheel Alignment (6)	As and when required or as suggested by CHEVROLET retailer.											
Wheel Balancing (6)	As and when required or as suggested by CHEVROLET retailer.											
Steering Wheel & Linkage	I	I	I	I	I	I	I	I	I	I	I	I
Power Steering Fluid and Lines (3)	I	I	I	I	I	I	I	I	I	I	I	I
Drive Shaft Boots	I	I	I	I	I	I	I	I	I	I	I	I
Safety Belts, Buckles & Anchorages	I	I	I	I	I	I	I	I	I	I	I	I
Lubricate Locks, Hinges & Hood Latch	L	L	L	L	L	L	L	L	L	L	L	L

Chart Symbols:

- I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.
- R- Replace or change
- L- Lubricate
 - (3) Refer to "FLUID CHART".
 - (6) If necessary, rotate and balance wheels.