


**FIND NEW ROADS™**

**CHEVROLET**

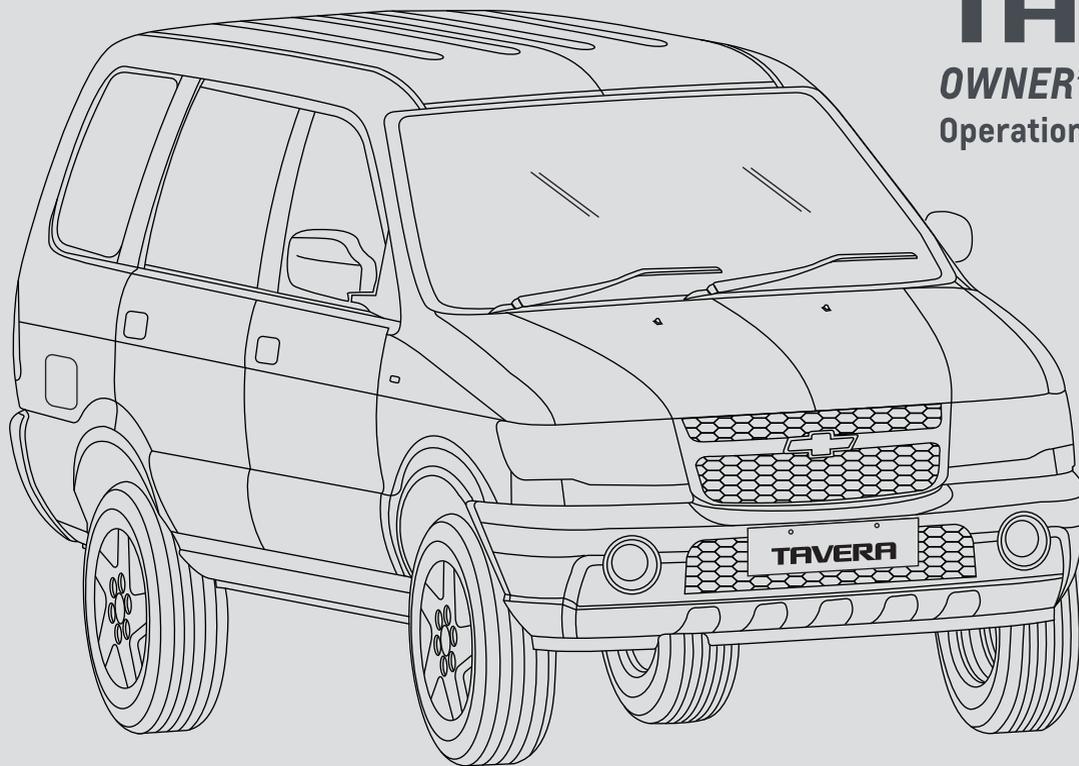

# **TAVERA** BS3

**OWNER'S MANUAL**

**Operation, Safety and Maintenance**

Dear Customer,

Welcome to the Chevrolet family. We wish to thank you for choosing Chevrolet Tavera.

It is our constant endeavor to provide you with products that offer excellent performance through out their ownership period. Which is why, in addition to offering great cars, we have also set up an extensive, and very well equipped network of retailers and authorized service centres across the country.

Naturally, these Chevrolet retailers knows everything there is to know about your car, and provides you with the best service possible. In fact, every retailer is equipped with the most advanced technology, technicians specially trained by us, and genuine spares. Needless to say, they are also committed to ensure your complete satisfaction.

So, please contact a Chevrolet retailer for any servicing need and make sure that only genuine spares are used for your car.

This manual will familiarize you with the operation and maintenance of your new vehicle. It will also provide you with important safety information. Please do read it carefully and follow the recommendations. In fact, the manual is like a permanent part of your car. And it would go a long way in ensuring a safe and trouble-free operation for your car.

Should you have any query please feel free to call our 24 hr. Helpline at 1800 3000 8080 or email us at : [gmi.cac@gm.com](mailto:gmi.cac@gm.com).

Happy Motoring

---

## IMPORTANT NOTICE

Please read this manual and follow the instructions carefully.

Throughout this manual you will find special notations:

- Warning • Caution • Note

### WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death.

### CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries, or damage to your vehicle or other property.

### NOTE

NOTE indicates information which will assist you with maintenance or other instructions concerning your vehicle.

## ABBREVIATIONS USED IN THIS MANUAL

**V** or \* .....Variation (optional on some models).

**D** .....For diesel engine models only.

**4JT** .....For turbo charged 4JA1-L engine model.

**MT** .....For manual transmission models only.

**PS** .....For power steering models only.

**V** or \* : The asterisk and **V** in this manual, signify an item of equipment that is not included on all vehicles. Such items include engine options, model variations specific to one country, and optional equipment.

All information, illustrations, and specifications in this manual are based on the latest product information available at the time of publication.

General Motors India Pvt. Ltd. (GMI) reserves the right to change specifications or designs at any time without notice and without incurring obligation.

This vehicle may not comply with the standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

This manual describes the options and trims available at the time of publication. Some of the items covered may not apply to your vehicle. Contact your CHEVROLET retailer for information on option and trim availability.

Non-GMI Genuine parts and accessories have not been examined or approved by GMI. We can certify neither the suitability nor the safety of Non-GMI genuine parts and accessories and are not liable for damage caused by their use.

---

## TABLE OF CONTENTS


SECTION	PAGE	SECTION	PAGE
IMPORTANT INFORMATION.....	1	Before driving off.....	86
Location of chassis and engine number.....	1	Stopping engine.....	88
Overloading.....	2	Parking.....	88
Operation of new vehicle.....	3	Driving precautions.....	89
Operation and care of vehicle.....	5	Driving for economy <input type="checkbox"/> MT.....	95
Maintenance.....	5	In case of emergency.....	98
CONTROLS AND INSTRUMENTS.....	6	SERVICE AND MAINTENANCE.....	110
Steering column controls.....	7	Maintenance schedule.....	111
Instrument panel and controls.....	14	Maintenance guide.....	118
Floor controls.....	27	Recommended lubricants and diesel fuels.....	146
Others.....	30	Lubrication.....	148
BEFORE DRIVING YOUR VEHICLE.....	53	Lubrication guide.....	151
Operation of controls.....	53	MAIN DATA AND SPECIFICATIONS.....	156
Driver's check list (Regular inspection).....	73	SERVICE AND WARRANTY.....	163
DRIVING.....	84	24x7 ROADSIDE ASSISTANCE.....	189
Preparation for starting engine.....	84	CHEVROLET SALES INDIA	
Starting engine.....	84	SALES AND SERVICE NETWORK.....	197



---

## IMPORTANT INFORMATION

The following information is important for the proper care and economical operation of your CHEVROLET vehicle and should be thoroughly understood before placing it into service.

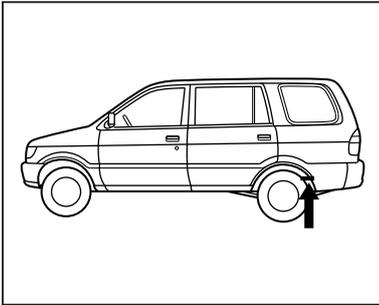


### LOCATION OF CHASSIS AND ENGINE NUMBER

It is advisable to write down the chassis and engine number as they are required when contacting your CHEVROLET retailer for repair services.


#### Chassis number

Chassis number is stamped on the left hand side of the chassis member behind rear left wheel as indicated by arrow.

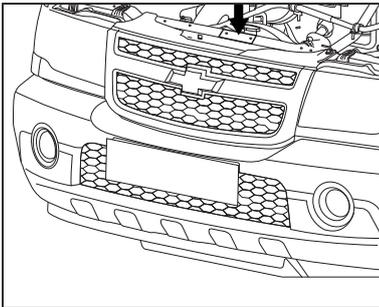


### LOCATION OF VIN (Vehicle Identification Number) PLATE

The VIN plate is fixed on the surface of front end upper panel as indicated by arrow.

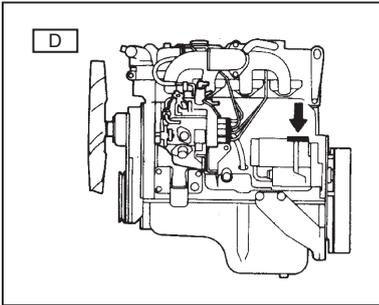

### Engine number D


The engine number is stamped on the left side of the cylinder block.

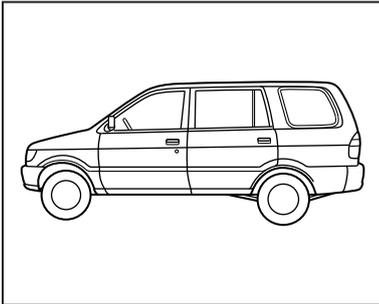

### OVERLOADING


#### **WARNING**

*Overloading not only shortens the service life of your vehicle, but also creates serious potential safety hazards.*

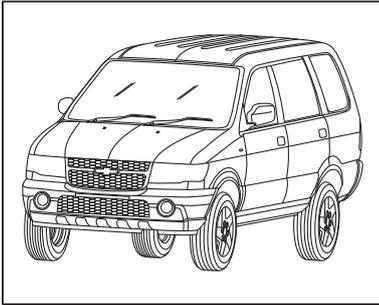

## OPERATION OF NEW VEHICLE


The subsequent performance and the life of your vehicle are directly influenced by the care and treatment that your vehicle receives during the initial break-in period. It is therefore recommended that during the initial 1,000 km. break-in period, the following few simple precautions be carefully observed.

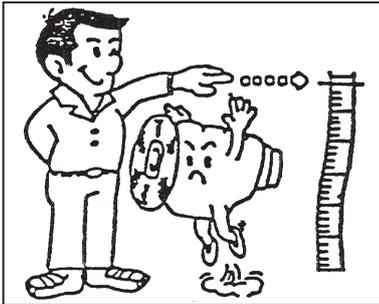

1. It is recommended that speed during the initial 1,000 km be confined to the following.

Maximum allowable speed in each gear during break-in period.

Gear position	1st	2nd	3rd	4th/5th
Speed (km/h)	25	40	65	100

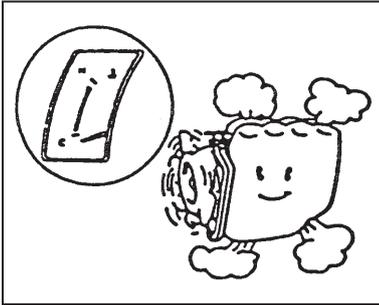

2. Always let the engine idle until it becomes thoroughly warmed up.




3. Avoid engine racing, abrupt starting and needless hard stops. This will allow your brakes to bed-in properly.



### **OPERATION AND CARE OF VEHICLE**

Every component and system of your vehicle should be checked according to “CONTROLS AND INSTRUMENTS”, “BEFORE DRIVING YOUR VEHICLE” and “DRIVING” sections.

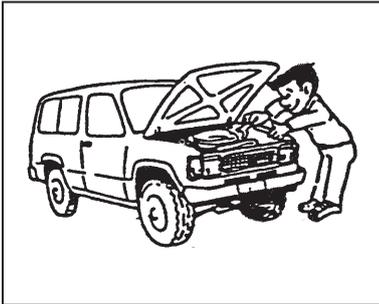


### **MAINTENANCE**


In order to maintain safe and dependable vehicle operation, inspection and adjustment should be performed as outlined in “SERVICE AND MAINTENANCE”. Your CHEVROLET retailer is willing to perform regular maintenance operation on your vehicle.

---

## QUICK VIEW - CONTROLS AND INSTRUMENTS

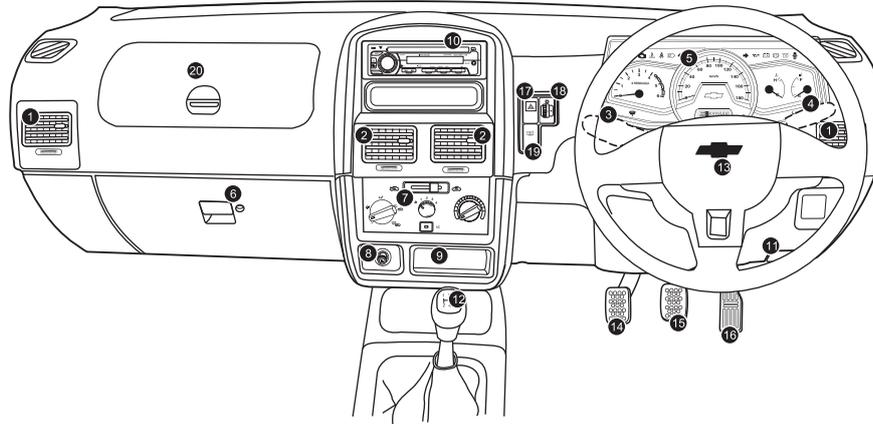

- |                                       |   |  |
|---------------------------------------|---|--|
| 1 Side Vent                           | 8 Cigarette Lighter /APO <input type="checkbox"/> | 15 Brake Pedal                                     |
| 2 Center Vent                         | 9 Ashtray <input type="checkbox"/>                | 16 Accelerator Pedal                               |
| 3 Wiper & Washer Control Lever        | 10 Audio <input type="checkbox"/>                 | 17 Hazard Warning Flasher Switch                   |
| 4 Exterior Lights Control Lever       | 11 Hood Release                                   | 18 Head Lamp Leveling Device                       |
| 5 Instrument panel                    | 12 Transmission Shift Lever                       | 19 Rear Defogger Switch                            |
| 6 Glove Box                           | 13 Steering Wheel and Horn Button                 | 20 Passenger IP Glove Box <input type="checkbox"/> |
| 7 Heating and Air Conditioning System | 14 Clutch Pedal                                   |  |

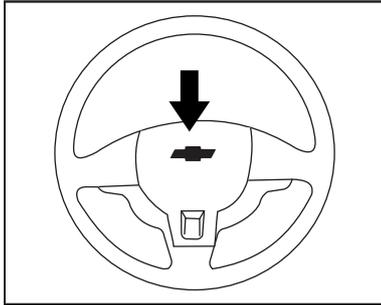

## STEERING COLUMN CONTROLS


### Steering wheel and horn button

The horn button on the steering wheel operates the horn.

### CAUTION

*Avoid turning the steering wheel while the vehicle is stationary.*

*NEVER move the vehicle with the steering locked, or damage to the steering assembly will result.*

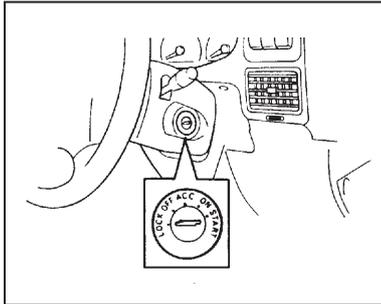

### Starter switch


The switch has five position as shown in the figure.

“LOCK” : The key can be inserted or removed only when the switch is in this position.

“OFF” : The engine is shut off in this position.

“ACC” : In this position, electrical circuits for accessories are on.

“ON” : This position is for driving.

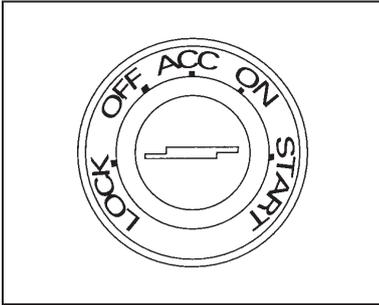


“START” : Turning the key to this position will start the engine.  
The key returns to the “ON” position when released.

### WARNING

*NEVER attempt to turn the switch to LOCK while driving.*


*This will cause the steering wheel to lock.*

*If it is difficult to turn the key from LOCK to OFF, turn the steering wheel slightly in either direction while turning the key.*

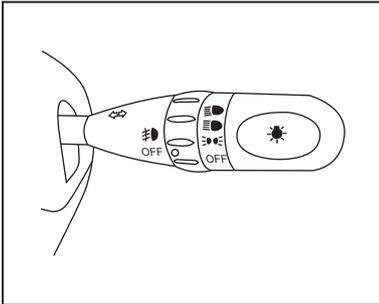


### Combination light control switch

The switch controls the light switch, turn signal switch, dimmer switch, passing light switch and fog lamp.

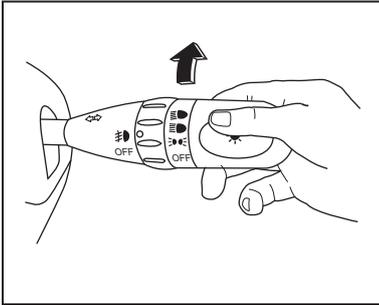

### Light switch


To turn on the clearance lights, tail lights, license plate lights, instrument panel lights, turn the switch knob clockwise. To turn on the headlights and other lights, turn the switch knob clockwise to definite stop.

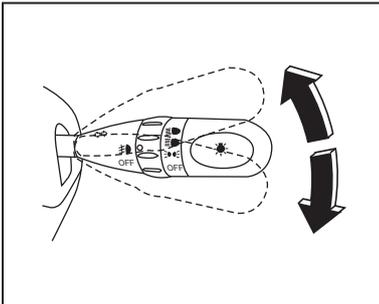

### Turn signal switch

Move the switch lever in the direction of the turn to be made so that the signal lights operate, causing the turn signal indicator light on the instrument panel to flash. The switch lever returns automatically to the neutral position when the steering wheel is returned to a straight ahead position (Specific angle dependent).

When changing lanes, move the turn signal lever part way and hold it there. When you release the lever, it will return to its normal position.

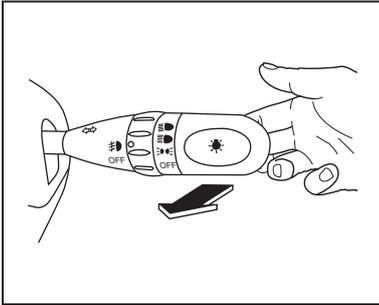


### Dimmer switch

The headlight beam is alternately switched from high to low or from low to high each time the lever is raised. The headlight high beam indicator on the instrument panel lights up when the headlights are in high beam.


### CAUTION

*Always switch the high beam headlamps to low beam when you approach oncoming vehicles or when other vehicles are ahead.*

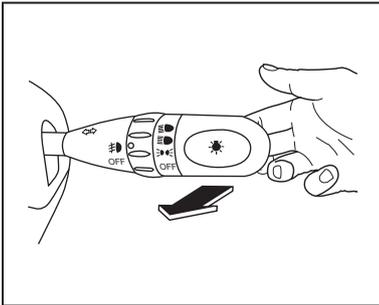

### Passing light switch

The headlight high beam turns on and goes out each time the lever is raised and released with the light switch in either the “OFF”, or the “1st” stop position. To signal overtaking, operate the lever repeatedly so that the headlights flash in daytime, and the high and low beams flash alternately at night.

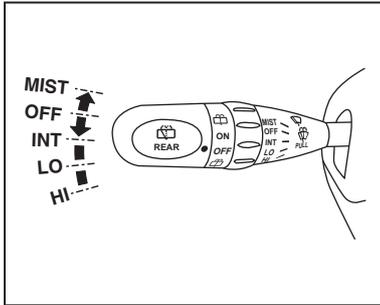

## Windshield Wipers

To operate the windshield wiper, turn the ignition ON and move the windshield wiper / washer lever downward. The windshield wipers operate in the following four position :

**OFF** : System off. Default position.

**INT** : Intermittent operation. Lever down one level

**LO** : Continuous wipe, slow speed. Lever down two levels.

**HI** : Continuous wipe, fast speed. Lever down three levels.

### CAUTION


*Do not operate the wipers when the windshield is dry. It may scratch the windshield glass. Check blades are not frozen to windows before operating in cold weather. This can damage the wiper motor.*

*Dust on windshield or on blade reduces the wiper blade life significantly and may cause streak marks on windshield during wiping. In case the vehicle is not used for more than a week or if dust is accumulated on windshield or wiper, clean the windshield and blade before using the vehicle. To clean the blade lift the blade to service position and wipe the lip of rubber element with clean soft cloth.*

## Mist Function

To operate the windshield wiper once in case of light rain or mist, lightly move the windshield wiper / washer level towards the MIST position.

The wipers will operate through one cycle.

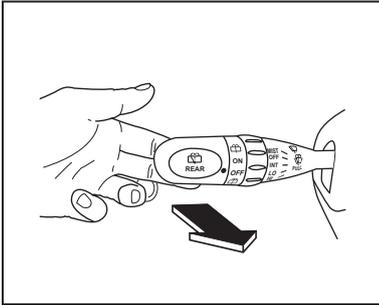

### Windshield Washer


To spray the washer fluid on the windshield.

- Turn the Ign. switch ON.
- Pull the windshield wiper / washer lever towards you.

The lever will return automatically to its normal position when released.


### CAUTION

*Do not operate the windshield washer continuously for more than 10 seconds, or when the washer fluid tank is empty. This can cause the washer motor to overheat resulting in costly repairs.*

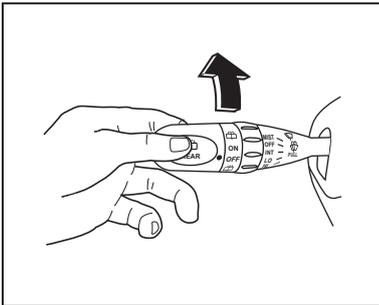

### Rear Wiper and Washer

To operate the rear wiper, turn the rear wiper switch to ON position. To spray the washer fluid, turn the rear wiper switch to extreme top position. The washer fluid will spray as long as you hold the rear wiper switch to above mentioned position.

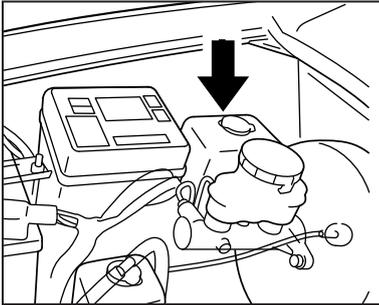


### Windshield washer tank

The tank should be filled only with plain water, GMI genuine washer solution or equivalent.


In cold weather, do not fill the windshield washer fluid reservoir more than three quarters full. Washer fluid can freeze and expand in cold temperatures. Filling the reservoir too much does not allow enough expansion room to prevent possible damage to the reservoir.

### CAUTION

*Do not put radiator antifreeze in the windshield washer reservoir. Radiator antifreeze can damage windshield washer system and vehicle paint.*

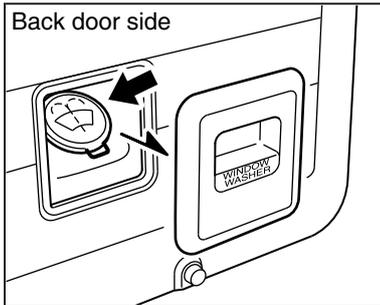

Insert the lower portion of the cover first while re-fitting

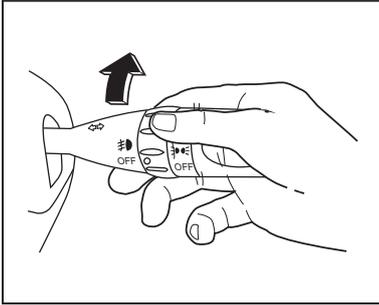

### Front fog light switch


Fog lamps provide:

- Extra illumination to the sides of the road ahead.
- Improved visibility in fog or snow.

To turn the fog lamps on:

- Make sure that the parking lamp or headlamps are on.
- Turn the ring on the middle of the combination switch lever to  position.

To turn the fog lamps off, turn the ring to the OFF position.

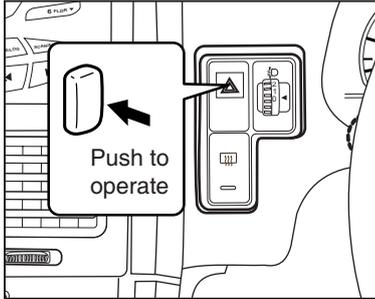


## INSTRUMENT PANEL AND CONTROLS

### Hazard warning flasher switch

When the switch button is pushed in, all signal lights flash regardless of the turn signal switch position. To turn off the flashers, push button again.

### CAUTION

*Use the warning flasher to warn other drivers anytime your vehicle becomes a traffic hazard, day or night.*

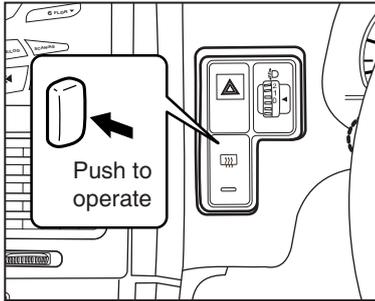

### Rear window defogger switch


With the key turned on, push the rear window defogger switch to use the rear window defroster and defogger. The indicator light will turn on when this switch is in use. Turn off by pushing the switch again when the rear window is clear.

#### NOTE

*If the switch is left on, the battery may run down.*

#### CAUTION

*Do not use sharp instruments or abrasive window cleaners on your vehicle's back door glass.*

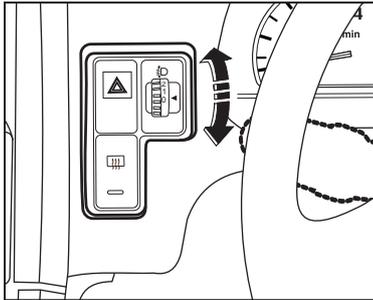


### Head lamp leveling device

Adjust the headlight beam level with the following switch positions according to the number of passengers and load conditions:

#### 10 seater

Sr. No.	Seating Position	Specification
1.	Vehicle unladen and one person in the driver seat	0
2.	Vehicle in laden condition	4

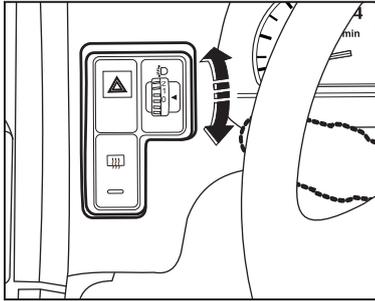

### 9 seater

Sr. No.	Seating Position	Specification
1.	One person in the driver seat	0
2.	The driver, plus one passenger in the front seat farthest from the driver	0
3.	The driver, one passenger in the front seat farthest from the driver, all the seats farthest to the rear occupied	2
4.	All the seats occupied	3
5.	All the seats occupied, plus an evenly distributed load in the luggage boot, in order to obtain the permissible load.	3
6.	Driver plus an evenly distributed load in the boot	4

### 8 seater



Sr. No.	Seating Position	Specification
1.	One person in the driver seat	0
2.	The driver, plus one passenger in the front seat farthest from the driver	0
3.	The driver, one passenger in the front seat farthest from the driver, all the seats farthest to the rear occupied	2
4.	All the seats occupied	3
5.	All the seats occupied, plus an evenly distributed load in the luggage boot, in order to obtain the permissible load.	3
6.	Driver plus an evenly distributed load in the boot	4

### 7 seater


Sr. No.	Seating Position	Specification
1.	One person in the driver seat	0
2.	The driver, plus one passenger in the front seat farthest from the driver	0
3.	The driver, one passenger in the front seat farthest from the driver, all the seats farthest to the rear occupied	2
4.	All the seats occupied	3
5.	All the seats occupied, plus an evenly distributed load in the luggage boot, in order to obtain the permissible load.	3
6.	Driver plus an evenly distributed load in the boot	4

For any other loading condition, adjust the switch to a position so as not to be dazzle oncoming traffic/other vehicles ahead.

## METERS AND INDICATOR LIGHTS

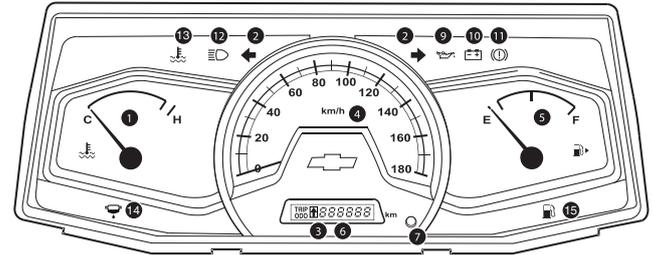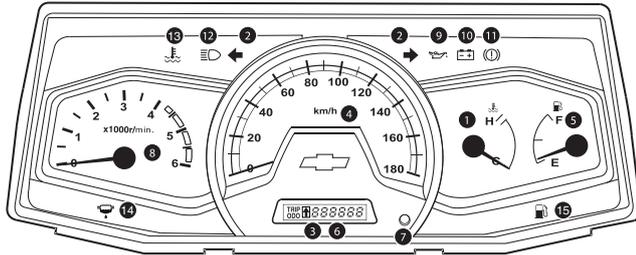


- |   |                              |    |  |    |                                 |
|---|------------------------------|----|--|----|---------------------------------|
| 1 | Temperature gauge            | 8  | Engine tachometer <input type="checkbox"/> V | 14 | Water separator indicator light |
| 2 | Turn signal indicator lights | 9  | Oil pressure indicator light                 | 15 | Low fuel warning lamp           |
| 3 | Odometer                     | 10 | Generator indicator light                    |    |                                 |
| 4 | Speedometer                  | 11 | Brake system indicator light                 |    |                                 |
| 5 | Fuel gauge                   | 12 | High beam indicator light                    |    |                                 |
| 6 | Trip counter                 | 13 | Engine coolant temperature warning lamp      |    |                                 |
| 7 | Reset knob                   |    |  |    |                                 |

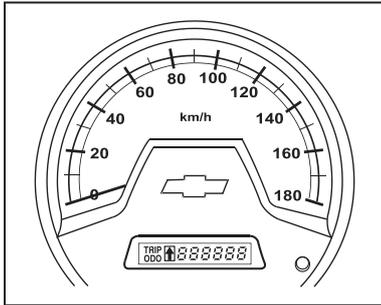


### Speedometer

The speedometer indicates the vehicle speed in kilometers per hour (km/h).

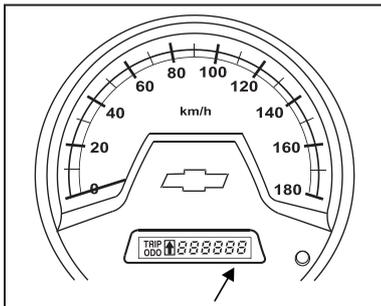


### Odometer

The odometer registers the accumulated distance in kilometers. The figure on the extreme right indicates 1 kilometer.

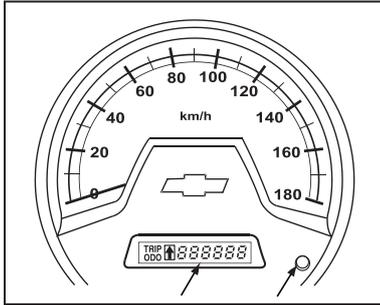

### Trip counter and reset knob

A reset knob for the trip counter is located on the lower section of the meter. To reset the trip counter, push the knob in. The trip odometer is used when you want to know point-to-point distance and running kilometers reached in a certain period of time. Further, the trip odometer can indicate two kinds of point-to-point distance. Push the reset knob for approximately one second or less, and the indication will be changed in order of odometer, trip meter A, trip meter B, and odometer. Continue to push the knob for approximately one second or more when the meter (trip A, trip B) is indicated, and the indication will return to 0 (zero).

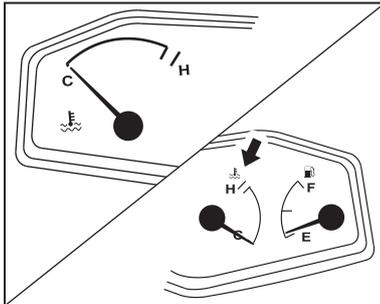


### Temperature gauge

The temperature gauge indicates the temperature of engine coolant when the starter switch is "ON". When the gauge needle is within the thick line on the scale while driving, coolant temperature is normal.

### CAUTION

*If the gauge indicates overheating condition, stop the vehicle and keep the engine idling until coolant temperature lowers to a normal level. Do not drive the vehicle until problem has been solved. Consult your CHEVROLET retailer.*

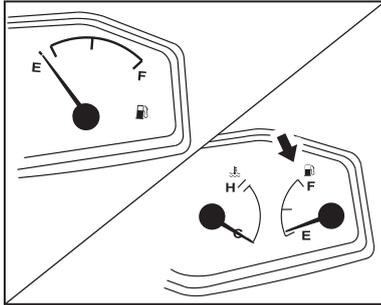


### Fuel gauge

The fuel gauge indicates the level of fuel within the fuel tank when the starter switch is “ON”.

The letters “F” and “E” represent “Full” and “Empty” respectively. When the key is turned to the “OFF” position the needle does not return to the (empty) mark but remains to indicate the approximate fuel level. Movement of the fuel within the fuel tank causes the fuel gauge pointer to move when you brake, accelerate or turn. The indication is not linear and only indicative.

**NOTE**

*When the ignition is switched “ON” fuel gauge needle goes to E level and then returns to show the fuel level.*

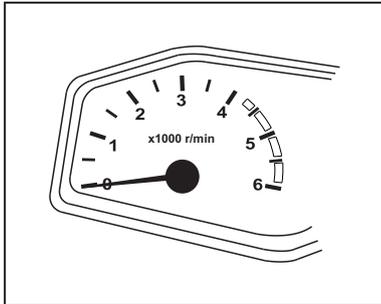

### Engine tachometer


The engine tachometer indicates the engine speed in rpm. The red colored zone represents critical engine speed.

**CAUTION**

*Never operate the vehicle with the tachometer needle in the red zone. Continued operation with the tachometer needle in the red zone can lead to engine damage.*

**NOTE**

*All gauges will self test by deflecting initially when ignition is switched on.*

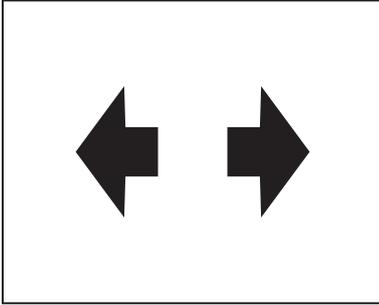


### Turn signal indicator lights

When the turn signal switch or hazard warning flasher switch is turned on, the turn signal indicator light flashes to indicate operation of the turn signal lights or hazard warning lights.


**CAUTION**

*These indicators are required for safe driving. Immediately replace any burned out bulbs in your turn signal and hazard warning flasher indicators.*

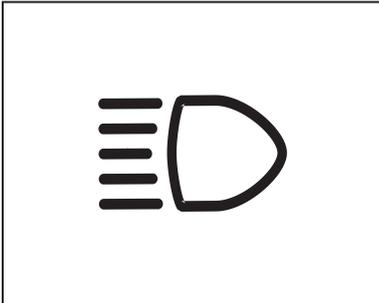

### High beam indicator light

The high beam indicator light comes on when the high beams are in use.

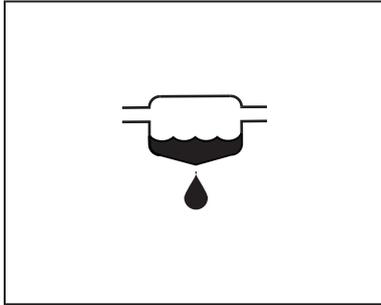


### Water separator indicator light D

When the level of water trapped in the water separator reaches an unsafe level, the water separator indicator light comes on.

**NOTE**

*If the light comes on and remains on with the engine running, it indicates the need for draining of the water separator.*

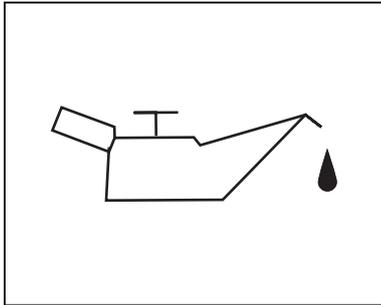


### Oil pressure indicator light

The oil pressure indicator light comes on when the starter switch is "ON". The lamp should go out after engine starts.

**CAUTION**

*If the light comes on while driving, it indicates that the oil pressure is dangerously low. Stop the engine immediately and check the level of the oil in the engine crankcase after waiting for few minutes. If the oil level is normal, have the lubricating system checked at your nearest CHEVROLET retailer. Do not run the engine with the light illuminated.*

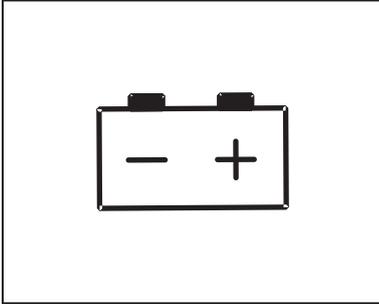


### Generator indicator light

The Generator indicator light comes on when the starter switch is turned to “ON” and goes off when the engine is started.

**NOTE**

*If the light comes on while driving, have the generator circuit checked at your nearest CHEVROLET retailer.*

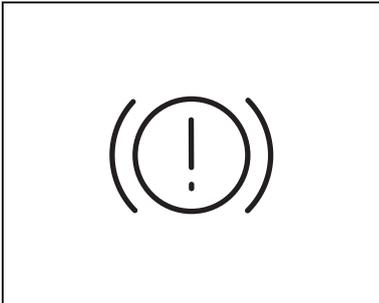


### Brake system indicator light

The brake system indicator light comes on when the parking brake lever is pulled with the starter switch “ON”, or the brake fluid in the reservoir is lower than the specified level with the parking brake lever released.

**WARNING**

*If the light turns on while driving, stop the vehicle immediately and check the level of brake fluid in the reservoir. If the level is too low, have the vehicle towed in for repairs.*

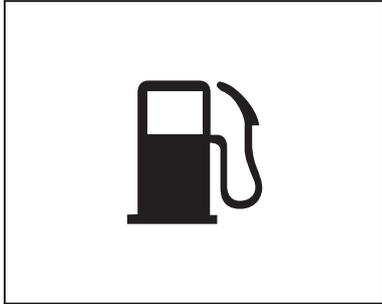


### **Low fuel warning lamp**

This warning lamp comes on when the fuel tank is low on fuel. Fill up the fuel tank as soon as possible when warning lamp comes on.

#### **CAUTION**

- *Do not let your vehicle to run out of fuel.  
This can damage the catalytic converter.*

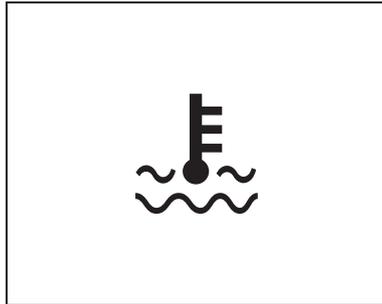


### **Engine coolant temperature warning lamp**

This lamp illuminates when the Engine coolant gets overheated.

If you have been operating your vehicle under normal driving conditions, you should pull off the road, stop your vehicle and let the engine idle for a few minutes.

If the lamp does not go out, you should switch the engine off and consult your CHEVROLET retailer as soon as possible.

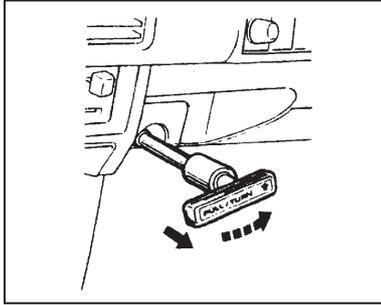


### Dash panel parking brake

To set the parking brake, pull the handle as far as possible toward you. To release, pull the handle slightly toward you, turn the lever counterclockwise, and then push it all the way forward.

#### CAUTION

*Never drive with the parking brake set as this may overheat or otherwise damage the parking brake mechanism.*

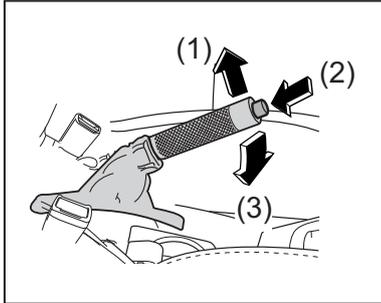

### Floor mounted parking brake

The parking brake acts on the rear wheels.

The parking brake lever is located between the front seats.


To set the parking brake, stop the vehicle, press the brake pedal and pull the lever up firmly.

To release the parking brake, press the brake pedal and

1. Pull the lever up slightly.
2. Push the button on the tip of the lever.
3. Lower the lever while holding the button in.

#### CAUTION

*Never drive with the parking brake set as this may overheat or otherwise damage the parking brake mechanism.*

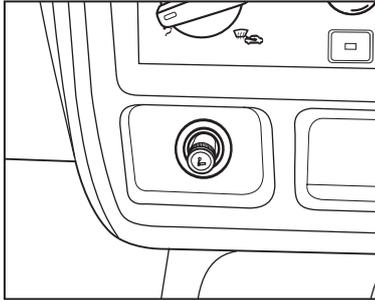

### Cigarette lighter


To operate, push the knob in and allow a few seconds for heating. The knob pops out when heated and ready for use.

#### NOTE

*If the lighter does not spring back after 18 seconds, it is not operating and must be pulled out to the normal position by hand. Trying to operate a malfunctioning lighter can be dangerous. Consult your CHEVROLET retailer.*

#### CAUTION

*The barrel of an operating cigarette lighter can become very hot. Do not touch the barrel of the cigarette lighter.*

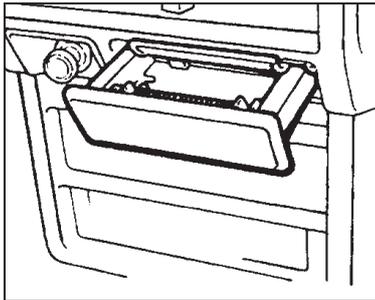


### Ash tray

#### CAUTION


*After using the ash tray, push it back in completely. If not, the flame of the cigarette may cause other cigarette butts to burn, resulting in a fire.*

Pull out to use. To clean, remove the tray by pulling it while pushing down the retainer spring.

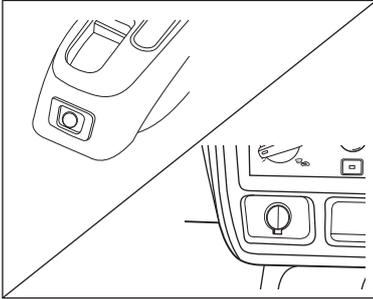

### **APO – Auxiliary Power Output**

The APO is installed on the rear side of the center console and on the front center console in selected variants.

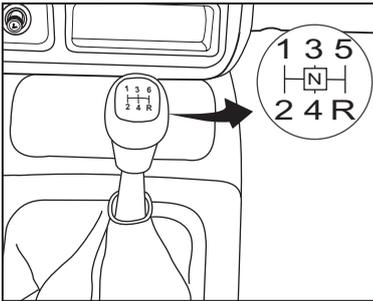


### **FLOOR CONTROLS**

#### **Transmission gearshift lever**

The transmission gearshift lever controls fully-synchronized transmission. The gearshift pattern is shown on the lever knob.


#### **NOTE**

*Allow the vehicle to stop completely before shifting into reverse, no sooner than three seconds after declutching. The back-up lights operate when shifted into reverse with the starter switch “ON”.*

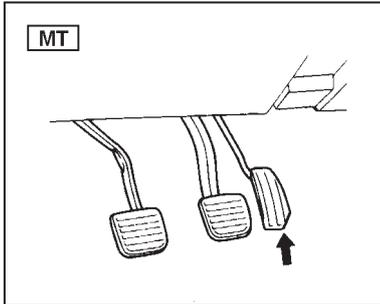

### Accelerator pedal

To avoid unnecessary increase in fuel consumption, the accelerator pedal should be operated smoothly and reasonably.

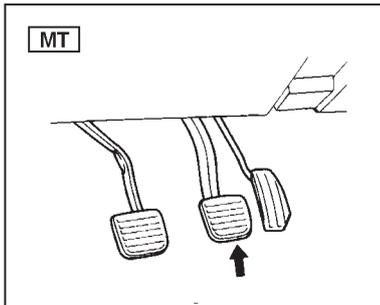

### Brake pedal

Avoid stopping hard by operating the foot brake pedal in a smooth manner. When descending a slope, it is always advisable to use the foot brake in combination with the engine braking effect.

### WARNING

*If the brake pedal can be pressed further than normal, the brakes may be in need of repairs. Consult your CHEVROLET retailer immediately.*

### NOTE

*Disc brake wear indicators:*


*Front disc brakes have built-in wear indicators which are designed to make a high pitched squealing or cricket-like warning sound when the brake lining is worn to*

---

where new linings are needed. The sound will come and go, or be heard all the time when the wheels are rolling, but may stop when the brake pedal is pushed down firmly. Extensive damage can result if the linings are not replaced when needed.


**CAUTION**

*Do not drive with your foot resting on the brake pedal.*

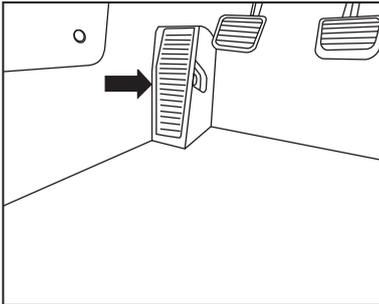

**Footrest/ Dead pedal:**

This is an additional feature for drivers comfort, driver can rest his left foot on the footrest, If the clutch not in use while driving. The footrest is ergonomically designed to give maximum comfort to the drivers foot.

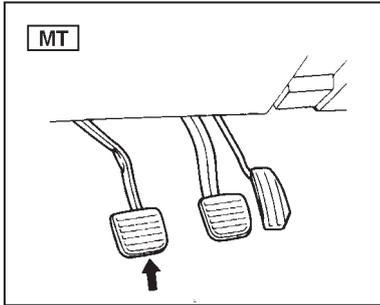


### Clutch pedal MT

The clutch pedal should be fully depressed when disengaging. Not doing so, may result in grating of the gears.

**NOTE** 


*Do not allow your foot to rest on the pedal when not using clutch.*

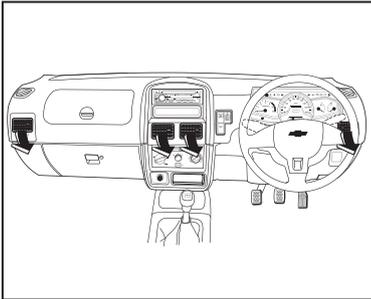

### OTHERS

#### Ventilators


A pair of center air outlets is located in the center part of the instrument panel. The side air outlets are located at each end of the instrument panel.

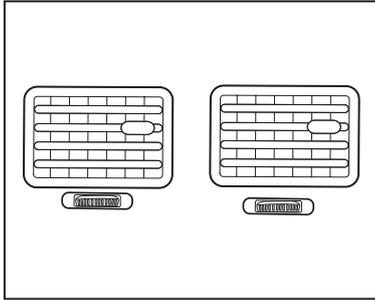

### **Center vents**

Two center vents are provided on the instrument panel.


The knob at the center part of the grille controls direction of air flow vertically and horizontally.

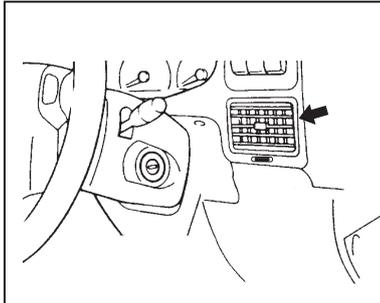

### **Side vents**

A side vent is located at each end of the instrument panel.

The knob at the center part of the grille controls direction of air flow vertically and horizontally.

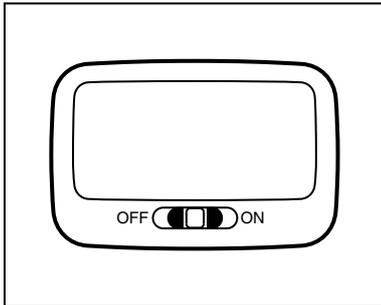

### **Dome light**


#### **Front and rear side**

The dome light is operative at any starter switch position.

“OFF” : The light stays off regardless of the door position.


“ON” : The light will turn on and stay on regardless of the door position.

When the dome light switch is at center position, the light will turn on while either\* door is opened.

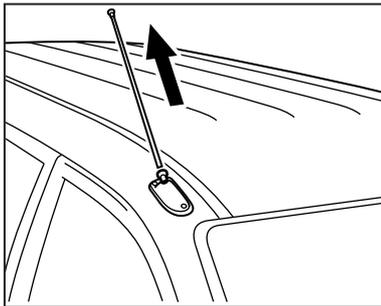

### **Antenna**

Pull out the antenna to gain sensitivity.

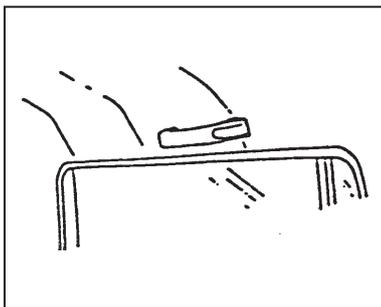

### Assist grip with coat hook

Each assist grip is attached to the roof above the side window of assist seat and rear seat. The grip above the Rear RH side door includes the coat hook.

Additional assist grips\* provided on selected variants (10 Seater) to assist occupants on driving conditions.

#### CAUTION

*Hanging items on your vehicle's assist grips can obstruct the driver's view. Do not hang anything on the assist grips. Obstructing the driver's view can lead to an accident resulting in personal injuries and damage to your vehicle and other property.*


### Radio Frequency Identification (RFID) Tag \*

This vehicle is equipped with Radio Frequency Identification (RFID) tag\*, which can be used for Electronic Toll Collection (ETC) or any other applications as decided by the Regulatory authority. The RFID tag is located on inside the windshield. Data for necessary applications will be added by the agency authorized by the Regulatory authority, from time to time. Take proper care during washing or cleaning of windshield so as to avoid any damage to the RFID tag. In case of any damage or malfunction of RFID tag, or in case of windshield replacement, contact your CHEVROLET retailer or agency authorized by the Regulatory authority for the installation of new RFID tag.

#### CAUTION

*Do not touch or peel off. Do not place any sticker or other metallic components over the RFID tag neither from inside nor from outside of the windshield. Avoid exposure to chemicals or liquid solvents. This will impair the function of RFID tag. The RFID tag is tamperproof and will not function once removed from windshield.*

## HEATER-DEFROSTER AND AIR CONDITIONING V

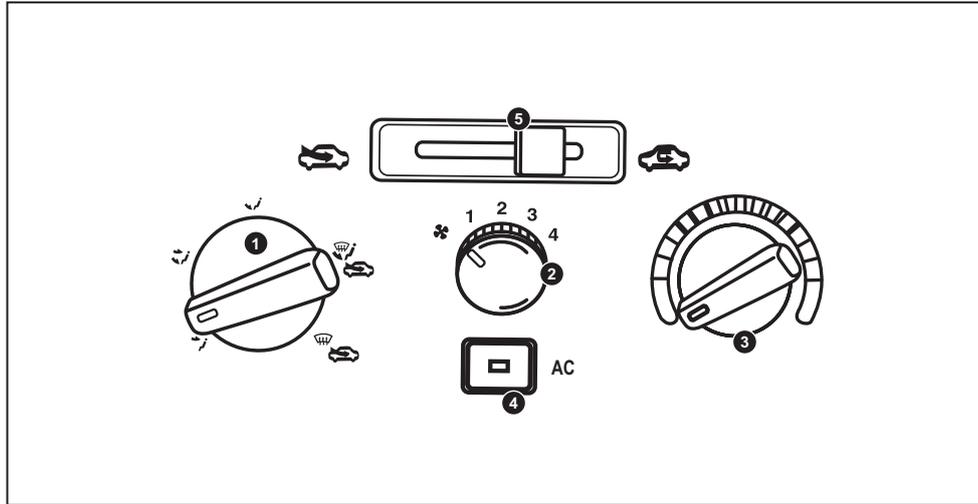


1 Air distribution mode knob

3 Temperature control knob

5 Air source select lever

2 Fan control knob


4 Air conditioning (AC) switch

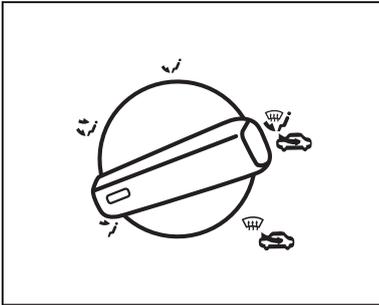

### **Air distribution mode knob**


The knob regulates air flow from the heater, defroster and air conditioning or ventilating outlets.

1. FACE OUTLET (Air to your face)
2. BI-LEVEL (Air to your face and feet)
3. FOOT OUTLET (Air to your foot)
4. FOOT OUTLET & DEFROSTER (Air to your foot and windshield)
5. DEFROSTER (Air to windshield)

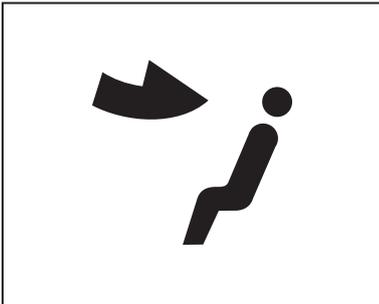


### **Face outlet**

Air is discharged from the upper outlets. This position is used for most air conditioning situations.

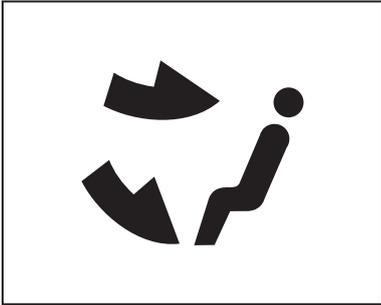

**BI-level**

Air is discharged from the upper air outlets and the floor air outlets.

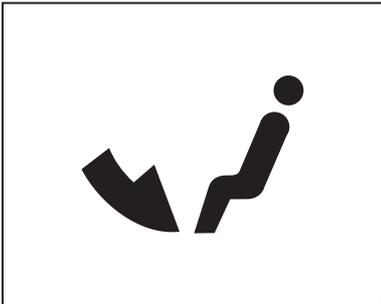


**Foot outlet**

Air is delivered from the foot outlet.



### **Foot outlet and defroster**

Air is delivered from the foot outlet with a small amount from the defroster outlets and the side window defroster outlets.

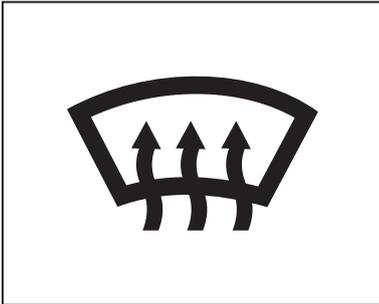

### **Defroster**

Air is delivered from the defroster outlets with a small amount delivered from the side window defroster outlets. This position is recommended for conditions of severe fogging and icing only.

**OPERATING TIPS** - The windshield defrosting and defogging system assist in providing good visibility through the critical area of the windshield under most inclement weather conditions. The windshield should be scraped clear, if coated with ice or snow.

---

To defog glass:


- Set air distribution mode knob to DEFROST. If set to FOOT/DEFROST, air will be sent to feet simultaneously with defogging. (Since airflow to glass is decreased, defogging capacity becomes lower than DEFROST).

To defog glass more quickly:

- Operate AC\* (Turn on the A/C switch).
- Increase airflow (Operate fan control knob).
- Set a higher temperature\* (Operate temperature control knob).

**NOTE**

*If air-source selector lever is set to INSIDE AIR, air can be conditioned quickly, but the glass is easy to fog. Therefore, set the lever to OUTSIDE AIR in the situation where the glass is foggy.*

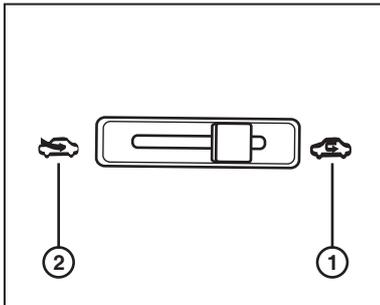


**Air source select lever**

The intake of outside air (2) and the circulation of inside air (1) is controlled by sliding this lever left or right.

**NOTE**

*Circulating only inside air for an extended period of time may cause windshield clouding. For good ventilation, switch to outside air as soon as possible.*

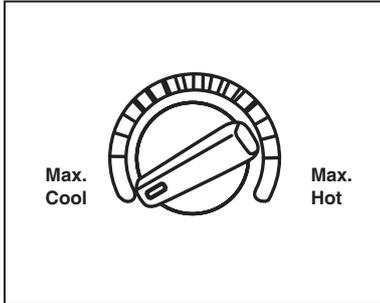


### Temperature control knob

The temperature control knob controls the temperature of the air that comes through the air vents.

Turn the knob to the blue area to get cool air and to the red area to get warm air .

### NOTE

-  Prolonged maximum heating usage may cause window fogging, which may create poor visibility. Maximum heating should be regulated and be used for a limited time.*
-  After long hours of parking under the sun, be sure to open the windows and doors to release the interior heat before starting the air conditioner (A/C).*
-  Prolonged maximum cooling usage may require changing the air intake/circulation lever to outside air intake to allow fresh air into the cabin.*
-  Sometimes mist may appear to come out of the air vents during air conditioning cooling operation, this is due to the presence of moist air in the vehicle. This is normal.*

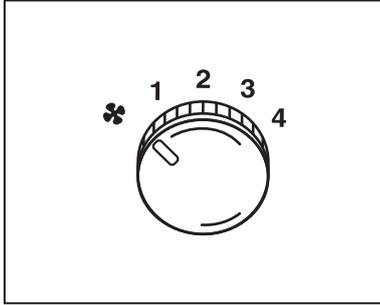


### Fan control knob

You may control the rate of airflow coming from the system by turning the fan speed control knob. Turn the knob clockwise to increase the fan speed and counterclockwise to decrease the fan speed.

Adjust the fan control knob from step 1 to step 4 as you wish.

### NOTE

-  *Long-time maximum heating may cause fogged glass and poor visibility ahead. So, please do not use maximum heating for a long time.*
-  *After long hours of parking under the blazing sun, be sure to open the windows and doors to release the interior heat before starting the air conditioner (A/C).*
-  *Long-time maximum cooling pollutes the room air. Slide the Air intake/circulation lever to intake outside air or open the windows for ventilation as required.*
-  *During cooling, the moist air is quickly cooled and it may look like mist from the air outlet. This is normal.*
-  *Even when the air conditioner is not used, periodically operate the air conditioner for several minutes with the engine idling so that the system does not run out of oil.*

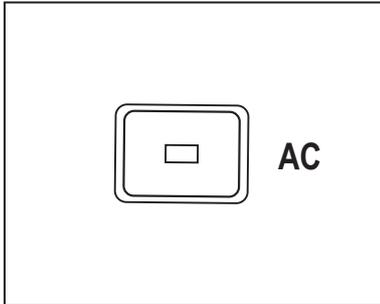

**Air conditioning (AC) switch**

Push this switch to operate the air conditioning system. The light-emitting diode in this switch lights up as the system is operating. To turn off the air conditioning push this switch in again. Air conditioning will not operate without the fan control knob in one of ON position.

---

## **WHEN REMOVING FROST AND FOG FROM THE FRONT AND SIDE GLASSES**

Turn the Air distribution mode knob to the "DEFROSTING" position.

**NOTE**


*When operating the air conditioner with the Air distribution mode knob set to the "DEFROSTING" position, do not set the air conditioner to the "MAXIMUM COOLING" position. Otherwise the outside of the glass could fog and cause poor visibility ahead.*

## **QUICK DEFROSTING MEASURE**

Turn the temperature control knob clockwise until it stops. Turn the Air distribution mode knob to the "DEFROSTING" position. Slide the Air intake/circulation changeover lever to circulate air.

**NOTE**

*Continuous defrosting operation in the circulation status may cause fogged glass and poor visibility. On completion of defrosting, be sure to change to the air intake status.*

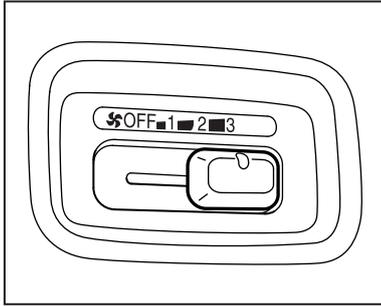


### Rear cooler control lever

By sliding this lever, cool air is delivered from the cooler outlets, when the AC & Blower switch is in ON position. Air flow can be controlled in 3 steps.

**NOTE**


*The rear cooler operates only when the front cooler is in operation. The switch is located on the center of duct.*

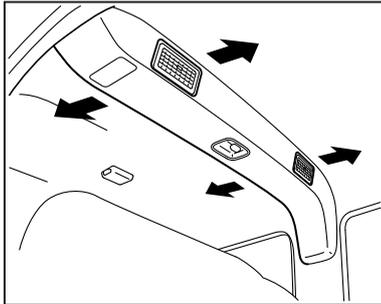

### Rear cooler vent

Rear cooler delivers air from the vents at the ceiling.


The knob at the center part of the grille controls direction of air flow vertically and horizontally.

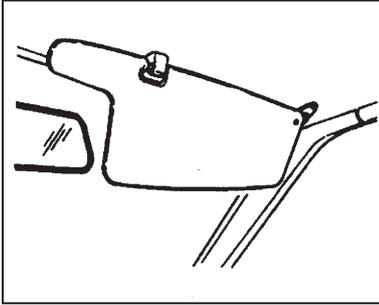

### **Sun Visors**



Your vehicle is equipped with sun visors to protect the driver and passenger\* from glare.

You can swing the sun visors up and down, and to the side.

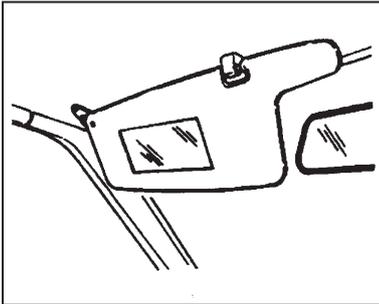

### **Vanity Mirror**

The vanity mirror has been provided on the back of co-driver sun visor.

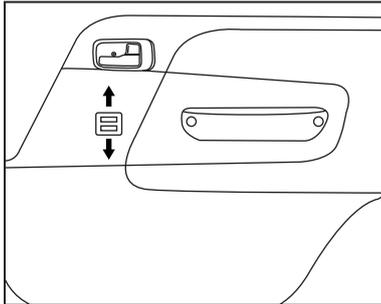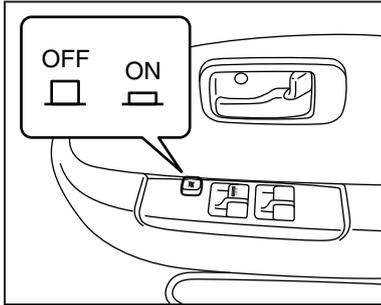

### Power window

Windows on either side of the vehicle can be opened or closed with the switch at the driver's side. The windows operate only when the starter switch is "ON". To open any of the passenger's windows, push down on the switch and hold it down until the window reaches the desired position.

To close the window, pull back on the switch. Release the switch when the window reaches to the position you want.

AUTO\* - To open the driver's window fully, push the switch firmly down till a click is heard and release it.


When the lock switch of driver's side is in "ON" position the passengers' window control switch can not be operated even from driver's side. Press the lock switch once again, and the power window will be unlocked.

The window on the passenger side can also be controlled with the switch on the passenger side.

---

## WARNING

- *To assure the safety of children and others, make sure that all passengers have their hands, etc. inside the vehicle before opening and closing the windows.*
- *Remove the key when leaving the vehicle to avoid unintentional window operation by children.*
- *Make sure the door lock switch is in the “ON” position (depressed) when children are in the vehicle.*

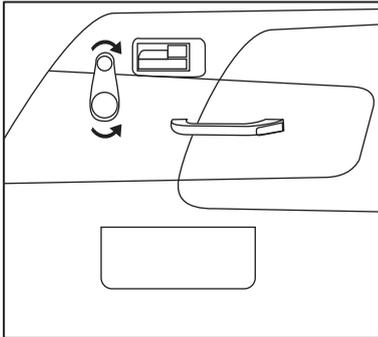


### Regulator handle

Turn the window regulator handle to raise or lower the door window.

## WARNING

*Unattended vehicle with open windows can assist car crime. Close all windows when leaving vehicle.*

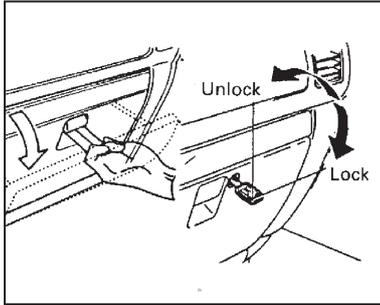

### Glove compartment


The glove compartment is located on the passenger's side end of the instrument panel.

To lock : Insert the key and turn it clockwise 90 degrees.

To open : Insert the key and turn it counterclockwise 90 degrees. If the glove compartment is not locked (simply closed), it can be opened by pulling the handle.


### CAUTION


*In the case of a collision or a sudden stop, an open glove box presents a hazard.  
Do not drive with glove box open.*

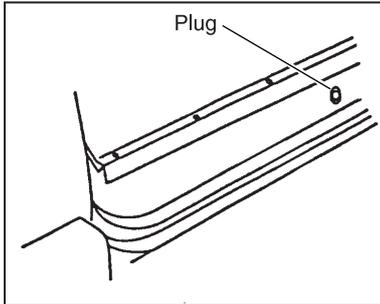

### **Spare wheel hanger**

The spare wheel is secured to the rear part of the chassis frame by chain. To lower the spare wheel, open the back door and take out the plug. Then insert the handle into the hole in the rear face of the vehicle to engage the catch and turn the handle counterclockwise. To raise, turn the handle clockwise until it stops, then give an additional turn to securely hold the spare wheel in position. Please see "In case of emergency" about tool location.

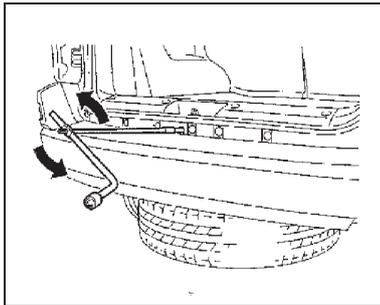


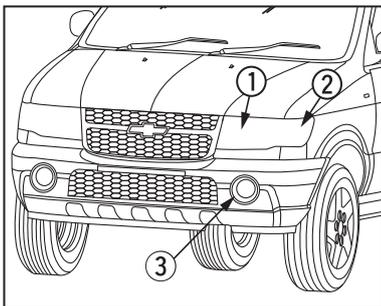

### External lights


Front side

- 1 Headlights and clearance lights
- 2 Front turn signal lights
- 3 Fog lights

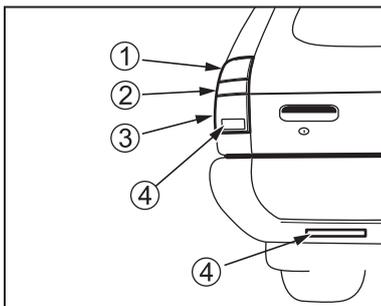


### Rear side

- 1 Turn signal lights
- 2 Back up lights
- 3 Tail and stop lights
- 4 Reflector

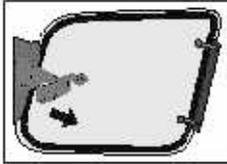


## Tilt Quarter Window **V**


1. Pull the handle inwards to unlock the window.

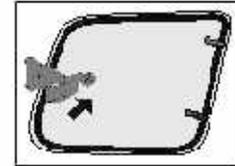


2. Push the handle outwards to open the window.

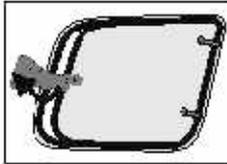


3. To hold the window in the open position, secure the handle in lock position by pushing it in the direction as shown.

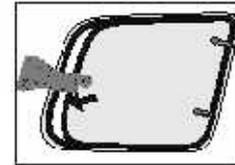

4. For closing the window, un secure the handle and pull the handle inwards to close the window.

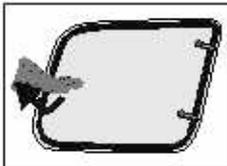


5. To lock the window in closed position, press the handle till the click sound is heard.

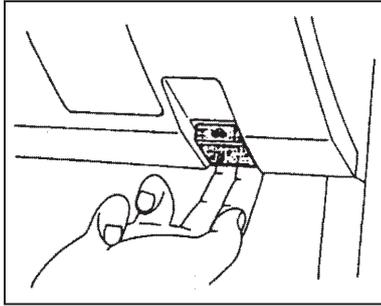

### **Engine hood release lever**

To raise the engine hood, unlock the hood lock by pulling the release lever under the instrument panel on the driver's side and unlock the safety catch under the engine hood. Raise the hood all the way up.

To make the hood stay in position, be sure the support rod end engages in the hole in the hood reinforcement. To close, remove the support rod end from the hole in the hood reinforcement and put the support rod back into the clip on the deflector panel. Then lower the engine hood, allowing it to drop from a height. Make sure the hood is locked firmly in place.

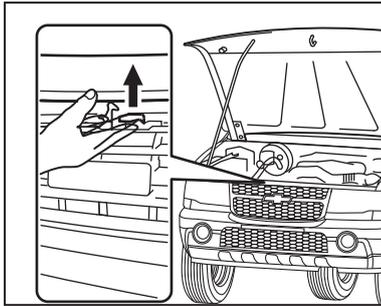


### **WARNING**

*Pull on the front edge of the hood to make sure it is latched securely before you drive your vehicle.*

*Do not pull the hood release handle while your vehicle is moving.*

*Do not move your vehicle with the hood open. An open hood will obscure the driver's vision.*

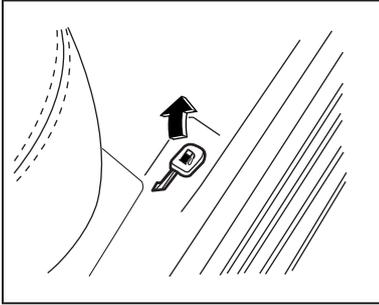

### Fuel tank filler cap

The vehicle is equipped with a fuel door release mechanism.


Pull up on fuel filler door release lever located on the floor, right front side of driver's seat. Turn the fuel filler cap counter clockwise to open the fuel filler cap.

To close the filler cap, turn clockwise until a clicking sound is heard (at least 3 clicks)

**NOTE**

*Diesel engine:*

*Use diesel fuel at 48 cetane rating or higher.*

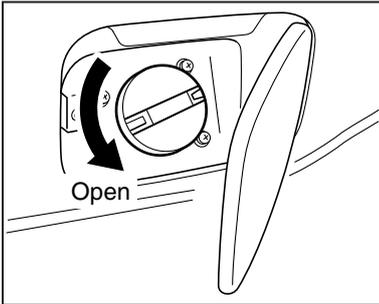

---

## BEFORE DRIVING YOUR VEHICLE

### OPERATION OF CONTROLS



#### Key

Two keys are provided with your new CHEVROLET. The key number is stamped on the key number plate. Record the key number and keep it in a safe place such as your wallet.

NOT IN THE VEHICLE.

\_\_\_\_\_ **NOTE** \_\_\_\_\_

*In the event the master keys are lost, duplicates can be made by your CHEVROLET retailer using the key code information.*

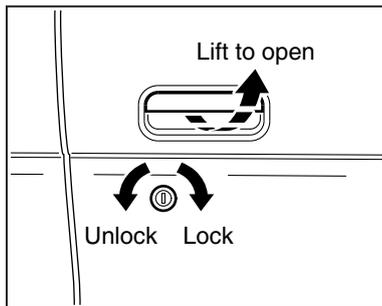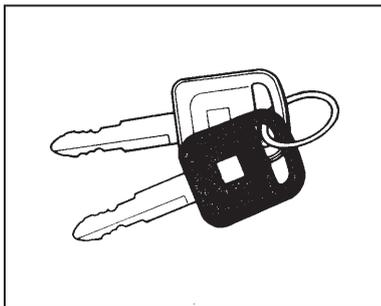


#### Outside door handle/Door lock (outside)

The door can be opened by pulling the outside door handle. It can be locked by inserting the starter key in the door lock and turning it.

\_\_\_\_\_ **NOTE** \_\_\_\_\_

Be careful not to lock your keys in the vehicle.

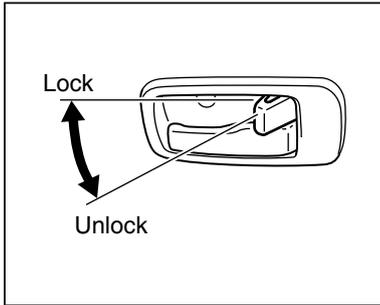


### Inside door handle/Door lock (inside)

The door can be opened by pulling the inside door lock lever.

The door can be locked by pushing in the door lock knob after closing it.

### NOTE

*Before driving, be sure that the doors are closed and locked, especially when young children are in the vehicle.*

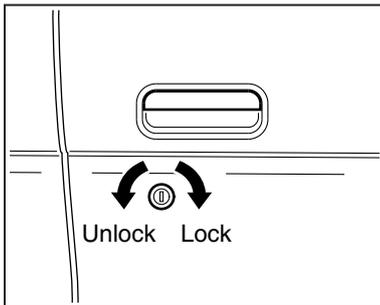


### Power door locks

Power door locks on all vehicle doors can be controlled from the driver's seat with the door lock knob. This knob operates independently of the starter switch position.

### Locking and unlocking the power lock doors from the outside


Insert the key in the driver's door key cylinder. Turn the key clockwise to lock all the doors and counterclockwise to unlock them.

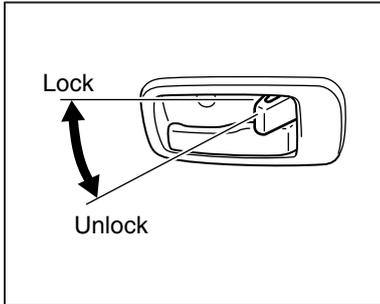

### **Locking and unlocking the power lock doors from the inside**

Push the driver's side door lock to lock all the vehicle doors and pull to unlock them.


Individual door locks can also be locked or unlocked by the passengers' side.

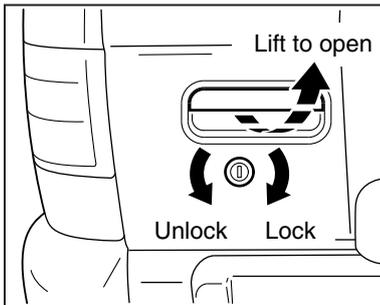

### **Back door**


The back door can be opened by pulling the outside door handle.

Door can be locked by inserting the starter key into the back door and turning it.

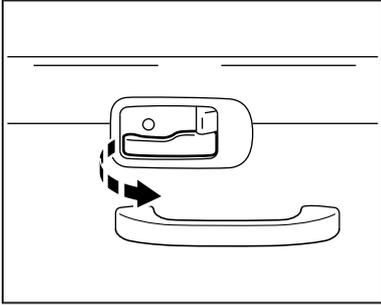

**Back door inner handle**

The back door can be opened by pulling the back door inner handle.

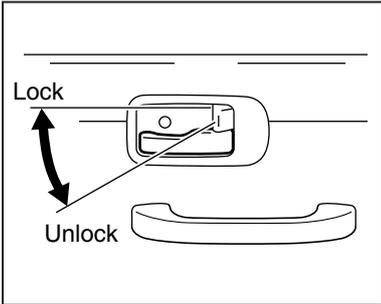


**Back door lock (Inside)**

The back door can be locked by pushing in the door lock knob after closing it.

**NOTE**


*Before driving, make sure that the door is closed and locked, especially when young children are in the vehicle.*

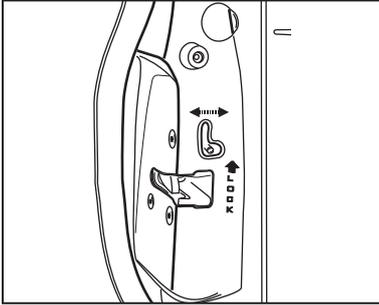

### **Child-proof door locks**

Rear doors can be locked by closing the door with the child-proof lever pushed towards arrow. Rear doors can not be opened from inside regardless of the position of the lock button.

To unlock the child-proof lock, open the door from the outside and slide lever away from the arrow.

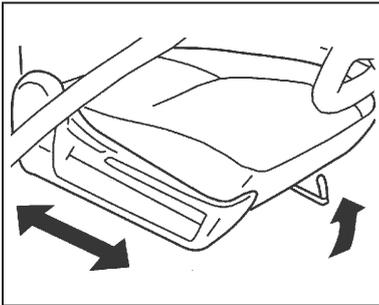

### **Driver's seat**

#### **Seat adjuster**

The driver's seat can be moved forward or backward for your comfort.

Pull the seat adjuster at the front lower part of the seat upward, so that the seat can be moved forward or backward as desired.

After adjusting the seat position, push the seat forward and backward to make sure the seat adjuster has latched.

### **WARNING**

*Do not adjust the driver's seat while the vehicle is moving.*

*The movement of the seat could cause the driver to lose control of the vehicle.*



### **Captain seat's with arm rest - Front and second row seat's only**

#### **Seat slide adjustment**

To move the seat forward or backward :

1. Pull up and hold the lever located under the front lower part of the seat.
2. Slide the seat to the desired position.
3. Release the lever.




#### **Seat reclining adjustment**

To tilt seat back or forward, lift the adjust lever on the door side of the seat cushion until seat back is adjusted to the desired position.



#### **Seat lumbar support**

To adjust the seat lumbar support, turn the lever on the door side of the seatback up or down until the desired support is achieved.

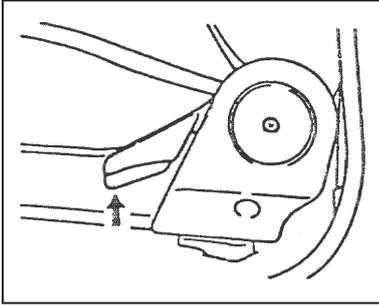


### Seat back

Front seat back inclination angle can be adjusted by raising the adjust lever on door side of seat.

### WARNING

- *To reduce the risk of injury and to ensure maximum seat belt effectiveness during a collision or a sudden stop, the seat should not be reclined any more than needed for comfort. The seatback and seat belts work best only when the occupant is sitting well back and straight up in seat. If the seat is reclined, you may slide under the lap belt, causing force to be applied to your abdomen, or you may not be fully restrained, depending on the nature of the accident, increasing the likelihood of injuries.*
- *Do not adjust the driver's seatback while the vehicle is in motion. The seatback could move unexpectedly and cause the driver to lose control of the vehicle.*

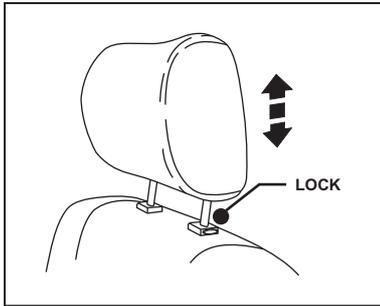

## Head restraint

### Height adjustment

The head restraints are adjusted for height. You need both hands to adjust the restraint. Press the release button and move the restraint up and down, so that your head is nearly centered on the head restraint.

### WARNING

- *Do not attempt to adjust the driver's head restraint while the vehicle is in motion, because it could cause a loss of control of the vehicle.*
- *Do not operate the vehicle with the head restraint removed, since it will increase the risk of neck injury in the event of an accident.*




### Folding type second seat


#### Folding the second seat

The second seat can be folded forward to provide additional luggage space.

1. Pull any of the lever upward on the either side of backrest and fold the seat back forward.

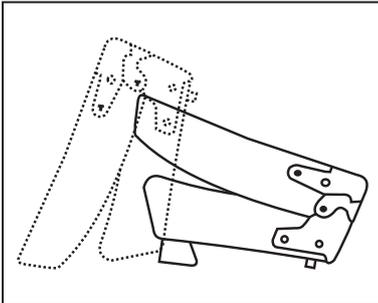

2. Lift the entire seat and push it forward.

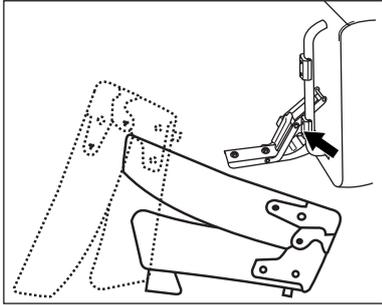


### Folding type second seat

#### Unfolding the second seat

1. Lift the entire seat. Some variants require pulling of lever as illustrated.
2. Raise the seat back.


#### CAUTION

*Ensure that the latch area is clear of any objects.*

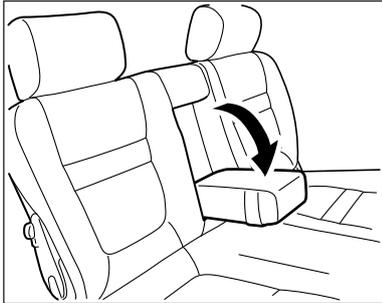

### Center armrest


The center armrest can be pulled out when there are only 1 or 2 second row seat passenger.

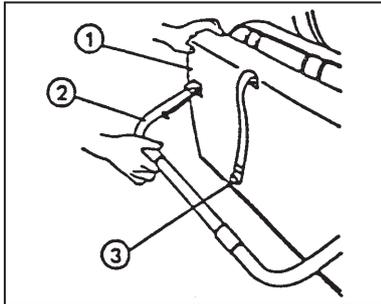

### Folding type jump seat


Folding the jump seat

1. Tilt seat cushion (1) upward.
2. Tilt seat trigger (2) downward.
3. Secure the seat lock strap (3) to the seat back mounted hook.

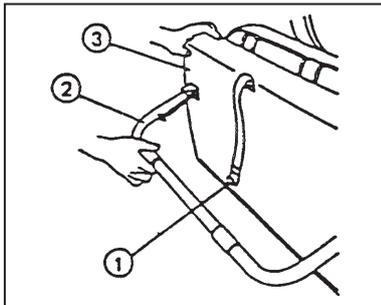

Unfolding the jump seat

1. Raise the seat trigger (2).
2. Release the seat lock strap (1) from the hook and fix the strap to the seat cushion.
3. Lower the seat cushion (3).

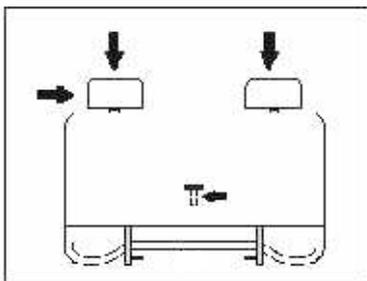


### Folding type third seat


Folding the third seat

The third seat can be folded forward to provide additional luggage space.


1. Press the head rest sleeve knob to push the head rest down.
2. Pull the Strap (Black colour) down provide on the rear side of the back seat.

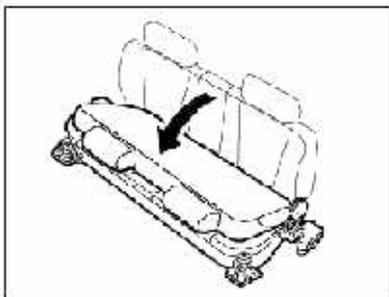

3. Fold the seat back rest forward.

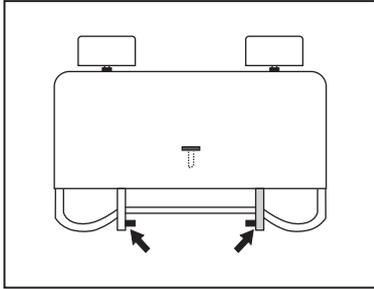


4. Pull the seat latch lever towards your side to detach the seat latch.
5. Lift the entire seat with rod and push the seat assembly forward.

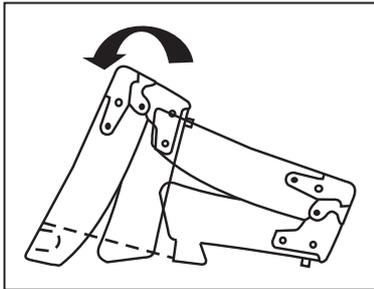


**CAUTION**

*Do not use seat latch lever to lift the seat.*

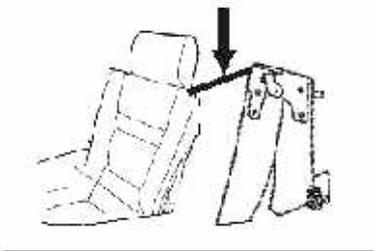


6. Attach the band (with hook) provided below the third seat to clasp on to the head rest of the second seat back.

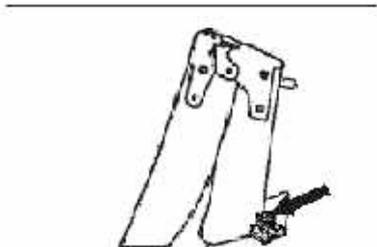

#### **Removing the third seat**

To remove the seat assembly, rotate the wheel knob in anti clockwise direction and pull the seat out.


The seat can be put back and tighten with the wheel knob in clockwise direction.

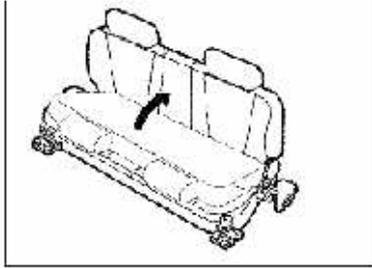

### Folding type third seat

#### Unfolding the third seat

1. Remove the clasp band from the headrest rod of the second seat back.
2. Lower the third seat, then raise the seat back.

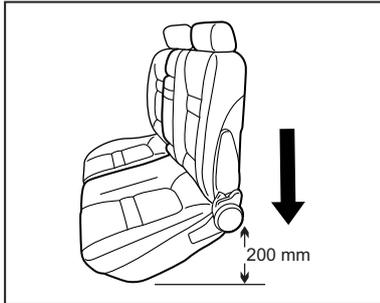

3. Drop the seat assembly from height of about 200mm with backrest straight.
4. Confirm proper locking of the seat latch and push the latch lever inside.

#### **CAUTION**

*Ensure that the latch area is clear of any objects.*




### Front seat and rear seat lap/shoulder belts

The front seat is equipped with a 3-point seat belt which features one buckle for the lap and shoulder belt.

How to use the belt system properly in your vehicle is as follows:


1. Adjust the front seat as needed and sit straight up and well back in the seat.
2. Take hold of the seat belt latch plate (L) and pull the lap/shoulder belt across the body, and slide the latch plate along the belt until it reaches the buckle (B). Push the latch plate into the buckle until it clicks.

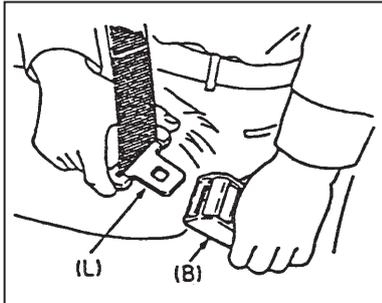

### WARNING

*A low, and snug position is essential in order that force exerted by the lap belt in a collision will be spread over the strong hip bone structure and not across the abdominal area, which in an accident could result in serious injury.*

(Continued)

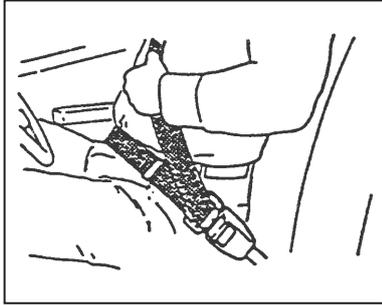

*(Continued)*


*Position the lap portion of the belt across the lap by the hips as low as possible. Then adjust to a snug fit by holding the shoulder portion of the front seat belt and pulling it upward through the latch plate, until the lap portion is snug across the lap. This reduces the risk of sliding under the belt during an accident.*



### **WARNING**

*To lessen the chance of injury in the event of an accident, never use the same belt for more than one person at a time and make sure to avoid twisting the belts. Avoid getting the belt pinched between the seat structural (metallic) members or in the door.*


*(Continued)*

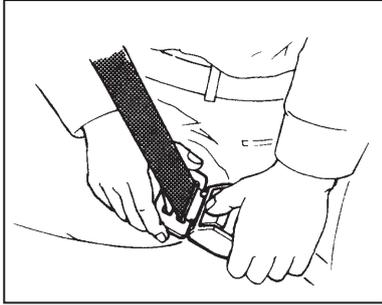

*(Continued)*

*The shoulder portion of the front seat belt has an “Emergency locking retractor” which is designed to lock during a sudden stop or impact. At other times, it is designed to move freely with the seat occupant. To unfasten the belts, push in the center of the buckle.*


*When not in use, seat belts can be stowed by letting them rewind in their retractors. If needed, move the keeper along the belt to let the belt retract fully. This will also put the latch plate within easy reach on the door pillar.*

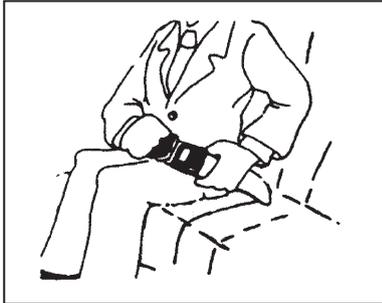

### **Lap belts**


Bring the latch plate adjuster across your body and clip it into the buckle. When this is done correctly you will hear a “click”.

Adjust the belt length by pulling the belt end. Make sure the belts are fitted firmly across your waist.

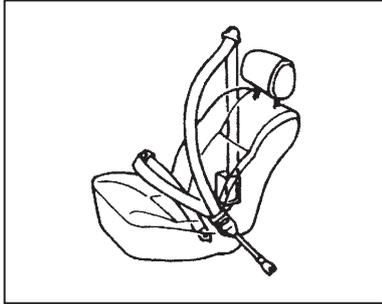

### **Seat belt inspection and care**


- Periodically inspect belts, buckles, latch plates, retractors, and anchors for damage that could lessen the effectiveness of the restraint system.
- Keep sharp edges and damaging objects away from belts.
- Replace belts if cut, weakened, frayed, or subjected to collision loads.
- Check that anchor mounting bolts are tightly fastened to the floor.
- Have questionable parts replaced.
- Keep seat belts clean and dry.
- Clean only with mild soap solution and lukewarm water.
- Do not bleach or dye belts since this may weaken belts.

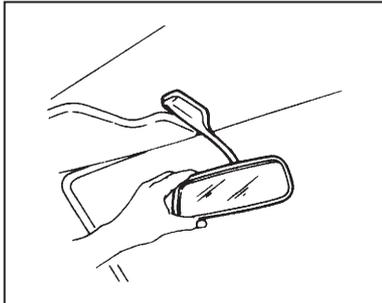

### **Mirrors**

#### **Inside rearview mirror**


To adjust move the mirror right or left and up or down.

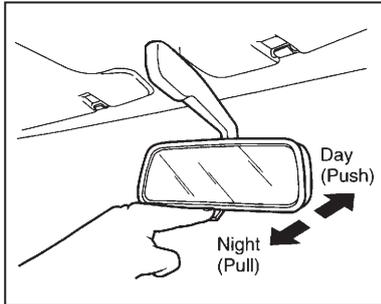

### **Inside rearview mirror: day and night**


To adjust, move the mirror right or left and up or down.

Switch the mirror to the night operation position to reduce the glare from following headlights.

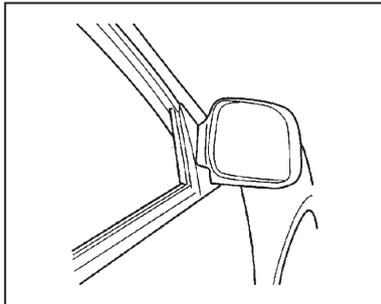

### **Outside rearview mirror**

Adjust the outside rear view mirrors so that you can see the each side of your vehicle in the portion of the mirror closest to your vehicle. This helps you to determine your position relative to objects seen in the mirror.

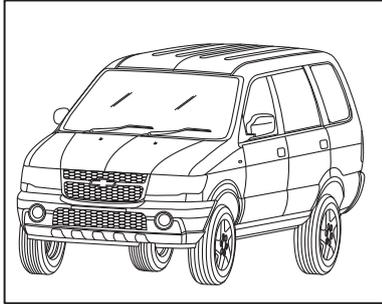


**DRIVER'S CHECK LIST  
(REGULAR INSPECTION)**

The following checks should be performed to maintain safe and dependable vehicle operation. If any abnormal condition of the vehicle is found, consult your nearest CHEVROLET retailer.


**NOTE**

*Refer to "MAINTENANCE GUIDE" for proper check-up procedures.*

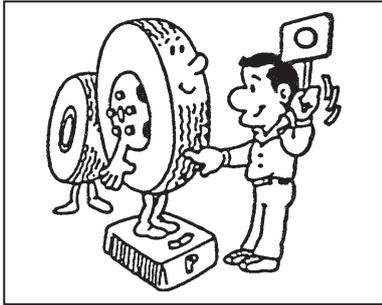


### Exterior

1. Check tires for inflation pressure and damage.

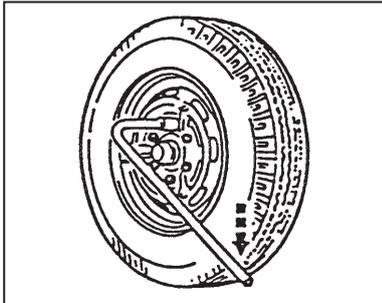


2. Check wheel nuts for looseness.

Wheel nut torque: 118N·m

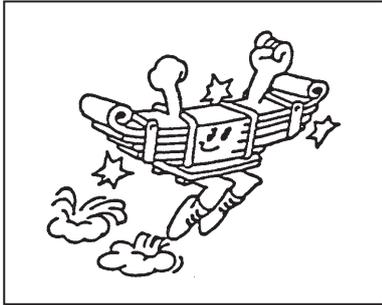


3. Check chassis springs for damage.

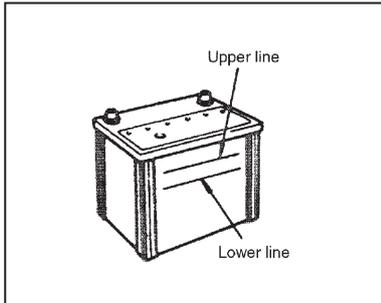


4. Check operation of lights.


5. Check level of electrolyte in each cell of the battery.  
Not required in vehicles fitted with maintenance free batteries.

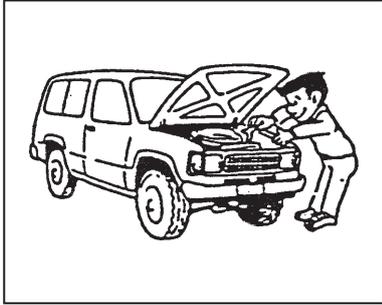


6. Check for any oil, water, fuel and brake fluid leakage.

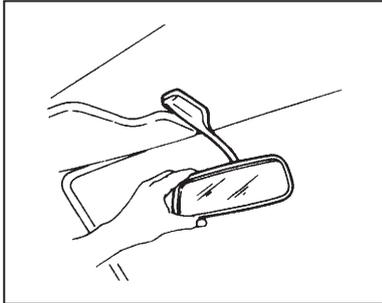


7. Check the setting angle of the rearview mirrors.

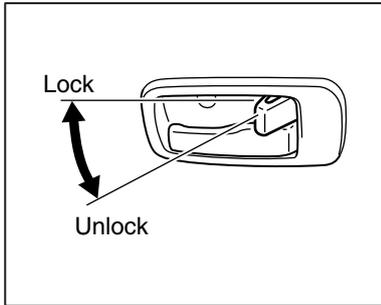

8. Check operation of the door locking mechanism.

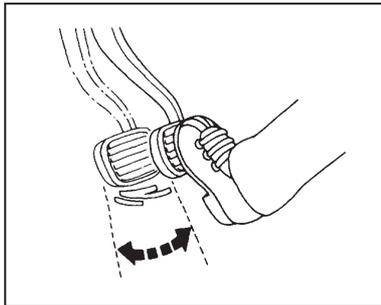


9. Check clutch pedal free play, height and function.

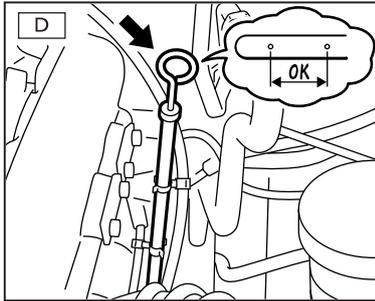


**Within engine compartment**


1. Check engine oil level.

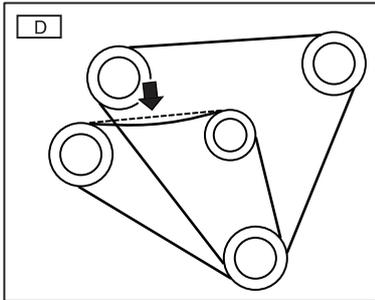


2. Check accessory drive belt / fan belt tension.

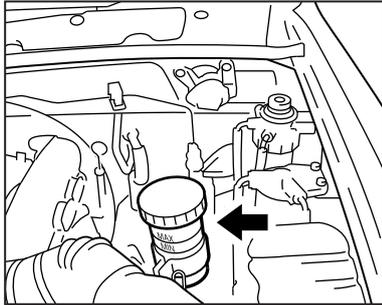


3. Check that the level of the power steering fluid is within “MAX” and “MIN” level. PS

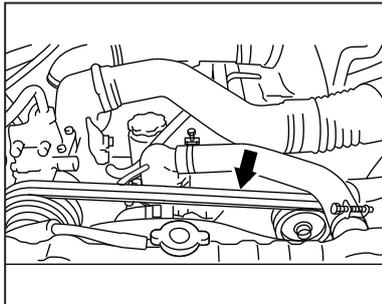


4. Check the tension of power steering pump drive belt.

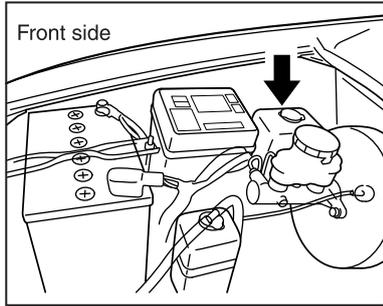

5. Check that the level of the windshield washer solution in reservoir tank is within "MAX" and "MIN" level.

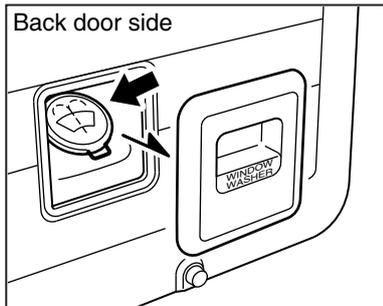


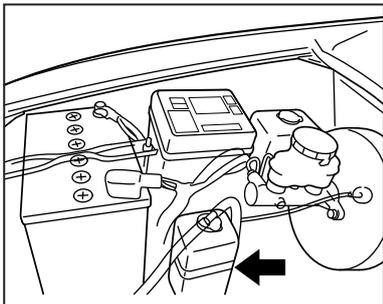


6. Check that the level of the engine coolant in reservoir tank is within "MAX" and "MIN" level.

**WARNING**

*Coolant level check or replenishment should be made at the reservoir tank and the radiator filler cap should not be removed unless necessary.*

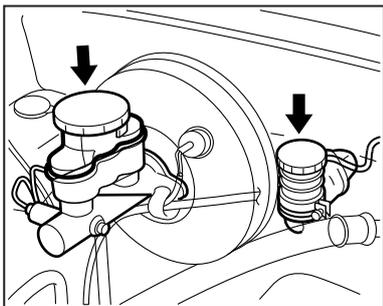


7. Check that the level of brake and clutch (MT) fluid in the reservoir is within "MAX" and "MIN" level.

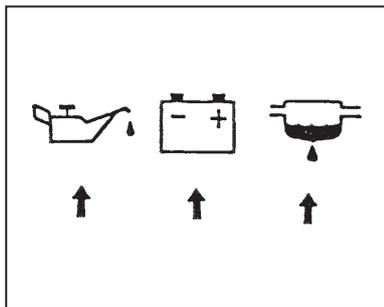

### After starting engine

1. With the engine running, check that oil pressure indicator light, generator indicator light and water separator indicator light go off and remain off.

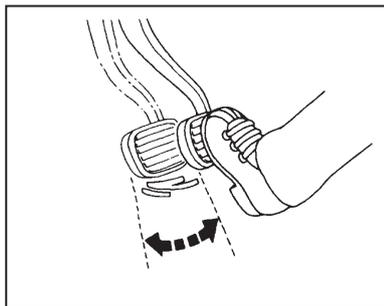

2. Check brake pedal free play, height and function.




3. Check for abnormal engine noise and color of exhaust gases.

---


## DRIVING

Proper care and operation will not only extend the life of your vehicle but also improve oil and fuel economy

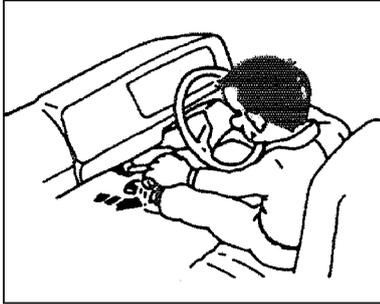

### PREPARATION FOR STARTING ENGINE

1. Set the parking brake firmly.
2. Place the transmission in neutral.

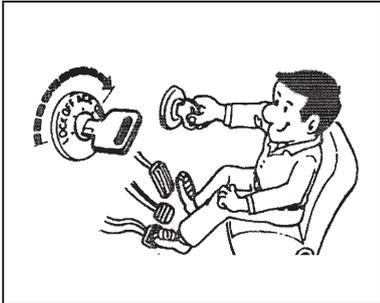

### STARTING ENGINE

1. Turn the key to "ON." See if the oil pressure indicator light, generator indicator light, brake system indicator light and water separator indicator light comes on.

#### CAUTION

*Do not leave the key in the ACC or ON position for extended periods while the engine is not running . This will discharge the battery.*

*Do not turn the key to OFF or LOCK position while driving . Driver could lose control of vehicle and brake power assistance would be cancelled, causing vehicle damage, personal injury or possibly death.*



2. Crank up the engine by turning the starter switch key fully clockwise. Release the key as soon as the engine starts. The key will return automatically to "ON."


#### CAUTION

*Do not keep the starter engaged for more than 30 seconds at a time. If the starter is operated repeatedly, but the engine does not start, check the fuel system and electrical system. During repeated cranking, it is absolutely necessary to have brief periods of recovery time (about 30 seconds) to conserve the battery.*

3. After starting the engine, let it run for about 1 to 2 minutes with idle speed (avoid acceleration or driving off the vehicle) . This allows oil to circulate and lubricate the turbocharger. Then depress the accelerator pedal part way down.


#### NOTE

*At low ambient temperature or when the vehicle has not been used for a long period, normal engine oil pressure and flow is affected. Under these conditions the engine should be started and allowed to idle for a few minutes before operating at higher rpm.*

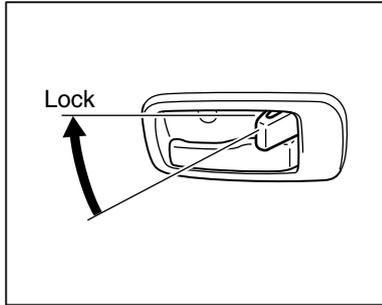


## BEFORE DRIVING OFF


1. Lock the doors.

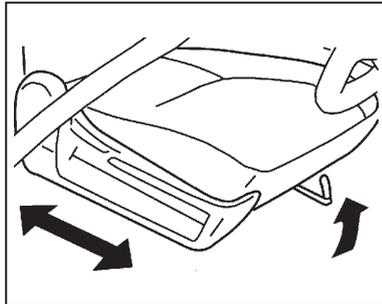


2. Adjust the seat position.

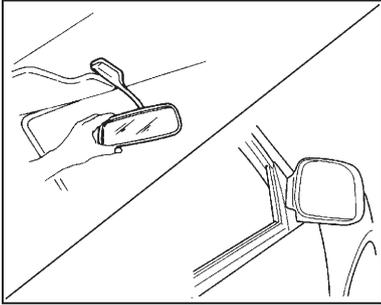

3. Adjust the inside and outside mirrors.

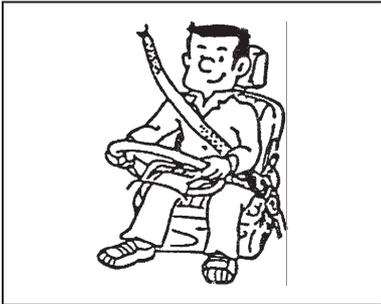


4. Fasten the seat belt.

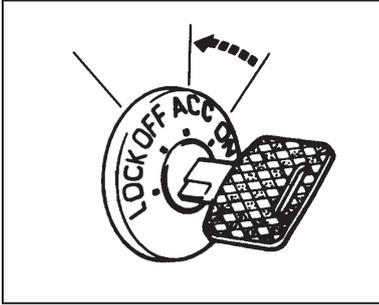

## STOPPING ENGINE

Turn the starter switch to the “ACC” or “OFF” position.

Your vehicle is powered by a turbo diesel engine. Before turning the engine OFF, allow the engine to run for about 1 to 2 minutes at idle speed.

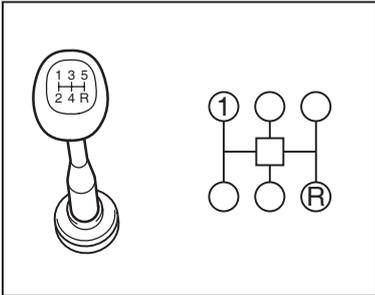

## PARKING

When leaving your vehicle unattended:

- Set the parking brake.
- When parking a vehicle equipped with a manual transmission on an upward slope, place the shift lever in the “1st” position.
- When parking a vehicle equipped with a manual transmission on a downward slope, place the shift lever in the “R” (Reverse) position.
- Turn the ignition switch to the “LOCK” position.
- Remove the key.
- Close all windows and lock all doors.
- Check to make certain lights are turned off.


---

## WARNING

*Do not park your vehicle over combustible materials, such as dry grass or leaves. They could touch the hot exhaust system and ignite.*

## CAUTION

*Do not leave your vehicle unattended with the engine running. If the engine might overheat, you would not be there to react to the temperature warning light or gauge. This could result in costly damage to your vehicle and its contents.*

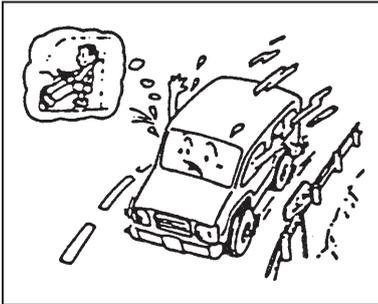

## DRIVING PRECAUTIONS


1. Avoid over-running the engine.  
When descending a slope pay close attention to prevent engine over-running, particularly when down shifting, as the engine becomes liable to over-run.




2. If abnormal noise or smell becomes noticeable while driving, stop the engine and check to locate the cause of trouble.




3. If the indicator lights or instruments give an indication of abnormal condition while driving, stop the engine and check to locate the cause of trouble.

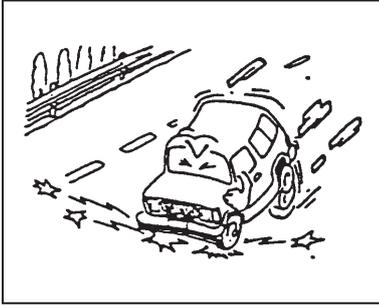

4. Avoid needless hard acceleration and hard stops.

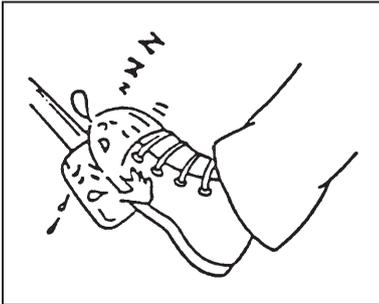

5. Do not drive with your foot resting on the clutch pedal as it produces a partly disengaged condition, causing premature wear of clutch facing.

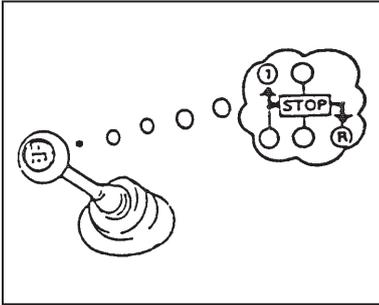


6. Allow the vehicle to stop completely before shifting to reverse or to first gear after reversing.


When starting the vehicle from rest, it is always advisable to use 1st gear not only on slopes but also paved roads.




7. When climbing a slope, shift to a lower gear to relieve the engine from overload before engine begins to strain.

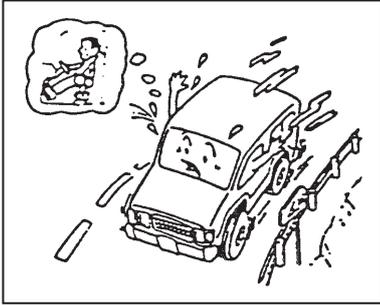

8. When descending a slope, shift to a lower gear to gain retardation effect of the engine.

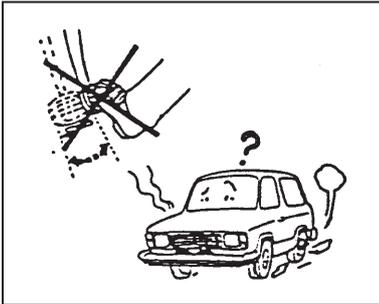


9. Repeated use of the foot brake on a long downgrade will cause the brakes to lose their effectiveness.

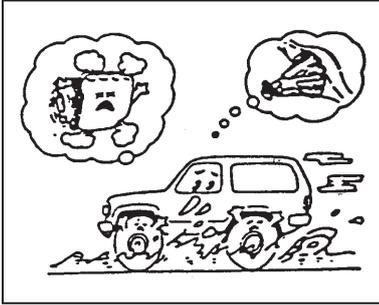

10. When driving across a shallow river or patch of water, extreme care must be exercised or water may enter the air duct causing serious engine damage. After driving across water, check gear oil in rear axle, and transmission case for presence of water. If any water is present, drain and refill with the specified oil.




11. Drive carefully after running in heavy rain or driving across a shallow river as wet brakes cause temporary reduction in brake force.

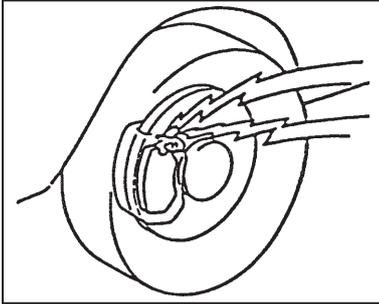

#### 12. Front disk brake wear indicators


The brakes are provided with wear indicator device which produces a metallic frictional sound (squeal) while driving when the brake pads or linings have worn down near to the serviceable limit.

If such a sound is produced, have the brake pads or linings replaced at your CHEVROLET retailer.

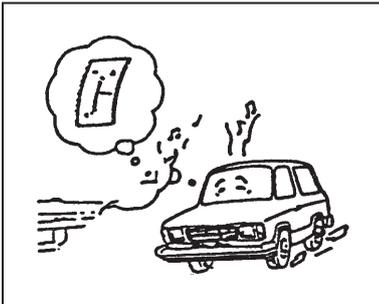


#### **DRIVING FOR ECONOMY** MT

1. Needless high-speed driving and slow driving in high gears will result in excessive fuel consumption.

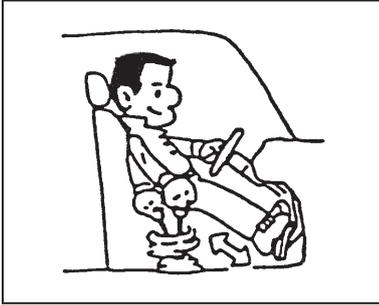

2. After accelerating, shift to a higher gear and engage the clutch smoothly.

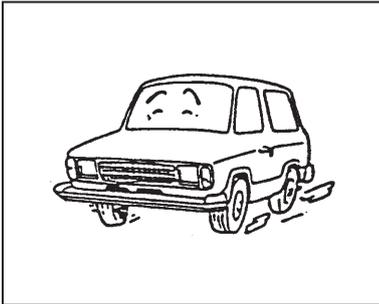


3. After shifting to top or overdrive, maintain your speed constant as possible.



4. Always drive with the coolant temperature within the normal range.




5. Under-inflated tires cause deterioration in fuel economy.

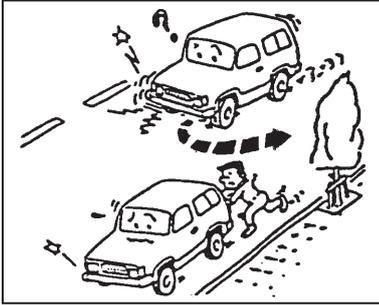


## IN CASE OF EMERGENCY

### Emergency stop

1. If you must stop your vehicle on the road for some reason, pull your vehicle over to the left side of the road as far as possible and try not to park in a driving lane.

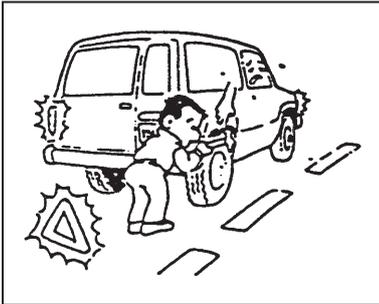


2. Make certain to apply the parking brake and use hazard warning lights, day or night.

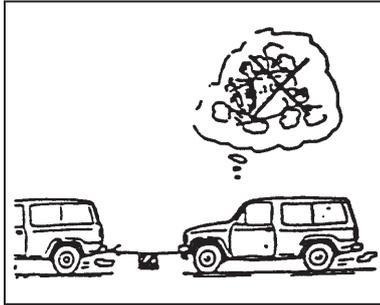

### Emergency starting

#### WARNING

*Never tow the vehicle to start the engine because when the engine starts it could cause a collision with the towing vehicle.*

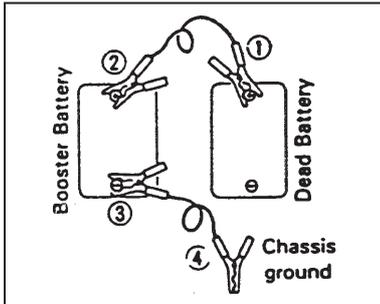

#### WARNING

*Exercise extreme care when handling the battery to avoid serious personal injury and damage to your vehicle which might result from battery explosion, acid burns, electrical burns, or damaged electric components.*

Start the engine using the battery of the other vehicle through the booster cable, following the next steps:


1. Make sure that the other vehicle uses the same voltage (12V).
2. Connect the booster cable as shown in the illustration.
3. Start the engine on the other vehicle.

- 
4. Increase the idling speed of the engine on the other vehicle a little and start the engine on the damaged vehicle.
  5. If the engine starts, disconnect the cable following the above procedure in reverse.

### CAUTION

*Never connect the cable between the positive and negative terminals.*

*Do not remove the battery cables from the terminals while the engine is running. It may result in troubles in the electrical system.*

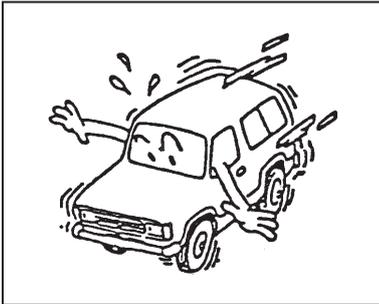

### Power brake system


- \* If the power assist is lost because of a stalled engine or other reasons, the brakes can normally still be applied with the power assist at least one time by using reserve vacuum.
- \* The system is designed to bring the vehicle to a full stop on reserve vacuum if the brake pedal is applied once and held down. However, the reserve vacuum is partly used up each time the brake pedal is applied and released.

(Continued)

## WARNING

*Do not pump the brakes when the power assist has been lost, except when necessary to maintain steering control on slippery surfaces.*

- \* Without the power assist, the vehicle can still be stopped by pushing harder on the brake pedal. However, the stopping distance may be longer, even though the brakes themselves remain fully operational.

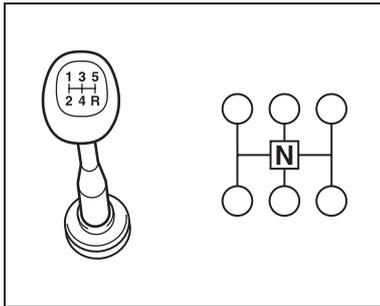


## Towing

Proper equipment must be used to prevent damage to vehicles during any towing. When towing, the driveline, axle, transmission and steering system must be in operating condition. Use only towing equipment specifically designed for this purpose, following the instructions of the equipment manufacturer. A separate safety chain must be used. For towing the vehicle, the parking brake must be released, the transmission placed in neutral and the key turned to the “OFF” position. Attachment must be made to the front tow hook only.

## CAUTION

*Do not attach to bumpers or associated brackets. Remember that the power brake assist will not be available when the engine is inoperative.*

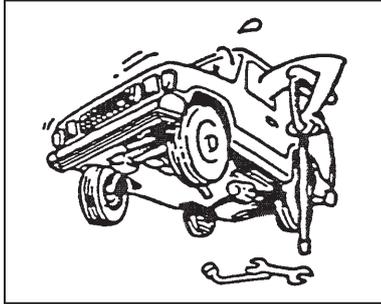

### Front wheels off the ground

1. Transmission in Neutral.
2. Maximum speed: 60km/h.
3. Maximum distance: 80km.

**NOTE**

*For distances over 80km disconnect the rear propeller shaft at rear axle carrier and secure it in a safe position.*

### Rear wheels off the ground

1. Transmission in Neutral.
2. Maximum speed: 60 km/h.
3. Maximum distance: 80 km.

**NOTE**

*When towing a vehicle in this position, the steering wheel should be secured to keep the front wheels in a straight ahead position.*


*The starter key must be in the OFF position.*

### All four wheels on ground

1. Transmission in Neutral.
2. Maximum speed: 60 km/h.
3. Maximum distance: 80 km.


**NOTE**

*For distances or speeds greater than the above, disconnect the rear propeller shaft at rear axle carrier and secure it in a safe position.*

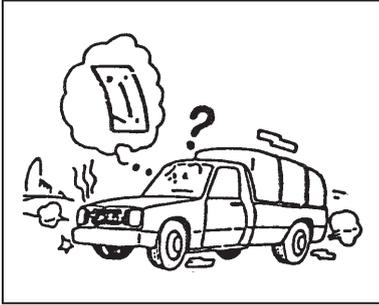


### **Bleeding of fuel system**

If the fuel tank is emptied, air might be allowed to go into the fuel system. With air in the fuel system, smooth flow of fuel into the engine is interrupted. To prevent this, bleed the fuel system.

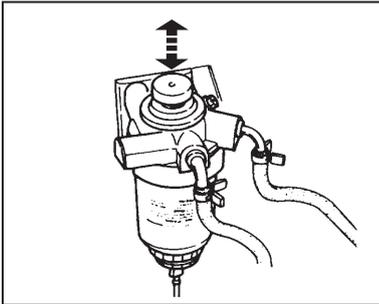


1. Operate the hand pump on the water separator to bleed fuel system air into the injection pump.
2. Start the engine with starter switch, when the bleeding has been finished.
3. If the engine does not start within ten seconds, repeat steps 1 and 2.

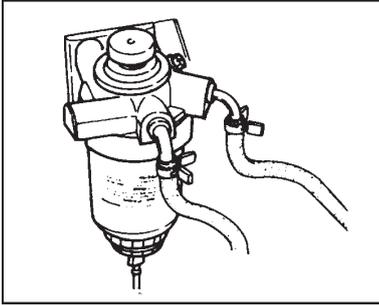

### Draining of water separator


1. Find a safe place to park the vehicle.
2. Loosen the drain plug by turning it counterclockwise (approximately five turns) and operate the hand pump up and down until fuel is filled up into the water separator.

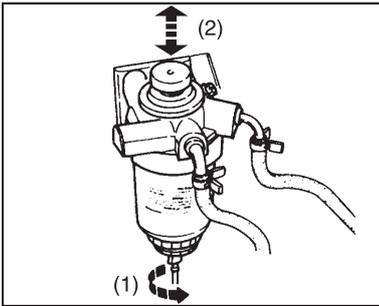

3. After draining, securely tighten the drain plug (1) by turning it clockwise and operate the hand pump up and down (2) several times.
4. After starting the engine, check that there is no fuel leakage from the drain plug. Also check that the water separator indicator has turned off.

### CAUTION


*If water separator requires frequent draining, have the fuel tank drained at your CHEVROLET retailer.*

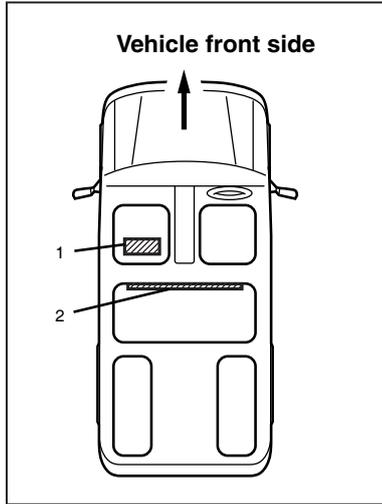

### Jacking instructions and changing a flat tire

The common tool and jack (1) are stored under the front passenger seat.


The jack bar(2) is stored under the 2nd row seat assembly on selected variants.

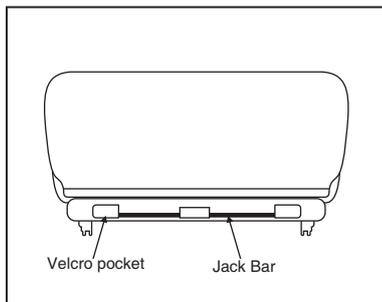

### Jack Bar storage (on selected variants)

Insert the Jack Bar in velcro pocket given on left side of cushion of 3rd row front facing seat.

Fix the Jack Bar by remaining velcro pockets given on center and right side of cushion of 3rd row front facing seat.

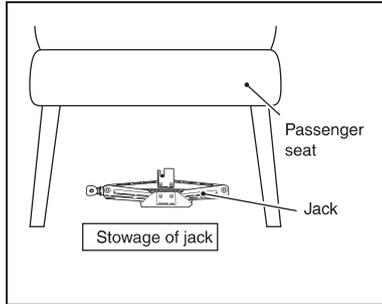

## SCISSOR TYPE JACK ASSEMBLY

### Jack

Store the jack and common tool in toolkit bag and securely strap them under the front passenger seat.

### CAUTION


*Do not store jack, spare tyre or other equipment other than specified location. In sudden stop or collision, loose equipment can be thrown around inside your vehicle and cause personal injuries.*

### Preparation

1. Park on a level surface and set the parking brake firmly.
2. Set the transmission to "REVERSE".
3. Turn the hazard indicator lights on.
4. Turn off the ignition.
5. Block the wheel diagonally opposite the jacking position.
6. Loosen but do not remove wheel nuts.


### NOTE

*The wheel nuts on the wheels have right-hand threads.*

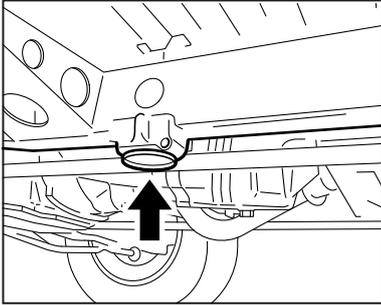


7. Place the jack at correct jacking point.

Front : Concave position on bottom surface of attachment bracket under the side frame.

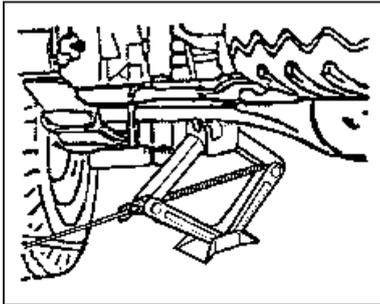


Rear: Under the Rear Axle Tube.

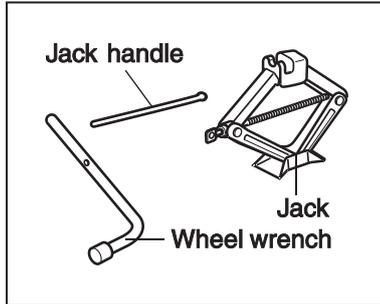

## WARNING


*Do not jack up the vehicle on a slope or a soft ground. It is very dangerous. Do not jack up on any points other than specified jack points.*

- *Never use a jack designed for another vehicle to lift your vehicle, or use your jack to lift another vehicle.*
- *Never get beneath the vehicle when it is only supported by the jack.*
- *Do not start or run the engine while the vehicle is only supported by the jack.*
- *All passengers should be out of the vehicle when it is being jacked.*
- *Use only for lifting your vehicle when changing a wheel or binding / unbinding a tire with a chain.*

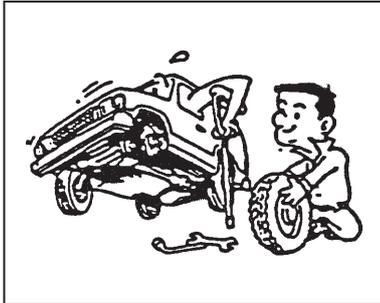


### Wheel replacement

1. Jack up the wheel, remove the wheel nuts, then install the spare wheel.

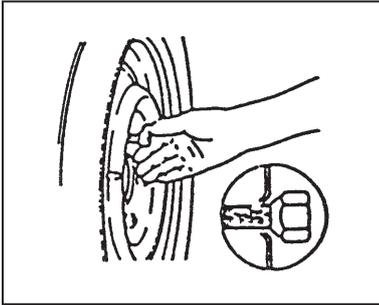

2. Install and semi-tighten the wheel nuts and lower the wheel to the ground.

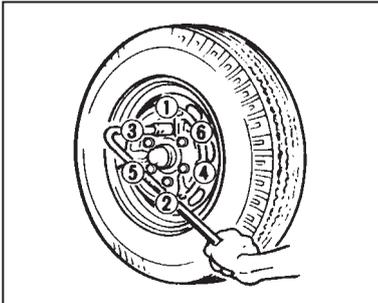

3. With the wheel wrench, tighten the wheel nuts in sequence as shown in the figure.

*Wheel nut torque: 118N·m (12 kgf-m/87 ib-ft)*

#### **WARNING**

*Make sure to use proper nuts or bolts tightened to the proper torque. Using incorrect parts or improperly tightened wheel nuts or bolts can cause wheel to come off the vehicle.*

---

## SERVICE AND MAINTENANCE

In order to maintain safety and economical operation, it is suggested that periodic inspection and maintenance be performed regularly according to the recommendations outlined in this section.

### MAINTENANCE SCHEDULE

To ensure driving safety and maximum economical operation, periodic inspection and maintenance should be performed at your CHEVROLET retailer according to the maintenance schedule.

For service operations which call for disassembly or specialized instruments, contact your CHEVROLET retailer.

Maintenance operations

- I : Inspect and correct or replace as necessary
- A : Adjust
- R : Replace or change
- T : Tighten to specified torque
- L : Lubricate

*When performing checks on the following items, regular inspection items should also be checked.*

\* Marks: Under severe driving conditions, more frequent maintenance is required. Refer to “Maintenance schedule under severe driving conditions”.

### CAUTION

*Chevrolet recommends to consult authorized CHEVROLET retailer for instructions and vehicle health check-up before setting out a long journey.*

### ADDITIONAL OPERATIONS

The time allowance for additional operations, such as wheel alignment, tyre balancing, hub bearing greasing are not included in the standard scope of service labour and are charged separately. It is nevertheless advisable to have such work done as a part of service check/inspection, since the time allowance are not high as would be if the work was carried out separately.

## Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL:	x 1,000 km																			
(Use odometer reading or months, whichever comes first)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
*Engine oil	R		R		R		R		R		R		R		R		R		R	
*Engine oil filter	R		R		R		R		R		R		R		R		R		R	
Oil leakage and contamination	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Idling speed and acceleration	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Fan belt	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Power steering / AC belt	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
*Exhaust pipe and mountings	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
All hose and pipes in engine compartment for clog or damage		I		I		I		I		I		I		I		I		I		I
Valve clearance				A				A				A				A				A
*Air cleaner element	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I	I	I	I
Fuel filters			R			R			R			R			R			R		
Fuel line and connections	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine coolant	I	I	I	I	I	I	I	I	I	R		I		I		I		I		R
Cooling system for water leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
CLUTCH																				
Clutch fluid	I	I	I	I	I	R	I	I	I	I	I	R	I	I	I	I	I	R	I	I
Clutch pedal travel and play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

\* Under severe conditions, additional maintenance is required.

Refer to "Maintenance schedule under severe conditions"

## Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL:	x 1,000 km																			
(Use odometer reading or months, whichever comes first)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
<b>TRANSMISSION</b>																				
*Manual transmission oil		R			I			R				I				R				I
Oil Leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Gear control mechanism for looseness				I				I					I				I			I
<b>PROPELLER SHAFT</b>																				
Loose connection		I		I		I		I		I		I		I		I		I		I
*Universal joints and splines for wear		I		I		I		I		I		I		I		I		I		I
*Universal joints and sliding sleeve		L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
<b>REAR AXLE</b>																				
*Differential gear oil		R			I			R				I				R				I
Oil leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Axle case for distortion or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

\* Under severe conditions, additional maintenance is required  
Refer to "Maintenance schedule under severe conditions"

## Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL:	x 1,000 km																			
(Use odometer reading or months, whichever comes first)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
STEERING																				
Steering gear oil - Manual						R						R						R		
[PS] Power steering fluid	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	R	I	I
Oil leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
*Steering system for looseness or damage		I		I		I		I		I		I		I		I		I		I
[PS] Power steering hose		I		I		I		I		I		I		I		I		I		I
Steering wheel play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Joint ball for leakage or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

\* Under severe conditions, additional maintenance is required  
 Refer to "Maintenance schedule under severe conditions"

## Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL: x 1,000 km	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
(Use odometer reading or months, whichever comes first)	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
<b>SERVICE BRAKES</b>																				
Brake fluid	I	I	I	I	I	R	I	I	I	I	I	R	I	I	I	I	I	R	I	I
Brake system for fluid leakage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
* Front disc brake pads and discs wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
* Rear brake lining and drum wear		I		I		I		I		I		I		I		I		I		I
Brake pedal travel and play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>Pipes and hoses for loose connections or damage</b>	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>PARKING BRAKE</b>																				
Parking brake function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Parking brake lever travel	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>Cables for looseness or damage and guide for damage</b>	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Ratchet for wear or damage		I		I		I		I		I		I		I		I		I		I

\* Under severe conditions, additional maintenance is required  
Refer to "Maintenance schedule under severe conditions"

## Maintenance schedule

I: Inspect and correct or replace as necessary

A: Adjust

R: Replace or change

T: Tighten to specified torque

L: Lubricate

SERVICE INTERVAL:	x 1,000 km		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
(Use odometer reading or months, whichever comes first)	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120		
<b>SUSPENSION</b>																						
Leaf spring for damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Mount for looseness or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Shock Absorbers for oil leakage		I		I		I		I		I		I		I		I		I		I		I
Shock Absorbers mount for looseness		I		I		I		I		I		I		I		I		I		I		I
<b>Rubber bushes of suspension for wear or damage</b>	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Joint ball rubber boot for damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>WHEELS</b>																						
Wheels nuts	T	T		T		T		T		T		T		T		T		T		T		T
Wheels disc for damage	I	I		I		I		I		I		I		I		I		I		I		I
Hub bearing grease						R								R						R		
Front and rear hub bearings for looseness		I		I		I		I		I		I		I		I		I		I		I
Spare wheel hanger	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Tyre pressure and damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Tyre Rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Wheel Alignment and Wheel Balancing	As and when required or as suggested by CHEVROLET retailer																					
<b>OTHERS</b>																						
Bolts and nuts chassis and body	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Safety belts, buckles & anchorages	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>Lubricate locks, hinges, hood latch &amp; fuel flap release</b>	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

\* Under severe conditions, additional maintenance is required Refer to "Maintenance schedule under severe conditions"

## Maintenance schedule under severe driving conditions

Severe driving conditions

A: Repeated short trips

B: Driving on rough roads

C: Driving on dusty roads

D: Driving in extremely cold weather and/or on salted roads

D : 4JA1-L Diesel engine

MT : Manual transmission

Item	Interval	Condition				
		A	B	C	D	A+D
Engine oil	Change every 5,000 km			●		●
Engine oil filter	Replace every 5,000 km			●		●
Exhaust pipes and mounting	Inspect every 5,000 km	●	●		●	
Air cleaner element	Replace every 20,000 km			●		
Steering system for looseness or damage	Inspect every 5,000 km		●			
Universal joints and sleeves	Inspect for wear and lubricate every 5,000 km		●	●		
Transmission oil	Change every 20,000 km after changing at initial 10,000 km		●			

## Maintenance schedule under severe driving conditions

Severe driving conditions

A: Repeated short trips

B: Driving on rough roads


C: Driving on dusty roads

D: Driving in extremely cold weather and/or on salted roads

D : 4JA1-L Diesel engine

MT : Manual transmission

Item	Interval	Condition				
		A	B	C	D	A+D
Differential oil	Change every 20, 000 km after changing at initial 10,000 km		●			
Front brake pads and discs	Inspect every 5,000 km	●	●	●		
Rear brake lining and drum wear	Inspect every 5,000 km	●	●	●		

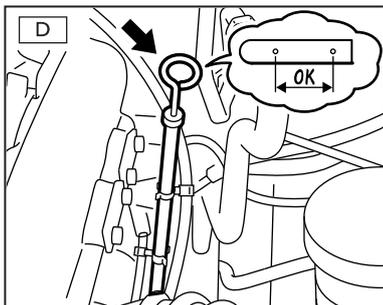

## MAINTENANCE GUIDE

### REGULAR INSPECTION

#### Engine oil level

Pull out the level gauge rod (oil dipstick).

Wipe clean it and reinsert.

Again pull it out and check that oil level is within high and low level marks. Also check the oil on the gauge rod for contamination.


#### NOTE

*Engine oil level should be checked with the vehicle parked on level ground (before the operation of engine).*

*If the engine is running, stop the engine and allow 5 minutes for the oil to settle down before checking the oil level.*

#### CAUTION

*Do not overfill engine oil on turbo charged engine. Keep engine oil level between Max. and Minimum. Excessive overfill causes serious damage on the engine. Do not dispose off used engine oil and filter with your household waste. Use your local, authorized waste management facility. Used engine oil and filter contain harmful elements that may be unhealthy to you and threat to the environment.*

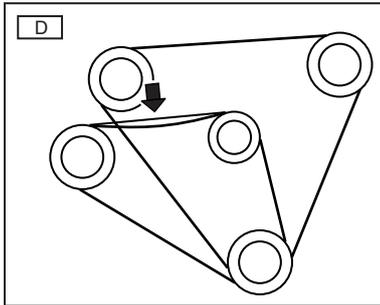


### Accessory drive belt/Fan belt

Check that the accessory drive belt/fan belt gives specified deflection when the middle part of the belt is depressed with a force of 10 kg. Also check the belt for cracks and damage.

#### CAUTION

*Do not leave the key in the ignition while checking the drive belts. Moving parts of an operating engine can cause serious injuries.*

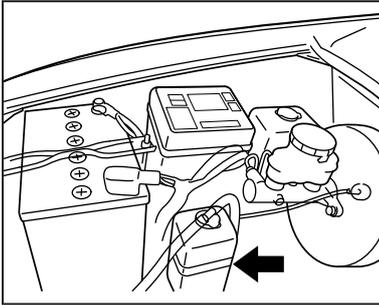

### Coolant level

#### WARNING

*When the coolant is heated to a high temperature, be sure not to loosen or remove the radiator cap. Otherwise you might get scalded by hot vapor or boiling water. To open the radiator cap, put a piece of thick cloth on the cap and loosen the cap slowly to reduce the pressure or when the coolant has become cooler.*

Check the level of the coolant and replenish the radiator surge tank as necessary. If the level of coolant in the surge tank is found to be lower than the “MIN” line, check the cooling system for leaks, then replenish to bring the level up to the “MAX” line.

#### CAUTION

*Do not overfill the surge tank. The radiator filler cap should not be removed unless necessary. The coolant level should be checked when the engine is cold. Supplement inhibitors or additives claiming to provide increase in cooling capability that have not been specifically approved by GMI are not recommended for addition to the cooling system. Coolant can be hazardous material. Avoid repeated or prolonged contact with coolant. Clean your skin and nails with soap and water after coming in contact with coolant. Keep out of reach of children. Coolant can irritate the skin and can cause illness or death if swallowed.*




### Steering wheel

Check the steering parts for excessive play and looseness. The standard steering wheel play is about 10 to 30 mm. (0.4 to 1.2 in). Also check the steering for abnormal conditions such as shimmy, pull to one side, hard-steering, etc.

**NOTE**


*If the steering parts have excess play or looseness or if any abnormal condition is noted, have your CHEVROLET retailer check the steering system immediately.*

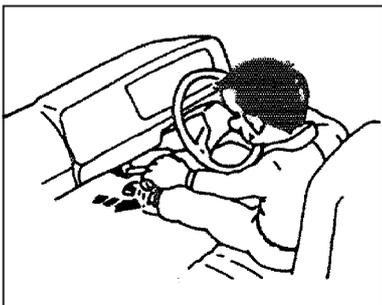

### Parking brake lever travel

Dash panel parking brake lever travel must be 8 to 12 notches (When pulled with a force of 30 kg.)

For floor mounted parking brake, lever travel must be 7~10 notches, with a force of approximately 20 kgf.

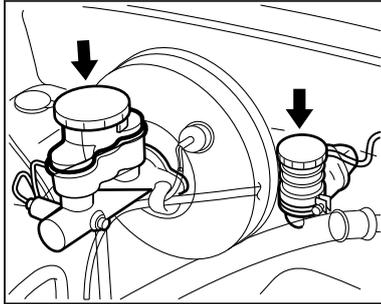

### **Brake and clutch (MT) fluid level**


Check that the brake and clutch fluid reservoir is filled up to the level mark. If the level is too low, replenish with the recommended hydraulic brake fluid.

#### **WARNING**

*If the brake indicator light comes on while driving, the fluid reservoir should be filled to the level mark with the recommended hydraulic brake fluid.*


#### **CAUTION**

*Do not dispose of used brake/clutch fluid with your household waste.  
Use your local, authorized waste management facility.  
Used brake/clutch fluid and their containers are hazardous.  
They can damage your health and the environment.*

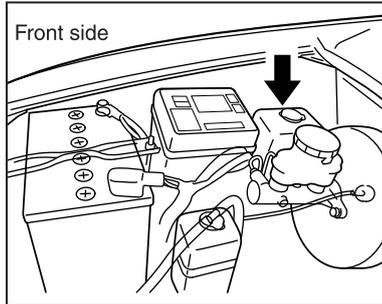


### Windshield washer solution level

Check that the washer tank is filled sufficiently with solution. Also check the operating condition of the windshield washer.

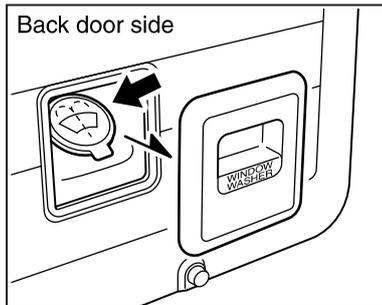

### CAUTION


*Insert the lever portion of the cover first while re-fitting to prevent any damage to the same.*

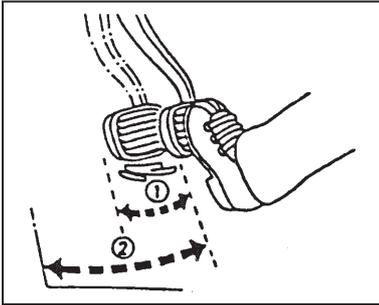

### Clutch pedal free play and height

Standard value : mm

- (1) Free play : 5-15
- (2) Height : 168-178

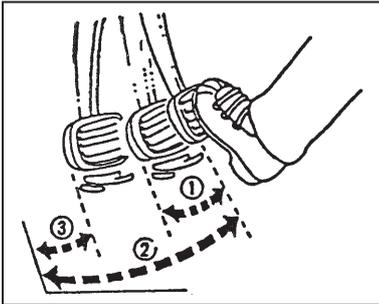


### Brake pedal free play, height and allowance

Standard value : mm

- (1) Free play : 6-10
- (2) Height : 164-174
- (3) Allowance : More than 55

(When depressed with a force of the 50 kg)

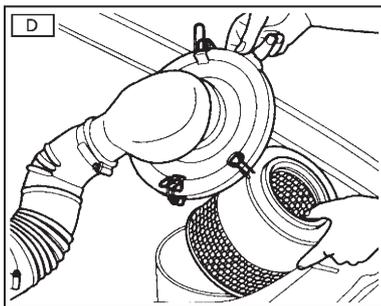

## PERIODIC MAINTENANCE

### Air cleaner

Use of fouled air cleaner element not only cause a deterioration in the engine output but also give a raise in fuel consumption and dark exhaust smoke. The air cleaner element should be serviced in the following manner:

### CAUTION

*The cover should be reinstalled after aligning the setting marks to prevent dust from entering. It is strongly advisable to use the GMI genuine air cleaner element at the time of replacement.*

*The engine air cleaner should be installed at all times unless temporary removal is necessary during repair or maintenance of the vehicle, because in the absence of the air cleaner, backfiring could cause fire in the engine compartment.*



### **Dry paper element cleaning**

To clean the element, apply the following method.


When the element is fouled with dust but dry:

Apply compressed air to the element from inside while turning the element by hand. Pressure of compressed air should not exceed 490 KPa (5 kg/cm<sup>2</sup> / 71 psi)

### **CAUTION**


*It is strongly advisable to use the GMI genuine air cleaner element at the time of replacement.*

*The engine air cleaner should be installed at all times unless temporary removal is necessary during repair or maintenance of the vehicle, because in the absence of the air cleaner, backfiring could cause fire in the engine compartment.*

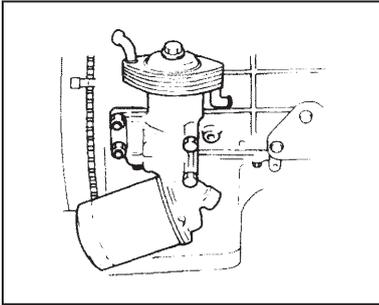

### Oil filter


1. Loosen the oil filter by turning it counterclockwise with a filter wrench.
2. With a rag, wipe the fitting face of the oil cooler clean so that the new oil filter can be seated properly.

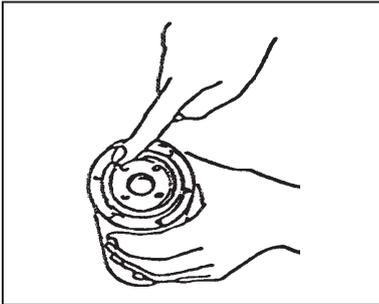

3. Lightly oil the O-ring and turn the oil filter until the sealing face is fitted against the O-ring. Turn one full turn further with the filter wrench.


### CAUTION

*Check level of oil in the engine and replenish to specified level as necessary. Start the engine and check for leaks in the oil filter. It is strongly advisable to use the GMI genuine oil filter assembly for replacement.*

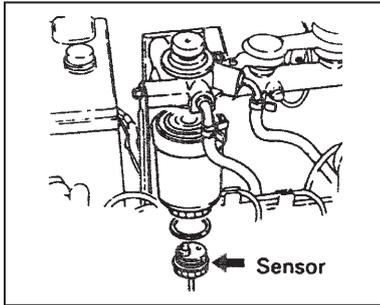

### Fuel filter with water separator


1. Loosen the fuel filter turning it counterclockwise with a filter wrench and remove it.
2. Then loosen the level sensor by turning it counterclockwise with a wrench and remove it from the fuel filter.

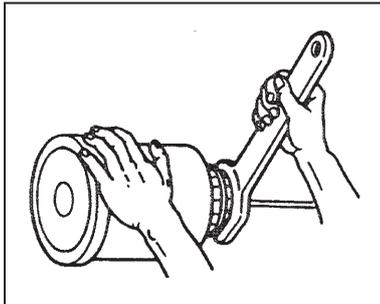


3. Install the level sensor into the new fuel filter with a wrench.

Torque : Nm (kgf.m/ft.lbs)


13 (1.3/9.4)

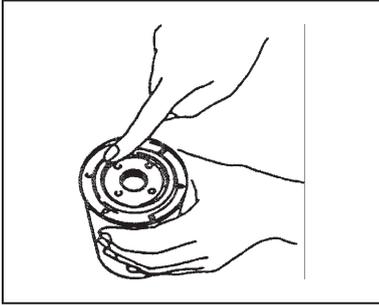

4. Wipe the fitting face of the filter cover clean with a rag, so that the new fuel filter can be seated properly.
5. Lightly oil the O-ring and turn in the fuel filter until the sealing face is fitted against the O-ring. Further turn  $2/3$  turns with the filter wrench.

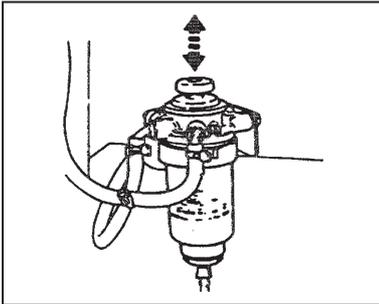

6. Operate the priming pump on the water separator several times to bleed fuel system air.
7. Start the engine with starter switch.
8. If the engine does not start within ten seconds, repeat bleeding operation.

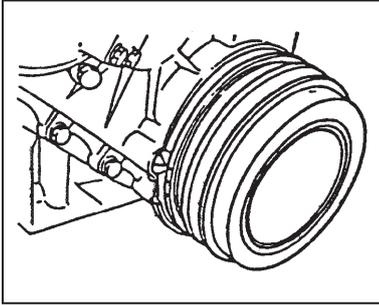


### Valve clearance adjustment D

1. Bring the piston in the No. 1 cylinder to the top dead center (T.D.C.) on compression stroke by turning the crankshaft until T.D.C. line on damper pulley is aligned with the timing pointer.

### CAUTION


*Check the rocker arm shaft bracket nuts for looseness and retighten as necessary before adjusting the valve clearances.*

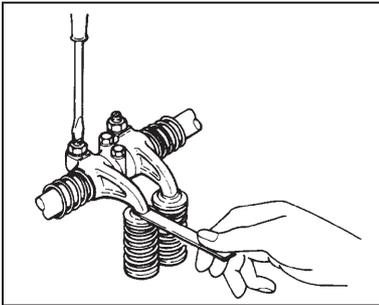


2. Adjust the valve clearances in the following manner using a feeler gauge.

Valve clearance: mm. (in.) [at cold]


Intake	0.40 (0.016)
Exhaust	0.40 (0.016)

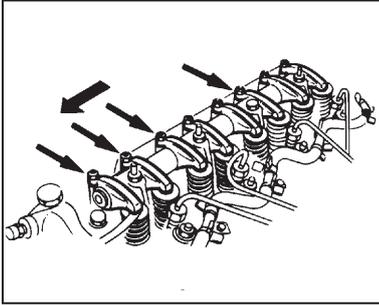

3. Adjust the clearance of the valves indicated by arrows.

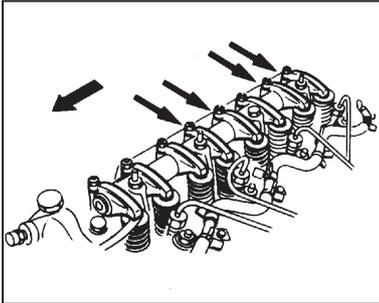


4. Turn the crankshaft one full turn (360 degrees) and adjust the clearances of the valves indicated by arrows.

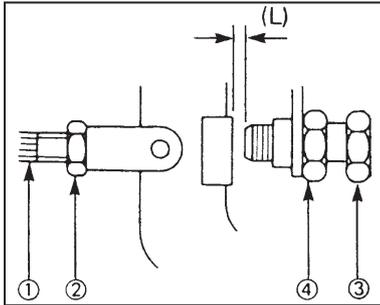

### Clutch pedal adjustment


1. Adjust the pedal height by loosening lock nut (2) and turn push rod (1).
2. After adjustment, tighten lock nut (2).
3. Drive in (3) so that (L) becomes 0.5 to 1.5 mm (0.02 - 0.05 in) then lock (4) to adjust free play.

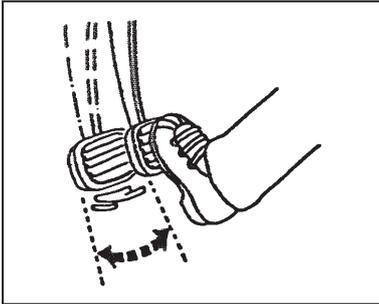


### Brake pedal adjustment

The push-rod serves as the brake pedal stopper when the pedal is fully released. Brake pedal height adjustment should be performed as follows.

1. Measure the brake pedal height after making sure the pedal is fully returned by the pedal return spring.
2. If the measured value deviates from the specified pedal height, adjust the brake pedal as follows.
  - (1) Loosen the stop light switch.
  - (2) Loosen lock nut on the push rod.
  - (3) Adjust the brake pedal to the specified height, rotating the push rod in the appropriate direction.
  - (4) Adjust the stop light switch to obtain appropriate clearance. Clearance (between the switch housing and the brake pedal) : 0.5 to 1.0 mm.

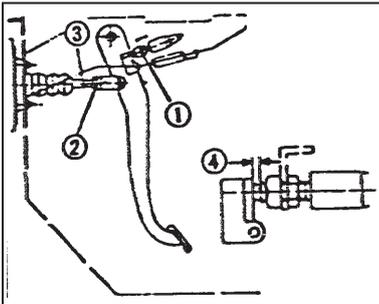


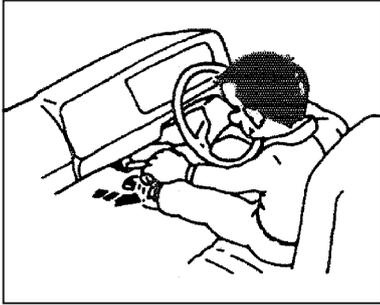

### **Parking and service brake**

All brakes are self-adjusting.


Brakes are adjusted by repeated stepping on the brake pedal.

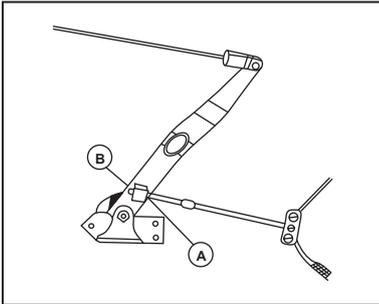

The dash panel parking brake adjustment should be performed as follows:


- (1) Release the parking brake lever fully.
- (2) Loosen the lock nut (A).
- (3) Repeat stepping the brake pedal firmly, and releasing it until the rear brake auto-adjuster completes the function.
- (4) Rotate the adjust nut (B) until all slack disappears from the cable.
- (5) Set the lock nut.

The parking brake lever travel is normal when the lever comes out 8 to 12 notches when pulled with a force of 30 kg (66 lbs).

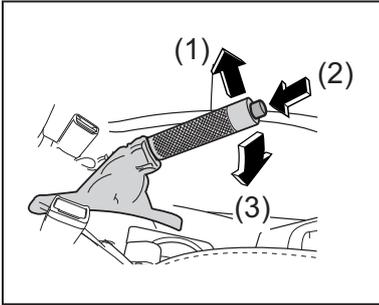

To check the floor mounted parking brake stroke, do the following:

1. Turn engine off.
2. Apply parking brake, counting notch clicks you hear. If the number of clicks differs from the specification (7 ~ 10 notches), have your CHEVROLET retailer adjust the parking brake.

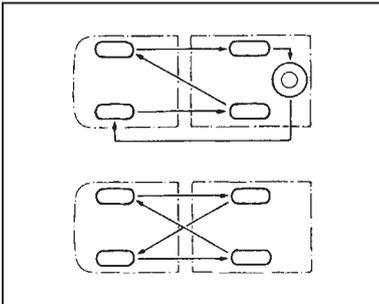


### Tire rotation

When the front and rear tires are the same size, rotate the wheels as shown in the figure.

### CAUTION

*After rotation, adjust the front and rear tire pressure and be sure to check wheel nut tightness.*

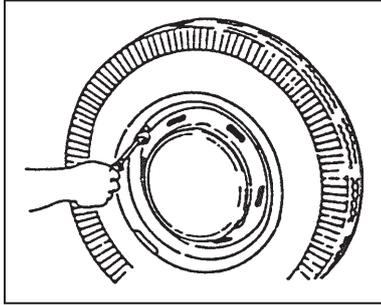

### Tire inflation pressure

Standard inflation pressure for tires are listed below.

#### NOTE

*Check tire pressure when the tires are cold (after the vehicle has been inoperative for more than 3 hours or driven less than 1.6 km).*


Tire Size	Tire pressure-kg/cm <sup>2</sup> (PSI)	
	Front	Rear
205/65 R15 99S	2.2 (32)	2.4(35)
205/65R15 99S [PS]	1.8 (26)	2.4 (35)

#### CAUTION

*Always dispose off worn tires according to local environment regulations.*


*Use of tyres of a size other than originally fitted to your vehicle may cause interference between tyres and vehicle components and may result in tyre and vehicle damage.*

*Do not drive with worn or damaged tyres. Such tyres can cause you to loose control of the vehicle and a collision resulting in injuries and damage to your vehicle and other property.*

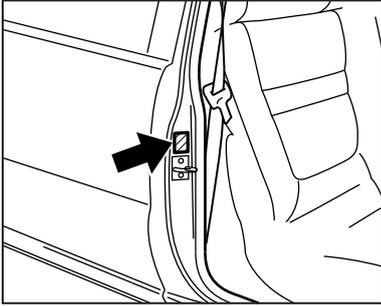

### **Tire pressure label**


The tire pressure label is located on the frame of driver's side.

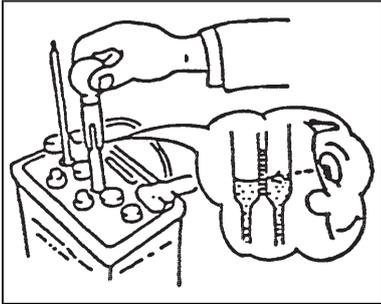

### **Specific gravity of battery electrolyte**

If your new vehicle has a maintenance-free battery, you will never have to add water, instead install a new battery.

Do not try to jumpstart the vehicle or charge it or test the battery if the fluid level is below the lower level line on side of the battery.

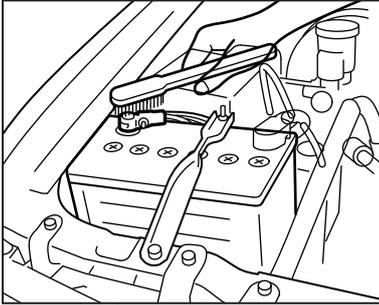

### **Cleaning of battery**

If the external part of the battery is fouled, clean with tepid water. Apply a thin coat of vaseline or grease onto the battery terminals to prevent corrosion.

#### **WARNING**


*When reconnecting the cable to the battery be careful to ensure the clamps are fully seated, then tighten the retaining bolts so that clamps will not vibrate loose. Be sure to attach the red cable to the positive (+) battery terminal and the black cable to the negative (-) battery terminal.*

#### **NOTE**

*Be sure to keep in mind that the positive terminal (+) is first when connecting and the negative terminal (-) is first when dis-connecting.*

#### **CAUTION**

*Batteries contain toxic material. Used batteries can be hazardous to health and environment. Do not dispose off battery with household waste. Use locally authorized automotive waste disposal facilities only.*

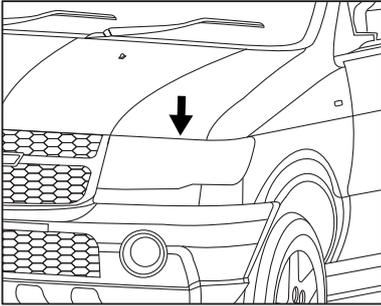

### Headlights


Proper aiming of the headlights is most important in ensuring sufficient illumination on the highway without blinding other motorists. When light aiming is necessary it is advisable to contact an authorized retailer who has special equipment for this purpose.

#### NOTE

*When replacing a bulb, make sure the light switch is "OFF". Use only bulbs with the same wattage rating.*


#### CAUTION

*Clean your halogen bulbs with alcohol or mineral spirits and a lint free cloth. Be sure not to touch them with bare hands. Finger prints may drastically shorten the effective life of halogen bulbs.*

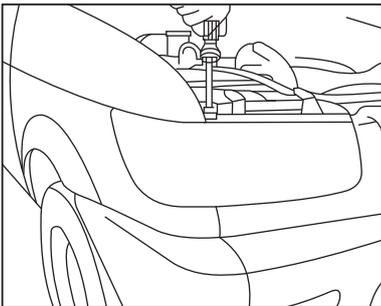


### Front combination light

Unscrew the top screw securing the lens.

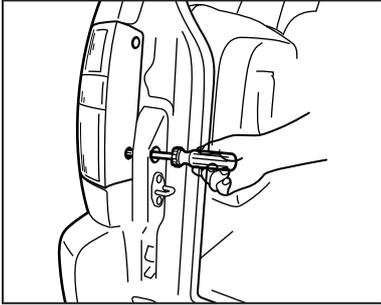


### **Rear combination light**

Unscrew each of the two screws securing the lens

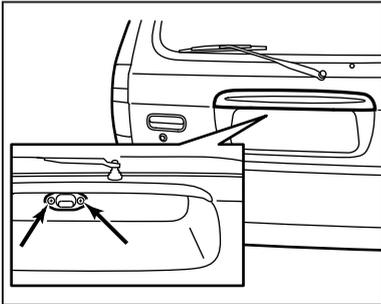

### **License plate light**

Unscrew the two screws securing the lens.

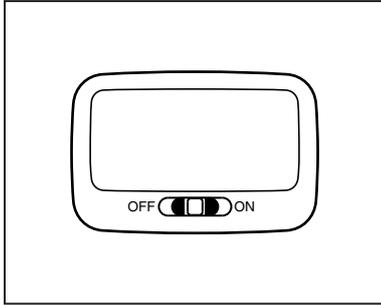

### **Dome light**

The lens can be removed easily by hand then remove the bulb from the socket by pulling it.

### **Replacing light bulbs**

When replacing a bulb, make sure the light switch is "OFF".

Use only bulbs with the same wattage rating. The standard bulb wattage ratings are given below.

### **WARNING**

*Wear eye protection when working with bulbs. Protect the bulb from abrasions and scratches.*

*When the bulb is illuminated and is not in a sealed installations, protect the bulb from contact with liquids.*

*Only illuminate the bulb when it is installed in a lamp.*

*Replace a cracked or damaged headlamp.*

*Keep the bulbs away from children.*

*Dispose off used bulbs with care, otherwise the bulbs can explode.*


## BULB SPECIFICATION

		Bulb	Wattage x Quantity	Remark
Front	1	Headlamp (High/Low)	60/55W x 2	Halogen
	2	Parking Lamp	5W x 2	
	3	Turn Signal Lamp	21W x 2	
	4	Turn Signal Lamp (LT)	21W x 2	Amber
	5	Fog Lamp (LT)	27W x 2	Halogen
	6	Side Turn Signal Lamp	5W x 2	Amber
Rear	7	Turn Signal Lamp	21W x 2	Amber
	8	Brake/Taillamp	21/5W x 2	
	9	Backup Lamp	21W x 2	
	10	High Mounted Stop Lamp	5W x 5	
	11	License Plate Lamp	5W x 2	
Dome	12	Dome Lamp	10W x 2	

Bulb specification in some models can be different from the above table. See the wattage printed on the bulb before replacing burnt bulbs.

### WARNING

*The same rating of the bulb to be used during replacement and any usage of higher wattage bulbs can cause thermal issues such as melting of lamp housing and its surrounding parts. Warranty would be void if higher wattage bulbs are being used.*

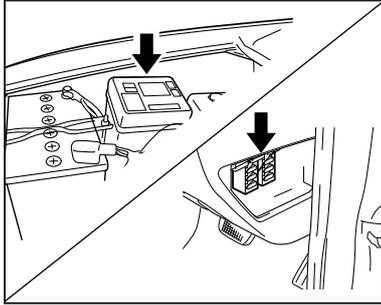


### Fuse junction block

The fuse junction blocks are installed under the instrument panel on the drivers side and in the engine compartment.

The cover can be removed easily by hand. A list of the main fuse circuits and their amperage is attached to the junction block cover.

The spare fuses (10, 15, and 20A) and removal tool (white) is installed on the backside of fuse junction block cover, which is in engine compartment.

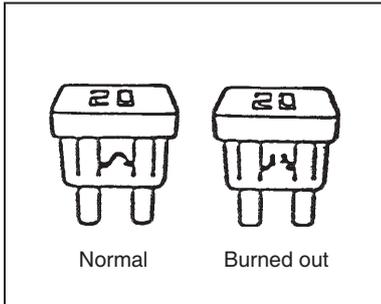


The drawing at the left illustrates a burned out fuse.

Use a spare fuse of the same amperage for replacement.

#### NOTE

- \* *When replacing a fuse, it is important to use a spare fuse of the amperage shown on the fuse junction block cover.*
- \* *If the spare fuse also burns out, have the circuit checked at your nearest CHEVROLET retailer.*

Fuse Box: Engine Room D

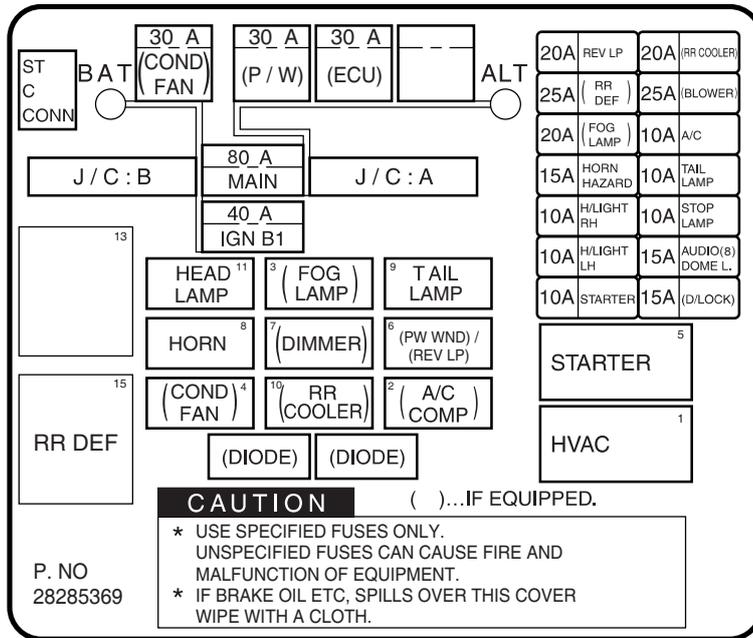

---

Fuse Box : Instrument Panel  D

Fuse No.	Capacity	Indication on label
C-2	15A	ENGINE
C-3	20A	FT. WIPER
C-4	10A	RR. WIPER
C-5	15A	TURN, BACK
C-6	15A	AUDIO (ACC), CIGAR

---

## RECOMMENDED LUBRICANTS AND DIESEL FUELS

In order to obtain maximum performance and longest service life from your CHEVROLET vehicle, it is very important to use lubricants and diesel fuels selected and listed in the chart. The lubrication intervals in the maintenance schedule and application of the New Vehicle Warranty are based on the use of recommended lubricants as given in the chart, which will serve as a guide for selecting lubricants of proper grade.

### LUBRICANTS

LUBRICANTS	TYPE OF LUBRICANTS
Diesel engine crankcase	GMI Genuine 15W40 CF4 or 15W40 CI4
Manual transmission case	GMI Genuine 15W30
Power steering circuit	GMI Genuine Dexron III
Steering gear box	GMI Genuine 80W90 GL-5
Differential gear	GMI Genuine 80W90 GL-5
Hydraulic brake and clutch system	GMI Genuine Dot 3
Wheel bearing	L2 grease
Grease fitting	MP grease
Engine cooling system	GMI Genuine LLC

---

## **DIESEL FUELS**


APPLICABLE STANDARD	RECOMMENDATION
JIS (Japanese Industrial Standard)	No.2
DIN (Deutsche Industrie Normen)	Din 51601
SAE (Society of Automotive Engineers)	No. 2-D
Based on SAE J-313C	
BS (British Standard)	Class A-1
Based on BS/2869-1970	

---


## LUBRICATION

Lubricants should be carefully selected according to the lubrication chart. It is also important to select viscosity of lubricants according to the ambient temperature by referring to the following table.


### OIL VISCOSITY CHART FOR DIESEL ENGINE

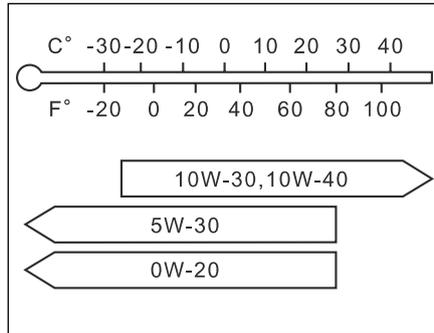


**OIL VISCOSITY CHART FOR REAR AXLE**

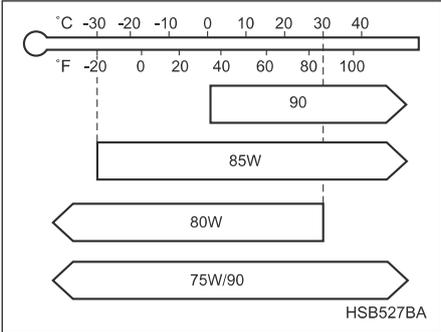

## OIL VISCOSITY CHART FOR TRANSMISSION CASE

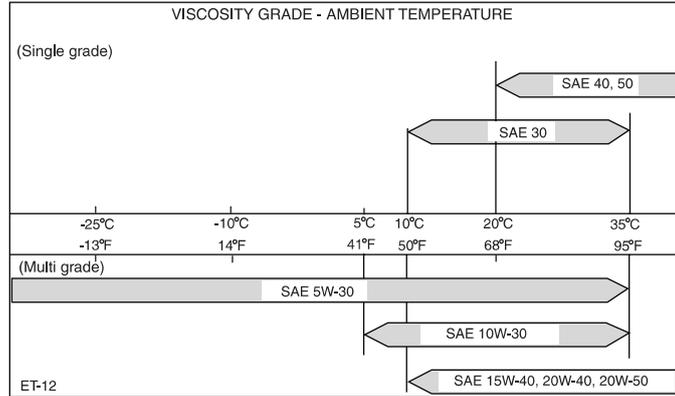


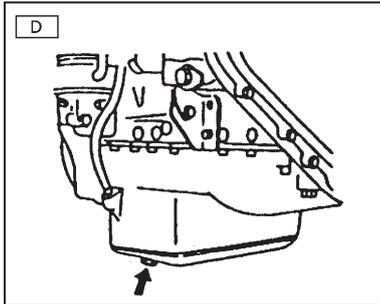

## LUBRICATION GUIDE

### Changing engine oil


Drain the engine crankcase completely by removing the drain plug on the lower part of the oil pan while the engine is hot and then install the drain plug.

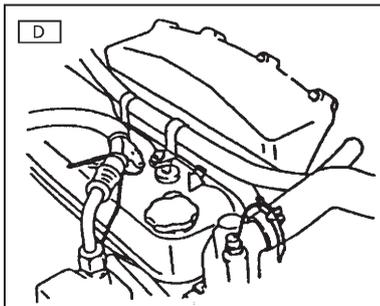

Next fill the engine crankcase from the filler port with new engine oil of the specified grade.

### NOTE

*When the engine crankcase is filled to the high level mark on the oil dipstick, start and let the engine idle for a few minutes, then stop the engine and recheck the oil level and replenish, if necessary.*

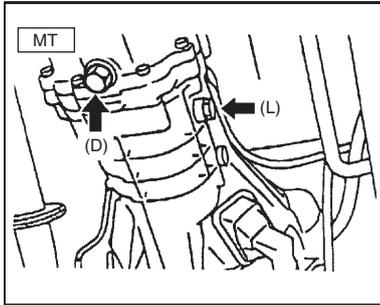


### Changing transmission oil

Drain the transmission case by removing the drain plug (D) on the lower face of the transmission case. Fill the transmission case to the level with the specified oil through the level plug hole (L).

#### CAUTION

*Make sure the transmission is cool before you attempt this procedure.  
Do not overfill the manual transmission fluid.*

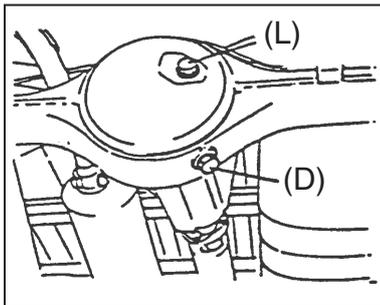


### Changing differential oil

Drain the rear axle case by removing the drain plug (D). Fill the rear axle case to the level with the specified gear oil through the level plug hole (L).

#### CAUTION


*Replace the drain plug washer with new one every time plug is removed.*

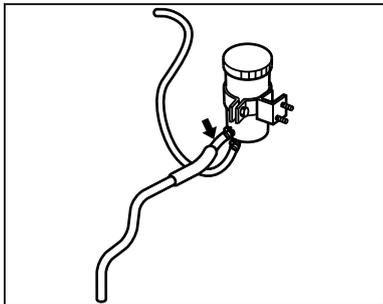

## Changing power steering fluid PS

### Draining

1. Jack up the front wheels until they are clear of the ground.
2. Remove the fluid hose between the steering unit and the fluid reservoir.
3. When draining is completed, remove remaining fluid within hydraulic system by turning the steering wheel fully in both directions several times.

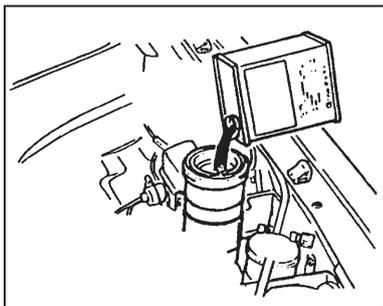


### Refilling

1. Install the fluid hose securely and fill the fluid reservoir with the specified steering fluid.

### CAUTION


*Do not operate vehicle without the required amount of power steering fluid. Doing so can damage power steering system of your vehicle, leading to costly repairs. An overflow of the fluid may cause the fluid to burn or discolour paintwork. Do not overfill the reservoir.*

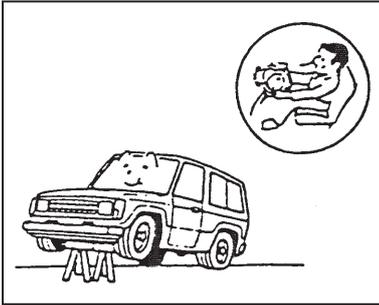

2. With the engine stationary, turn the steering wheel fully in both directions several times.

**NOTE**

*While bleeding check the fluid level and replenish if necessary.*

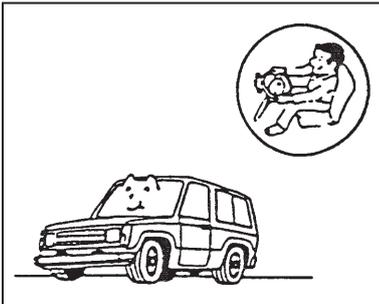


3. With the engine idling turn the steering wheel fully several times in both directions

**CAUTION**

*Avoid turning steering wheel to lock and holding it there for more than 5 seconds, or the fluid temperature will increase sharply.*

4. Lower the vehicle to the ground and turn the steering wheel fully in both directions several times, with the engine idling

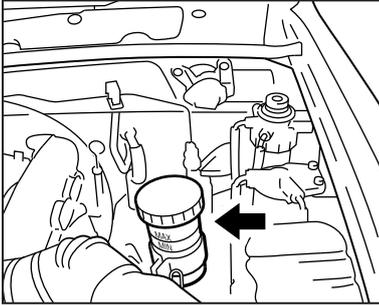

5. Bring the steering wheel to the straight-ahead position, stop the engine, and check that the level of fluid in the fluid reservoir does not rise. If the fluid level rises sharply, air is not completely removed from the system and the operations outlined under step 4 must be repeated.
6. Check level of fluid in the fluid reservoir, then check joints for leakage.

### **RE-PACKING FRONT HUB BEARING WITH GREASE**

It is suggested that the vehicle be taken to your CHEVROLET retailer when the above operation becomes necessary as the operation calls for disassembly and reassembly.

## MAIN DATA AND SPECIFICATIONS

<b>DIMENSION</b>			
Overall length	mm		4435
Overall width	mm		1680
Overall height	mm		1765
Wheel base	mm		2685
Wheel track			
Front	mm		1445
Rear	mm		1420
Min. ground clearance	mm		170
<b>WEIGHT</b>			
Gross vehicle mass (8, 9, 10 Seater)	kg		2550
Gross vehicle mass (7 Seater)	kg		2510
Gross vehicle mass (Ambulance)	kg		2185
<b>ENGINE</b>			
Model and type		4JA1L four cycle, water cooled, overhead valve, In line direct injection diesel with distributor VE type injection pump.	
Compression ratio	(to 1)		18.5 ± 0.6
Piston displacement	cc		2499
Bore x stroke	mm		93 x 92
Max. power	kW@RPM		54@3900
Max. torque	Nm@RPM		171@1800
Valve clearance Cold			
Intake	mm		0.4

Exhaust	mm	0.4
Idle speed	rpm	800 ± 25 @ No Load
Firing order		1-3-4-2
Fan belt tension	mm/10kg	9~13
Compressor / Power steering belt	mm/10kg	14 ~17
Service change engine oil capacity		
(with filter changes)	liters	4.3~5.3
(without filter changes)	liters	3.5~4.5
Coolant capacity	liters	7.0
Fuel tank capacity	liters	55.2
Oil pan drain plug torque	kg.m	4.5
CLUTCH		
Type		Hydraulic control, dry single plate with diaphragm springs
Diameter	mm	$\square$ 225

Pedal free play	mm	5-15					
TRANSMISSION							
Model and type		MSG5K: 5-speed, fully synchronized manual transmission with a constant mesh type reverse gear					
Gear ratio	(to 1)						
	position	1st	2nd	3rd	4th	5th	Rev.
	MSG5K	4.12	2.49	1.50	1.00	0.86	3.72
Lubricant capacity	liters	1.55					

## MAIN DATA AND SPECIFICATIONS

<b>REAR AXLE</b>		
Type		Spiral bevel & hypoid gear, semi-floating
Gear ratio	(to 1)	$\square$ 3.909
Oil capacity	liters	1.5
Filler & drain plug torque	kg.m	2.0-3.5
<b>STEERING</b>		
Type		Recirculating ball
Steering wheel free play	mm	10-30
Wheel alignment		
Toe-in	mm	$2 \pm 2$
Camber	(degrees)	$0^{\circ} 30' \pm 60'$
Caster	(degrees)	$1^{\circ} 30' \pm 45'$ (Long)
King pin angle	(degrees)	$10^{\circ} \pm 60'$
Turning radius	m	5.62
<b>SERVICE BRAKE</b>		
Type		Hydraulic disc in front, self-adjustment drum brake in rear with vacuum servo.
Pedal free play	mm	6-10
Booster - tandem	mm	230

<b>PARKING BRAKE</b>			
Type			Mechanical internal-expanding, action on rear wheels.
Brake lever travel	(notches)		IP mounted 8-12 (When pulled with force of 30kg)
			Floor mounted 7-10 (When pulled with force of 20kg)
<b>WHEEL AND TIRE</b>			
Tire size			205/65R15 99S
Wheel dimension			6JJ X 15
Tire pressure	Kg/cm <sup>2</sup>		2.2/2.4 (Front/Rear) or 1.8/2.4 (Front/Rear) [PS]
<b>SUSPENSION</b>			
Type	Front		Independent wishbone arms, torsion bar spring with stabilizer bar with double-action gas filled shock absorbers
	Rear		Semi-elliptic, alloy steel leaf spring, with double-action gas filled shock absorbers.
<b>ELECTRICAL</b>			
Type			12 volt system with negative polarity ground.
Battery	volt/Ah		[D] 80D26R (12V/65Ah)
Starter	volt/kw		12/2.2
AC generator	volt/amp.		[D] 12/90

---

A/C

Refrigerant Specified Amount (R134a)

gms

SINGLE  $725 \pm 25$

DUAL  $875 \pm 25$

---



---

# SERVICE AND WARRANTY



---

## Service Certificate

1st Owner \_\_\_\_\_

Customer name \_\_\_\_\_

Registration no. \_\_\_\_\_

\_\_\_\_\_

2nd Owner \_\_\_\_\_

Customer name \_\_\_\_\_

Registration no. \_\_\_\_\_

\_\_\_\_\_

3rd Owner \_\_\_\_\_

Customer name \_\_\_\_\_

Registration no. \_\_\_\_\_

\_\_\_\_\_

---

## Predelivery Inspection and Vehicle Delivery

Before delivering the vehicle we carried out a thorough predelivery inspection in order to ensure that your CHEVROLET vehicle is in a fault-free condition. Accompanying this appropriately filled out service booklet are the owner's manual, the tool kit and your vehicle documents.

You have been informed of the service intervals and necessary service checks.

---

City, date

---

CHEVROLET Retailer's / ASO's Stamp and Signature

---

# Owner's Statement of Acceptance

I hereby certify that the vehicle has been delivered in an orderly and proper operating condition, **including keys, owner's manual, service booklet and tool kit. I have read and understood the terms and conditions pertaining to the New Vehicle Warranty and agree to abide by the same.**

I have been informed of the service intervals and necessary service checks, including under extreme operating conditions.

Date of delivery : \_\_\_\_\_

\_\_\_\_\_  
City, date

\_\_\_\_\_  
Name and signature of customer

This sheet must be detached prior to vehicle delivery and placed with the vehicle file **after it has been signed** by the customer.





Dear Customer,

We are confident that you and your family would be enjoying the safe and comfortable drive of the Chevrolet Tavera.

We would like to undertake a thorough check-up of the vehicle at 1000 kms or 30 days, whichever occurs earlier. This will also allow us to re-emphasise the salient features of the Tavera to you.

**In the unlikely event of an emergency assistance, please call your nearest CHEVROLET retailer as mentioned in this booklet or please feel free to call our 24 hr. helpline at 1800 3000 8080.**

1000Km/30 days Reassurance check-up

VIN no. : \_\_\_\_\_

PDI no. : \_\_\_\_\_

Date of service \_\_\_\_\_

Date of delivery \_\_\_\_\_

Retailer code \_\_\_\_\_

Customer's name \_\_\_\_\_

Customer's tel no. : \_\_\_\_\_

I confirm that the vehicle has been inspected and delivered to my satisfaction.

Customer signature \_\_\_\_\_

1000 kms Reassurance check-up	
General Status review	Hazard indicator & all other telltale lamp
Check closing efforts of doors, key less entry system, sunroof & other functions	Cigarette lighter/rear defogger auto cut off
Under hood	Check lighting system
Visually check routing, leaks & damage	Horn/Radio/OutsideMirrors/ auto parking mode
— Check fluid levels	High/Low beam/Hazard signal
— Engine oil level	Turn signal / Flash to pass signal
— Brake / Clutch oil level	Front/Rear fog lamps/Tail lamps
— Coolant level	Stop lamp/Reversing lamp/ Trunk lamp
— Power steering oil	Dynamic Evaluation
Windscreen washer level & add washer fluid	Steering function/noise/ abnormal drag
Check & adjust belt tension	Clutch & gear shifting function/noise
Underbody, wheels	Accelerating & braking function/noise
Visually check routing, leaks & damage	Check tyres
Check tyre pressure	Any other abnormal noise
Electrical Checks	
Engine check lamp	
Charging lamp	
Oil pressure lamp	
Parking brake lamp/indicator	
High beam/Turn signal	

---

## CHEVROLET Inspection

2nd Service Check One Year /10000 kms whichever occurs earlier

VIN \_\_\_\_\_

Regn. No: \_\_\_\_\_

Delivery Date \_\_\_\_\_

Date : \_\_\_\_\_

Kms: \_\_\_\_\_

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour is free & parts are chargeable

(Retain with Job card)

## CHEVROLET Inspection

1st Service Check Six months /5000 kms whichever occurs earlier

VIN \_\_\_\_\_

Regn. No: \_\_\_\_\_

Delivery Date \_\_\_\_\_

Date : \_\_\_\_\_

Kms: \_\_\_\_\_

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour is free & parts are chargeable

(Retain with Job card)

---

Delivering retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

---

Servicing retailer's / ASO stamp & date

---

Delivering retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

---

Servicing retailer's / ASO stamp & date

---

## CHEVROLET Inspection

4th Service Check Two Years /20000 kms whichever occurs earlier

VIN \_\_\_\_\_

Regn. No: \_\_\_\_\_

Delivery Date \_\_\_\_\_

Date : \_\_\_\_\_

Kms: \_\_\_\_\_

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour & parts are chargeable

(Retain with Job card)

## CHEVROLET Inspection

3rd Service Check Eighteen months/15000 kms whichever occurs earlier

VIN \_\_\_\_\_

Regn. No: \_\_\_\_\_

Delivery Date \_\_\_\_\_

Date : \_\_\_\_\_

Kms: \_\_\_\_\_

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour & parts are chargeable

(Retain with Job card)

---

Delivering retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

---

Servicing retailer's / ASO stamp & date

---

Delivering retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

---

Servicing retailer's / ASO stamp & date





---

## Battery

Battery type : \_\_\_\_\_

Battery make : \_\_\_\_\_

Battery number : \_\_\_\_\_

## Important Instructions

- The battery must be fitted firmly in the cradle.
- Connecting cables and connectors must be fastened securely on to the battery.
- Connections must be made in the right polarity.
- Terminals must be kept coated with petroleum jelly/vaseline. DO NOT USE GREASE.
- Battery top & vent plugs must always be kept clean & dry .
- Electrolyte level must always be maintained in line with the bottom of the vent hole. In case of any drop in electrolyte level, add pure distilled water. NEVER ADD ACID.
- Battery is warranted for a period of one year only.
- Liability under this warranty is limited to defects arising out of faulty material or workmanship developing under proper use and NOT when the battery is merely discharged.

- Defects arising out of faulty vehicle electrical systems, negligent maintenance, incorrect charging or improper filling of the battery by unauthorised dealers/auto electricians are not covered by warranty.
- Consequent liabilities are not covered by this warranty policy.
- **Get Battery checked every 3 months.**

CHEVROLET Retailer's  
Stamp

---

# Battery Service Record

Date	Specific Gravity	Voltage	Remarks	Retailer stamp & signature

## Standard limited warranty coverage

### 1. SCOPE

General Motors India Private Limited, a private limited company incorporated in India under the Companies Act 1956 bearing CIN U34100GJ1994PTC021818 and having its Registered office at Shreenathji Compound, Survey No. 1871, Naz Road, Village Jetalpur, Taluka Daskroi, Ahmedabad, Gujarat – 382 426 (“General Motors India”) warrants that your new Chevrolet Tavera (“Vehicle”) is free from defect in material or workmanship, subject to your compliance with the following terms and conditions mentioned hereunder and other vehicle maintenance norms as mentioned elsewhere in this service booklet.

Only an authorized CHEVROLET Retailer as mentioned in this booklet will make the necessary repairs, using new, re-conditioned or re-manufactured parts with a view to correcting any defect covered by this New Vehicle Warranty.

### 2. WHAT IS COVERED

Time and distance limits for "New Vehicle Warranty" coverage.

Warranty Type	Warranty Limits	OTHER WARRANTIES
<b>A : General</b>	Three(3) years or 1,00,000 kms (whichever is earlier from the date of delivery by a Chevrolet authorized retailer or the date of first registration of the motor vehicle, whichever occurs first.	These parts are covered by other warranties : <ol style="list-style-type: none"> <li>1. Battery (one (1) year) (covered by the Battery manufacturer*)</li> <li>2. Tires (one (1) year) (covered by the tire manufacturer*)</li> <li>3. Audio/Radio (one (1) year) (covered by the Audio/Radio manufacturer*)</li> <li>4. FIP one (1) year from date of sale*</li> </ol>

\*Service / warranty shall be provided by the concerned equipment manufacturer.

- 
- The obligation under this New Vehicle Warranty is limited to the repair of the new motor vehicle at no charge by the CHEVROLET authorized retailer during the New Vehicle Warranty period. For parts replaced during such repair the same warranty applies until the end of the New Vehicle Warranty period as stipulated herein. All warranty claims expire at the end of the New Vehicle Warranty period as specified under Clause 2. The Owner is responsible for any repair or replacement which are not covered by this warranty.
  - Liability of **General Motors India** under this New Vehicle Warranty is limited to the value of the service, repairs/ replacement of parts found to be defective within the warranty period. Beyond servicing and/or repairing defective parts in the vehicle, **General Motors India** does not undertake to replace the vehicle / or reimburse the purchaser by payment of any money in respect of the vehicle purchased by them.
  - Under the terms of New Vehicle Warranty, installation, free service will be provided only within the municipal limits of the cities/towns where **General Motors India** has its service network, **as elaborated elsewhere in this Service booklet. This list of authorised Chevrolet retailers is subject to change/modification without prior notice.** Service outside the municipal limits specified above will be provided after charging the actual to and fro traveling and incidental expenses, as prevailing from time to time.
  - Necessary care and caution is taken in manufacturing of the vehicle, however, **General Motors India** shall not be liable for any loss or damage caused to any article, property, death or disability caused to any human life arising out of fire, electric fault, short circuit, accidental handling or negligent use of the vehicle. The maximum liability in monetary terms shall be restricted to the value of the defective parts and / or value of services rendered only. Furthermore, the New Vehicle Warranty, in no case, shall extend to the payment of any monetary consideration whatsoever, of the replacement or return of the vehicle as a whole.
  - The decision of **General Motors India** will be final and binding on all matters arising out of this New Vehicle Warranty.
  - The owner should preserve the original Invoice for necessary verification and produce the same, as and when required.
  - The optimum performance of the vehicle is under standard test conditions.

This New Vehicle Warranty is issued at Halol, district Panchmahals, Gujarat and competent courts shall have exclusive jurisdiction over matters by or following from this New Vehicle Warranty. All disputes shall be decided as per the Indian laws that may be prevalent from time to time.

---

### 3. WHAT IS NOT COVERED

Please read the followings carefully;

- a. Failure to have the required periodic inspection and required service performed as mandated elsewhere in this service booklet.
  - b. Improper or wrong maintenance and in deviation with guidelines mentioned in this service booklet.
  - c. Any modification, alterations made to the vehicle such as including but not restricted to adding lights, changing engine specifications to increase horsepower, or using wide tires, and or any other modification in the vehicle that may likely to have an effect on the performance of the vehicle. (e.g.: a defect caused by the installation of non homologated wheels and tires are not covered by the warranty.
  - d. Failure to use genuine parts, /fluids (oil, coolant, gas) and / or other accessories / consumables recommended or approved by General Motors India.
  - e. Use of the vehicle for purposes or in a manner other than the one mentioned in the owner's manual. Exceeding specified capacities such as loading weight, passenger, speed, use as a commercial vehicle and rpm limitations.
  - f. Damage caused by driving the vehicle under severe conditions such as un-pliable or water-logged roads, in races or rallies..
  - g. Damage caused by natural disasters including but not restricted to earthquakes, storms, floods, fire and accidents. The owners are recommended to keep their vehicle insurance valid at all times.
  - h. Damage caused by smoke, chemicals, bird-droppings, salt, stone chipping, scratches, iron dust or any other extraneous circumstances like external mechanical or chemical influences (regarding paint or body damage, specially stone throw, air-borne rust, industrial fall out, damage to catalytic converter due to use of wrong/bad quality fuel) acting on the vehicle.
- i. Damage caused by normal wear (for instance brake-pad, etc.) or exposure to the elements such as discoloring or deformation of any interior, plastic, chrome or painted part or surface.
  - j. Sensory complaint by the owner against symptoms such as noise, vibration or oil stains which do not affect performance.
  - k. Damage which should have been detected during normal usage but became serious when left unattended to and/or the owner of the vehicle having failed to claim and having rectified a defect which was already apparent during vehicle delivery, immediately after delivery or a defect which becomes apparent at a later date immediately after it became apparent.
  - l. Failure of the owner to adhere to the requirements outlined in Clause 4.
  - m. Fuel system damage caused by water or other foreign matter in the fuel system.
  - n. Damage caused by the installation of accessories or equipment after the vehicle has been purchased from the Chevrolet authorized retailer such as radio, car telephone, CD radio set, or cargo carrier and / or other activities of a similar nature.
  - o. Consumptive parts and oil/grease and other fluids. (See the following tables of consumptive parts and oil/grease and other fluids.)
  - p. Adjustments, cleaning, inspection, or required periodic maintenance.
  - q. Parts designated as requiring periodic replacement.
  - r. Warranty repair not performed by a Chevrolet authorized retailer.
  - s. Charges or fees for telephone, tow, transportation charges of the vehicle to the nearest Chevrolet authorized retailer, rental car, and

so forth; compensation for inconvenience or commercial losses; all other consequential costs relating to the owner being unable to use the vehicle.

- u. Damage to the engine while driving in water logged conditions or entry of water in to the engine.
- v. Any accident, damage, loss or destruction due to negligent, careless use of vehicle.

Consumptive Parts	Oil/Grease and other fluids:
Belt	Engine oil
Air cleaner element	Transmission oil
Fuel filter	Differential oil
Oil filter	Brake/clutch fluid
Clutch disk, clutch parts	Coolant
Brush holders (for ECVT)	Grease
Brake linings	Washer fluid
Brake disks	Battery fluid
Brake drums	Diesel
Wiper blades	Air conditioner refrigerant
Light bulbs	Other lubricants, etc.
Motor brushes	
Hoses	
Fuses, etc.	
Spring bushing	

No warranty repair shall be made if it is found that the vehicle Identification number like chassis / engine number, odometer or the warranty & service booklet, have been tampered with. This list is neither exclusive nor exhaustive and the decision of General Motors India shall be final and binding.

#### 4. WHAT THE OWNER MUST DO

- In order to keep this warranty valid you must:
- a. Use your vehicle as instructed in the owner's manual.
  - b. Have your vehicle inspected according to this schedule.  
The cost of the service is borne by the owner. If the services are not performed within the specified time limits, the general and any other warranty as referred to under Clause 2 above, shall be rendered null and void and shall not be reinstated by a subsequent service.
  - c. Keep the warranty & service booklet and all receipts in a safe place to present to the Chevrolet authorized retailer at regular maintenance visits and when repair work is required.

#### 5. PARTS COVERED BY OTHER WARRANTY CONDITION

- a. Battery : The coverage period is 1 year from the date of new vehicle registration regardless of the distance traveled. This warranty is covered by Battery manufacturer.
- b. Tires : The coverage period is 1 year from the date of new vehicle registration. This warranty is covered by the tire manufacturer.
- c. Audio/Radio : The coverage period is 1 year from the date of new vehicle registration. This warranty is covered by the audio/radio manufacturer.
- d. FIP one (1) year from date of sale

#### 6. MAKING THE WARRANTY EFFECTIVE

The warranty goes into effect after Chevrolet authorized Retailer fills in the appropriate information about your vehicle and places the retailer's official seal and signature in the warranty & service booklet.

---

**7. REQUIREMENTS FOR WARRANTY WORK**

To have warranty work carried out, present the warranty & service booklet to the authorized Chevrolet Retailer as mentioned in this booklet. If the warranty & service booklet is lost or incomplete, work to be carried out with respect to the standard warranty shall be refused.

**8. CHANGE OF OWNERSHIP**

If the vehicle is sold during the warranty period, please deliver the warranty & service booklet to the new owner.

The new owner will need to complete the change of address or subsequent ownership notification card located elsewhere in this booklet in order for the coverage to be transferred.

**9. EXPENSES ASSOCIATED WITH WARRANTY WORK**

The expenses of repair work and parts of your Chevrolet will be covered by Chevrolet standard limited warranty in accordance with the WARRANTY & SERVICE BOOKLET. Other expenses that are not covered by the Chevrolet Standard Limited Warranty must be covered by the owner.

- 10.** General Motors India Private Limited is launching the Chevrolet Tavera in different cities in a phased manner. The Chevrolet retailer responsible for delivering your Tavera is qualified to provide all Tavera related services within the city where the dealership is located. As other Chevrolet retailers become operational to handle the Tavera, they will also be able to provide similar Tavera related services. **IN ORDER FOR THE WARRANTY ON YOUR VEHICLE TO APPLY, IT IS IMPERATIVE THAT YOUR TAVERA BE SERVICED, HANDLED AND ATTENDED TO ONLY BY CHEVROLET RETAILERS AS SET FORTH IN THIS BOOKLET.**

- 11.** The following requisite document should be presented to the Chevrolet Retailer at the time of making a claim under New Vehicle Warranty:

- Original invoice issued by a CHEVROLET Retailer.
- This warranty and service booklet Service / maintenance record
- Any other document deemed to be necessary by CHEVROLET retailer and/or General Motors India

---

## Emission Warranty

( Applicable in NCR Delhi,  
Chennai, Kolkata and Mumbai )

Subject to other terms of the warranty policy and the conditions and obligations laid down hereunder, General Motors India Pvt. Ltd., hereafter called GMI, certifies that the components liable to affect the emission of the gaseous pollutants in the vehicle in the normal use despite the use to which it may be subjected, comply with the provisions of Rule 115 (2) of the Central Motor Vehicle Rules, 1989, and further warrants that if on examination by a service center duly authorized by the GMI, the vehicle is discovered to be failing to meet the emission standard as specified in the said rule, our authorized service center shall take such corrective measures as may be necessary and shall at its sole discretion either repair or replace free of charge such components of emission control system as are specified in Annexure II hereof.

The definitions of various terms used in Emission Warranty proposal are given in Annexure –I. These definitions shall be in line with the definition of the existing product Warranty definition.

Conditions :

1. This warranty will be in addition to and will run concurrently and parallel to the product warranty and will apply only in respect to components as mentioned in Annexure-II.

2. The period of the vehicle's warranty shall commence from the date of the vehicle sale.
- 2.1 Warranty period - 1,00,000 kms or 3 years whichever occurs earlier, from date of the vehicle sale.
- 3 The warranty claim will be accepted only after examination carried out by Authorised Service Centers leading to a firm conclusion that none of the original settings /specifications have been tampered with and that the components (s) as mentioned in Annexure – II has/have a manufacturing defect, and /or, that the vehicle is unable to meet the In-use emission standard, as described in Sr. No. 3 above with the instructions in the Owner 's Manual (OM).
4. The methods of examination to determine the warrantable condition of the components will be at sole discretion of GMI and or its authorised service centers and results of such examination will be final and binding. If, on examination, the warrantable condition is not established, GMI will have the right to charge full, or part, of the cost of such examination and resulting repairs /rectification
5. In case of acceptance of the warranty under Emission Warranty, GMI will replace, at Authorized Service Centers, free of charge, the components which are covered as mentioned in Annexure-II, but the consumables as mentioned in OM shall be charged as per actual applicable rates.
6. In case of a vehicle in which the components covered under Emission Warranty or the associated parts, are not independently replaceable, on account of their being integral parts of a complete assembly, GMI will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
7. Any consequential repairs or replacement of parts which may be found necessary to establish compliance to In-use emission standards, in addition to the replacement of the components covered under Emission Warranty, will not be made free of cost unless such parts are also found to be in a warrantable condition within the scope and limit of the product Warranty (Chevrolet Tavera-3 years / 1,00,000 kms, whichever is earlier). The consumables and labour shall be charged per actual during such repairs or replacement of parts.
8. All the parts removed for replacement under warranty will be the property of GMI.
9. GMI will not be responsible for the cost of transportation of the vehicle to the nearest Authorized Service Center or any loss due to non-availability of the vehicle during the period of a warranty claim and examination by GMI/Authorised Service Centers and repairs.
10. GMI will not be responsible for any fines, penalties that may be charged by Statutory or Regulatory authorities on account of failure of the vehicle to comply with the

- In-use emission standards on the vehicle not meeting any such given legal/regulatory requirement, during inspection by such authorities.
11. Emission Warranty will be applicable irrespective of the change of ownership of the vehicle provided all the conditions as laid down in this document are met from the date of original sale of the vehicle.
- This Emission Warranty will be applicable only if the customer:
- (i) Observes all the important instructions and any other precautions listed in the OM for use of the vehicle.
  - (ii) Under all circumstances uses lubricants and fuel as recommended by manufacturer.
  - (iii) Regularly obtains and carries out maintenance at GMI Authorised Service Centers as per the list in this booklet only, in accordance with GMI guidelines and enters the details in the Logbook/Service Book.
  - (iv) Immediately approaches the nearest Authorized Service Center as per the list in this booklet upon discovery of failure to comply with the In-use emission standard inspite of having maintained and used the vehicle in accordance with the instructions in the OM and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
  - (v) Produces the 'Pollution Under Control (PUC)' certificate valid for the period immediately preceding the test during

- which the failure is discovered, the test having been carried out either for obtaining a new certificate, or pursuant upon being directed by an officer as referred to in sub –rule (2) of Rule 116 of the Central Motor Vehicles Rules,
- (vi) Produces the Logbook provided with OM and all relevant bills for verification of details.
  - (vii) Produces receipts covering maintenance of the vehicle as specified in the OM from the date of original purchase of the vehicle.
  - (viii). Produces valid certificate of insurance & RTO registration.
- Conditions under which warranty is NOT applicable:
1. Non production/availability of a valid 'Pollution under Control' certificates as described in customer obligation (V).
  2. In case the vehicle is not serviced by GMI Authorised Service Centers as per the list in this booklet as per the service schedule described in the maintenance chart given in the OM.
  3. A vehicle, which has been subjected to abnormal use, abuses, neglect and improper maintenance or has met with an accident.
  4. Use of such replacement parts, which are not specified and approved by GMI.
  5. If the vehicle or parts thereof, have been altered, tampered with or modified or replaced in an unauthorized manner.

6. A vehicle on which the odometer is not functioning or the odometer has been changed or the reading of which has been changed / tampered with so that the actual mileage cannot be readily determined.
7. A vehicle, which has been used, for competitions, races, rallies or for the purpose of establishing records.
8. Examination by GMI or our Authorized Service Centers as per the list in this booklet of the vehicle shows that any of the conditions stipulated in the OM with regard to use and maintenance have been violated.
9. A vehicle, which has been run on adulterated fuel or lubricant or fuels/ lubricants other than those, specified by GMI.

Scope and Limits:

1. This emission warranty is in addition to the product warranty for the vehicle as per the scope and limit described in the OM and all conditions described therein will apply, in addition to those exclusively stipulated in this warranty.
2. The emission warranty covers only compliance with the emission standard as specified in sub rule (2) of Rule 115 of CMVR. It does not cover any other performance of these parts or routine test and consequent maintenance or adjustments to establish compliance to the in-use emission standard as applicable to the state, in which the vehicle is registered and is in use.

---

## Annexure-I

### Definitions:

1. Vehicle : The Motor Vehicle approved for sale within India under the provisions of Central Motor Vehicle Rules, 1989 or any subsequent amendment or substitution thereof.
2. Owner Manual (OM) : A document given to the customer at the time of sale of the vehicle giving guidelines on use and maintenance of the vehicle including the terms and conditions of Warranty.
3. Maintenance : Maintenance as per the schedule provided in the owner's manual by GMI including inspection, verification check, adjustment and replacement, if necessary.
4. Logbook : The scheduled service record book, which shall be issued at the time of first sale to the customer.
5. Abnormal Use : The situations when the vehicle is put to use other than that intended by GMI such as racing, overloading or use of adulterated fuel or fuel not recommended by GMI.
6. Manufacturing Defect : Means deficiency or deviation from normal production tolerance in design, material, or workmanship in a device or system which affects any parameter, performance, or component belonging to emission control system.
7. Product Warranty : The manufacturer warranty as provided by GMI, which covers failure of various parts and systems as per the OM. 3 years / 1,00,000 kms (Whichever is earlier).
8. Emission Warranty : Warranty for emission performance of the vehicle as determined by sub-rule (2) of rule no 115 of the Central Motor Vehicles Rules, 1989.
9. Authorized Service Centers : Any service facilities authorised by GMI to perform warranty repairs. This shall include all of GMI dealerships that are recognised for service of subject vehicles or any other service center duly authorised by GMI.
10. Warrantable Condition : Warrantable condition means any condition of a vehicle, which triggers the responsibility of GMI to take corrective action within the framework of Emission Warranty. This however shall not include any statutory or regulatory fines or penalties.
11. Warranted Parts : Those components, listed as per Annexure –II.

---

## Annexure - II

### List of Components Covered under Emission Warranty

S. No.	Part name
1	Catalytic Converter***
2	Exhaust manifold gasket
3	Electronic Control Module
4	Idle Air Control Motor
5	Manifold Absolute Pressure Sensor
6	Throttle Position Sensor
7	Air Temp. Sensor
8	Oxygen sensor
9	Coolant Temperature Sensor
10	Injectors
11	Knock sensor
12	Fuel Injection Pump 'D' Repair/ Re-caliberation
13	Exhaust Gas Re-circulation Valve

\*\*\* Catalytic Converter is covered only for emission related failures as provided under the warranty statement. Replacements if any shall not be applicable for breakage and noise problems

Note : All the above mentioned parts are covered only if the car fails to meet the prescribed Emission norms. Any other performance problems shall be treated as not relevant to the Emission Warranty. All the above parts may not be part of the vehicle and depend on engine type.



## 24x7 ROADSIDE ASSISTANCE

How to request assistance .....	190
Benefits .....	191
Covered area .....	191
Chevrolet Roadside Assistance at home or on the road .....	191
Vehicle recovery following mechanical or electrical breakdown .....	191
Vehicle recovery following an accident .....	192
Taxi benefit .....	192
Urgent message relay .....	192
Locked keys/lost key .....	192
Non covered events under the Chevrolet Roadside Assistance program .....	192
Special exclusions .....	194
Adverse weather .....	194
Force majeure .....	195
External factors .....	195
Right of refusal .....	195
Disputes .....	195
Summary .....	195
Disclaimer .....	196



**24x7x365 Days Access to Toll Free Number**



**Fuel Assistance**



**Taxi Assistance**



**Tyre Assistance**



**Key Lockout Services**



**Towing Facility**



**Battery Jump Start**

---

The Chevrolet Roadside Assistance Program is focused to enhance your overall Chevrolet ownership experience by providing 24x7 Roadside Assistance emergency support for a period of three years starting from the date of invoice of the Chevrolet vehicle sold from an authorized CHEVROLET retailer, in the unfortunate event of vehicle breakdown or accident of your Chevrolet vehicle. The Chevrolet Roadside Assistance Program has specially been designed to take care of your car's safety and your comfort. The Benefits and the Terms & Conditions of the Chevrolet Roadside Assistance Program are mentioned in this Owner's Manual. You are therefore, requested to read this Owner's Manual very carefully.

### **HOW TO REQUEST ASSISTANCE**

In the event of a breakdown or accident, simply call the Chevrolet 24x7 Roadside Assistance Program on Toll Free Number\* **1800 103 8090**. (\*In case of difficulty in reaching this toll-free number from your phone network, please dial **0124-4388090**. Call charges apply.)

Please have the following information in hand when you call for assistance:

1. Your name and contact phone number.
2. Vehicle registration number.
3. Vehicle identification number (VIN) mentioned in the vehicle registration certificate.
4. Vehicle model.
5. Date of invoice.
6. Name of the authorized retailer from whom Chevrolet vehicle was purchased.
7. Brief description of the problem faced.
8. Specific location of the vehicle along with the nearest landmark.

The Chevrolet Roadside Assistance Program is available only if the above mentioned dial-in numbers are contacted.

### **REMARKS**

1. Once you have called Chevrolet Roadside Assistance Program, it is advisable that you stay with your vehicle.
2. Park your vehicle on the edge of the road and put the hazard warning lights on.
3. If you are on a highway, place the warning triangle provided with the Chevrolet vehicle approximately 3 meters from the vehicle in the direction of the on-coming traffic.

---

## **BENEFITS**

Chevrolet Roadside Assistance Program can be availed when your vehicle is immobilized due to:

1. Mechanical or electrical breakdown.
2. Road traffic accident where the vehicle is immobilized.
3. Human error.
4. Battery problems: Dead battery.
5. Fuel problems: Out of fuel, incorrect fuel or contaminated fuel.
6. Key problems: Locked keys, lost keys or broken vehicle keys.
7. Tyre problems: Puncture – replace with spare tyre available in the vehicle, bolts or valve related issues.

## **COVERED AREA**

Customers are entitled to the Benefits provided under this Chevrolet Roadside Assistance Program on a PAN India level (only exception in coverage is Andaman Nicobar Islands, where this Chevrolet Roadside Assistance Program is currently not available), provided however the Chevrolet vehicle has broken down on gazette, bitumen/concrete road. Chevrolet Roadside Assistance Program will also be provided to a customer when at home, on the roadside, on the highway, in a parking lot, etc., but if you are already at an authorized CHEVROLET retailer, then you are not entitled to the Benefits under the Chevrolet Roadside Assistance Program.

## **CHEVROLET ROADSIDE ASSISTANCE AT HOME OR ON THE ROAD**

If your Chevrolet vehicle is immobilized whether at home or on the road, Chevrolet Roadside Assistance Program personnel will attend to your Chevrolet vehicle. If the problem is something that can be resolved at the roadside, a mobile technician will be sent to mobilize your vehicle at the roadside.

## **VEHICLE RECOVERY FOLLOWING MECHANICAL OR ELECTRICAL BREAKDOWN**

If your Chevrolet vehicle is unable to be mobilized following a mechanical or electrical breakdown, a recovery vehicle will be sent to recover your Chevrolet vehicle to the nearest authorized CHEVROLET retailer.

---

## **VEHICLE RECOVERY FOLLOWING AN ACCIDENT**

If your Chevrolet vehicle is unable to be mobilized following a road traffic accident, Chevrolet Roadside Assistance Program personnel will organize to send a recovery vehicle to recover your Chevrolet vehicle to the nearest authorized CHEVROLET retailer, however all the costs towards repairs will be borne exclusively by you.

## **TAXI BENEFIT**

If your Chevrolet vehicle is recovered to an authorized CHEVROLET retailer by Chevrolet Roadside Assistance Program personnel, the driver and passengers, if any, of the Chevrolet vehicle will be provided with one free taxi ride, up to 50 kms from the breakdown location, in order to continue your journey. The maximum number of persons that can avail this facility would, at no point of time, exceed the number of people including the driver, Chevrolet vehicle is permissible to carry under the applicable rules and regulations.

## **URGENT MESSAGE RELAY**

You will be provided an urgent message relay service to help keep in contact with family, friends and/or work colleagues in the event of a vehicle breakdown or accident.

## **LOCKED KEYS/LOST KEY**

Whilst we will always endeavor to provide assistance by the most efficient method, however, modern security systems sometimes make it extremely difficult for us to gain entry to your vehicle at the roadside should the spare keys not be available. If a forced emergency entry is required, you will be asked to provide the approval granting the Chevrolet Roadside Assistance Program personnel the requisite permission to gain this access and further confirm that all repair costs relating to any resulting damages to your vehicle will be your sole responsibility and borne by you or customer's car may be towed to nearest authorized CHEVROLET retailer. In the event of lost key, provision of retrieving spare key from home will be provided only, if the event has occurred in the city you are residing.

## **NON COVERED EVENTS UNDER THE CHEVROLET ROADSIDE ASSISTANCE PROGRAM**

Chevrolet Roadside Assistance Program is designed to help in events that lead to stoppage / immobilization of your vehicle. As a result, this program will not cover any of the following events that you may encounter while driving your vehicle:

- 
1. Faulty fuel gauge.
  2. Speedometer not working.
  3. Air-conditioning not working.
  4. When the passenger door (s) cannot be opened and there are no passengers in the vehicle.
  5. Boot cannot be opened.
  6. The front and/or rear demisters are not functioning.
  7. Horn is not functioning. However, if the horn is sounding continuously, the Chevrolet Roadside Assistance Services will be provided.
  8. Damaged door mirrors.
  9. When the rear view mirror is damaged but it does not obstruct the driver's vision.
  10. Damaged or faulty fuel cap but vehicle has not run out of fuel and there is enough fuel in the tank to enable the vehicle to reach the nearest authorized CHEVROLET retailer.
  11. When the sunroof cannot be opened.
  12. When the sunroof cannot be closed but weather conditions are fair and the vehicle is not exposed to any security risk.
  13. When the windows cannot be opened.
  14. When the windows cannot be closed but weather conditions are fair and the vehicle is not exposed to any security risk.
  15. Seat adjustor is faulty but the vehicle can be safely driven.
  16. When the passenger seat belts are faulty but there are no passengers in the vehicle.
  17. Faulty security system unless the vehicle is immobilized or unless the alarm is sounding continuously.
  18. Transmission stuck in sports/winter mode.
  19. When the ABS lights are illuminated.
  20. Air bag warning lights are illuminated.
  21. Traction control lights are illuminated.
  22. Other non-safety related lights/service warnings are illuminated.
  23. When your vehicle runs out of windscreen wiper fluid.
  24. Front windscreen wipers faulty but weather conditions are fair.
  25. Rear windscreen wiper faulty.
  26. Vehicle pick-up and drop for routine maintenance is not included.

---

## **SPECIAL EXCLUSIONS**

The following scenarios are special exclusions under the Chevrolet Roadside Assistance Program, and therefore neither CSIPL nor its authorized retailers will be responsible for any assistance/repair costs and are excluded from Chevrolet Roadside Assistance Program:

1. Vehicle is involved in motor racing, rallies, speed or endurance tests, practice runs or operated outside official roads.
2. Assistance is required as a result of wars, riots, uprising, mass political demonstrations, pillage, strike, use for military purposes or acts of terrorism, earthquake damage, freak weather conditions, atmospheric phenomena, nuclear transformation phenomena or radiation caused by artificial acceleration of atomic particles.
3. Breakdown is caused by deliberate damage, vandalism or participation in a criminal act or offence.
4. The immobilization is resulting from damage caused by intervention of the police or other authorities.
5. Any damage resulting from the use of the vehicle against the recommendations of the Owner's Manual.
6. Any consequential costs and/or damage to property as a result of a breakdown in or on the vehicle.
7. Any cost as a result of damage and or claim caused while the driver was operating the vehicle under the influence of alcohol, solvent abuse, drugs or other illegal substance.
8. Vehicles kept in a non-roadworthy condition or not serviced in accordance with the manufacturer's recommendations and any such other events that may be decided by CSIPL from time to time.

## **ADVERSE WEATHER**

On occasion of adverse weather conditions such as floods, heavy rain, thunder, lightening or other external factors, which may affect our ability to provide the services effectively and it may become physically impossible to assist you until the weather improves. During such time, our main priority will be to provide the necessary assistance to you and the passengers to be taken to a place of safety. The recovery of your vehicle may not be possible until the weather condition permits.

---

## **FORCE MAJEURE**

CSIPL shall not be liable for its inability to provide the services under the terms of service set out in this Owner's Manual if such inability to provide the services is caused or contributed by causes beyond CSIPL's reasonable control including but not limited to acts of god, acts of public enemy or statutory authorities or courts, terrorism, or any acts of any person engaged in subversive activity or sabotage, strikes, embargoes, public rallies and protests.

## **EXTERNAL FACTORS**

You agree and understand that though Chevrolet Roadside Assistance Program will make every effort to reach you once you have made the call and the call is registered however, external conditions including traffic could delay such an effort.

## **RIGHT OF REFUSAL**

Chevrolet Roadside Assistance Program shall have the right to refuse any or all benefits under the program, if it is found that the information furnished by you at the time of making the request for assistance are false.

## **DISPUTES**

All disputes arising out of this Roadside Assistance Program shall be submitted to a sole arbitrator to be appointed by CSIPL and the place of arbitration shall be CSIPL Office at Gurgaon, Haryana. The arbitration proceedings shall be governed by the Arbitration and Conciliation Act, 1996 and shall be conducted in English. The Courts of Delhi shall have the jurisdiction.

## **SUMMARY**

### **AFTER READING THIS OWNER'S MANUAL, YOU SHOULD UNDERSTAND:**

1. The scope of Chevrolet Roadside Assistance Program.
2. You should at all times retain the Owner's Manual and produce whenever required.
3. This Owner's Manual must remain with the Chevrolet vehicle, if the vehicle is resold.

If you have any questions, your authorized CHEVROLET retailer / Chevrolet Roadside Assistance will be happy to assist you.

## DISCLAIMER

CSIPL shall be under no liability whatsoever in respect of any loss or damages arising directly or indirectly due to any delay or non-delivery of the services under the CSIPL Roadside Assistance Program. In case the vehicle cannot be mobilized on-site, Customers are advised to use the towing facility as may be arranged by CSIPL Roadside Assistance Program Vendor personnel for taking the vehicle to the nearest authorized workshop. In no condition, shall the vehicle be towed to any unauthorized workshop. Customer agrees, that it shall be a condition precedent that the Customers remove their personal belongings like laptops, wallets, mobile phone and other such valuable items before allowing the Roadside Assistance Vendor personnel to tow the vehicle and also take an inventory list of other belongings inside the vehicle including, the current physical conditions of the vehicle like dents, scratches, tools and spare tyre and to verify the list before taking possession of the vehicle from the authorized workshop. CSIPL at its discretion may refuse to render these services to any such Customers who in the reasonable discretion of CSIPL is misrepresenting the facts, in relation to the vehicle or any other details sought by the Roadside Assistance call center or the personnel and/or in the event of unruly, rude, use of abusive and foul languages, physical abuse and such other similar behavior to the Roadside Assistance Vendor's personnel by the Customer or the occupant of the vehicle. CSIPL reserves the right to change or modify any of the services and the charges thereto that are rendered in this Roadside Assistance Program without any notice.

FIND NEW ROADS®



**24x7** **ROADSIDE ASSISTANCE**



**1800-103-8090**  
**(Toll Free No.)**  
**0124-4388090**

---

## CHEVROLET SALES INDIA SALES AND SERVICE NETWORK

North zone.....	198
West zone .....	204
South zone .....	209
East zone .....	214
International .....	217

★ Indicates Retailer (Sales and Service)

○ Indicates Chevrolet Authorized Service Center

Authorized Service Center (ASC) are authorized to carry out Periodic Maintenance (Free/Paid, Minor Running Repair) Only.

The list of authorized Retailers / ASC are mentioned herein as of October, 2014. For any change in authorized Retailers / ASC, please visit [www.chevrolet.co.in](http://www.chevrolet.co.in).

## NORTH ZONE

### STATE - DELHI

- \* **Auto Vikas Sales & Service Pvt. Ltd.**  
**Workshop :**  
I2-A, Shivaji Marg, Najafgarh Road,  
New Delhi - 110015  
Tel. : 011 - 42070707, 42070788  
Fax : 011 - 25451004, 42070735
- \* **Ganganagar Automobiles Pvt. Ltd.**  
**(Aarav Chevrolet)**  
**Showroom :**  
11 - A, Shivaji Marg, Moti Nagar,  
Opp. L & T Building, New Delhi - 110 015  
Tel. : 011 - 41238888
- Workshop:**  
56, Rama Road, Opposite Radha Palace Banquet Hall,  
New Delhi - 110 015  
Tel. : 011 - 49258888, 8826292810, 8826292815
- \* **Arya Automobiles**  
**Showroom :**  
Plot No. 193, Metro Pillar No. 543,  
Main Rohtak Road, Mundka, New Delhi - 110 041  
Tel. : 011 - 8743030301 / 302  
Fax : 011 - 28342887
- Workshop :**  
KH-82/21/2 & 22/2, Phirmi Road, Udyog Nagar  
Industrial Area, Near Mundka Metro Pillar No. 547,  
New Delhi - 110 041  
Tel. : 011 - 28342884
- \* **Go Auto Pvt. Ltd.**  
**Showroom :**  
A 231, Okhla Industrial Area, Phase-1,  
New Delhi - 110 020  
Tel. : 011 - 41855500, 9015444555
- Workshop :**  
B-25, Okhla Industrial Area, Phase-1,  
New Delhi - 110 020  
Tel. : 011 - 41955500, 9015777888

- \* **Globus Motocorp Pvt. Ltd.**  
**Showroom :**  
ZB-43 & 44/487, Zulphe Bengal, Main GT Road,  
Dilshad Garden, Delhi - 110095  
Tel. : 011 - 43355555
- Workshop :**  
B-31, Jhilmil Industrial Area, Behind Jhilmil Metro  
Station, New Delhi - 110095  
Tel. : 011 - 43388888
- \* **Metro Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Bawa Potteries Industrial Complex,  
Aruna Asaf Ali Marg, Vasant Kunj - 110 070  
Tel. : 011 - 41761717, 46156666
- Showroom 2 :**  
A-2/6, Safdarganj Enclave,  
Africa Avenue, New Delhi - 110 029  
Tel. : 011 - 46146666 / 75
- \* **Sparsh Autotech Pvt. Ltd.**  
**Showroom :**  
D-12 & 13, Rajapuri, Madhuvihar, Opp. Sector-5,  
Dwarka, New Delhi - 110075  
Tel. : 011 - 49115911
- Workshop :**  
32/8, Shanti Garden, Matiala Industrial Area,  
Near DPS School, Dwarka, New Delhi - 110059  
Tel. : 011 - 49116911
- \* **Triumph Motors**  
**Showroom :**  
A-9/3 Wazirpur Industrial Area, Near Richi Rich,  
New Delhi - 110 052  
Tel. : 011 - 47444666  
Fax : 011 - 42475584
- Workshop 1 :**  
C-13, Plot No. 65, SMA Industrial Area, GTK Road,  
Opp. Jahangir Puri, Azadpur, New Delhi - 110 033  
Tel. : 011 - 47444777
- Workshop 2 :**  
G-14, Udyog Nagar, Rohtak Road, Peeragarhi,  
Delhi - 110 041  
Tel. : 011 - 42010101  
Fax : 011 - 42010132

### STATE - HARYANA

- \* **AMBALA**  
**Ambala Automobiles India Ltd.**  
**Showroom :**  
Ramgarh, Near Central Jail Bridge, Chandigarh Road,  
Baldev Nagar, Ambala City - 134 003  
Tel. : 0171 - 2543010  
Fax : 0171 - 2543510
- Workshop :**  
Barwala, Naraingarh Road, Ambala City - 134 003  
Tel. : 0171 - 2678013
- \* **BHIWANI**  
**Shailesh Automobiles**  
**Showroom & Workshop :**  
Rohtak Road, Bhiwani - 127021  
Tel. : 01664 - 204006/008
- \* **DADRI**  
**Shailesh Automobiles**  
**Showroom & Workshop :**  
Near Loharu Chowk, Bhiwani Road, Dadri - 127 306  
Tel. : 9253660069/70
- \* **FARIDABAD**  
**Regent Automobiles Ltd.**  
**Showroom :**  
14/3, Mathura Road, Faridabad - 121 003, Haryana  
Tel. : 0129 - 4088530 / 31  
Fax : 0129 - 2252304
- Workshop 1 :**  
14/5, Main Mathura Road, Faridabad - 121 003  
Tel. : 0129 - 2252151 - 55, 4261200
- Workshop 2 :**  
Plot No.57, Sector-27C, Opp. Crown Interiorz Mall,  
13/1, Mathura Road, Faridabad - 121 003  
Tel. : 0129 - 2577777
- \* **GURGAON**  
**Bhanu Motors Pvt. Ltd.**  
**Showroom:**  
Shop No. 4, Omaxe Wedding Mall, Main Sohna Road,  
Near Subhash Chowk, Gurgaon - 122001  
Tel. : 0124 - 4757777

**Workshop:**

Plot No. 541, Sector-37, Part-II, Gurgaon - 122001  
Tel. : 0124 - 4598888

\* **Gentech Toolings Pvt. Ltd.**

**Showroom & Workshop 1 :**  
Plot No. 66, IDC, Opp. Sector - 14  
Mehrauli - Gurgaon Road, Gurgaon - 122 001  
Tel. : 0124 - 4638751 - 54, 4368787  
Fax : 0124 - 4638700

**Showroom 2 :**

DLF City Court, Sikanderpur, Gurgaon - 122001  
Tel. : 9582216504, 9582216510

○ **Orix Auto Infrastructure Services Ltd.**

**Workshop :**  
7B, Sector - 18, Maruti Industrial Area,  
Gurgaon - 122 015  
Tel. : 0124 - 3014700 / 701 / 719  
Fax : 0124 - 3014702

**YAMUNA NAGAR**

\* **Oberoi Automobiles**  
**Showroom & Workshop :**  
Aggarsain Chowk, Near Gupta Palace,  
Jagadhri - 135 003  
Tel. : 01732 - 212030, 212010

**KURUKSHETRA**

\* **VPS Speciality Papers**  
**Showroom & Workshop :**  
Plot No.145 &146, Industrial Area, Sector 2,  
Kurukshetra - 136 118  
Telefax : 01744 - 231050

**HISSAR**

\* **Ashwani Automotors**  
**Showroom & Workshop :**  
9 km Stone, OP Jindal Marg, Hissar - 125 044  
Tel. : 01662 - 220710 / 11 / 12

**JHAJJAR**

\* **Shailesh Automobiles**  
**Showroom & Workshop :**  
Tehsil Road Jhajjar, Haryana - 124 001  
Tel. : 9253660066 / 9254171300

**JIND**

\* **Lekh Raj Motors Pvt. Ltd**  
**Showroom & Workshop :**  
Safidon Road, opp. Brahmim Dharamsala, Jind.  
Tel. : 9992900082

**KAITHAL**

\* **Lekh Raj Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Ambala Road, Kaithal, Haryana - 136 027  
Tel. : 0174 - 6226827

**KARNAL**

\* **Aryaman Automobiles**  
**Showroom & Workshop :**  
117/6, K.M. Milestone, Near Hotel New  
World, G. T. Road, Karnal - 132 001  
Tel. : 0184 - 2220011, 2220325  
TeleFax : 0184 - 2220025

**PANIPAT**

\* **Aryaman Motors**  
**Showroom & Workshop :**  
Plot No 64, Sector -25, Huda Industrial Area Phase 1,  
Panipat - 132 103  
Tel. : 0180 - 2666222 / 2666800

**ROHTAK**

\* **Badhwar Automobiles Pvt. Ltd.**  
**Showroom & Workshop :**  
Sonepat Road, Rohtak - 124 001  
Telefax : 01262 - 256666

**REWARI**

\* **Vardhman Automobiles Pvt. Ltd.**  
**Showroom & Workshop :**  
Opp. Gurudwara, Jhajhar Road, Rewari - 123 401  
Tel. : 01274 - 250440 / 251188  
Fax : 01274 - 255966

**SONIPAT**

\* **Malwa Motors Sales Pvt. Ltd.**  
**Showroom & Workshop :**  
NH-1, 31 Km Stone, G.T. Road, Kundli,  
Sonipat - 131 001, Haryana  
Tel. : 0130 - 2219384 - 85, 2370386, 2371386  
Fax : 0130 - 2219384

**SIRSA**

\* **Padam Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Hisar Road, Opp Traffic Police Post, Sirsa - 125 055  
Tel. : 01666 - 244445  
Fax : 01666 - 244442

**STATE - HIMACHAL PRADESH****KANGRA**

\* **Himachal Autowheels Pvt. Ltd.**  
**(Platinum Chevrolet)**  
**Showroom & Workshop :**  
N.H 20 Kachhiary, Kangra - 176 001  
Tel. : 01892 - 260600/260601

**MANDI**

\* **Ram Hari Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Rani Ki Bain, Gutkar, Mandi - 175 021  
Tel. : 01905 - 225692  
Fax : 01905 - 221691

**MANALI**

\* **Ram Hari Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Rotang Road, Village Vishisht Vihal, PO Vashisht,  
Tehsil - Manali, Distt - Kullu, Manali - 175 131  
Tel. : 01902 - 254001

**SIMLA**

\* **Rajvir Motors**  
**Showroom & Workshop :**  
Bypass Road, Parasdass Garden, Simla - 171 001  
Tel. : 0177 - 2674284 - 6  
Fax : 0177 - 2674287

**SOLAN**

\* **Rajvir Motors**  
**Showroom & Workshop :**  
Kalka Shimla Road, Near Mehta Market,  
Kumarhatti, Solan, Himachal Pradesh - 173 229  
Telefax : 01792 - 266338

**UNA**

\* **Bhagat Ram Motorways Pvt. Ltd.**  
**Showroom & Workshop :**  
Una Nangal Road, Rakkar Colony, Una - 174 303  
Tel. : 01975 - 238799  
Fax : 01975 - 238699

## STATE - PUNJAB

- \* **AMRITSAR**  
**S V Motors**  
**Showroom :**  
Near Amritsar Gate, GT Road, Amritsar - 143 001  
Tel. : 0183 - 2700102  
Fax : 0183 - 2700101
- Workshop :**  
Main GT Road, Opp. ITBP Office, Amritsar - 143 001  
Tel. : 0183 - 2700201
- \* **BATALA**  
**Kashmir Autmobiles Pvt. Ltd. (Platinum Chevrolet)**  
**Showroom & Workshop :**  
Opp. Cambridge International School, Saidmubarak,  
Amritsar Road, Batala - 143 505  
Tel.: 01871 - 241024
- \* **BHATINDA**  
**Padam Cars Pvt. Ltd.**  
**Showroom & Workshop :**  
Goniana Road, 8th Mile Stone, NH-10,  
Bhatinda - 151 005  
Tel. : 0164 - 27601111 / 9216350205  
Telefax : 0164 - 2760153
- \* **CHANDIGARH**  
**Padam Motors Pvt. Ltd.**  
**Showroom :**  
182/2, Industrial Area, Phase 1, Chandigarh - 160 002  
Tel. : 0172 - 5212900
- Workshop :**  
185, Industrial Area, Phase 1, Chandigarh -160 002  
Tel. : 0172 - 5212999
- \* **JALANDHAR**  
**Aakriti World**  
**Showroom :**  
Ground Floor, Vasal Tower, Police Lines,  
Opp. President Hotel, Jalandhar - 144 001  
Telefax : 0181 - 5003333
- Workshop :**  
1746 Ladowali Road, Near BSF Chowk,  
Jalandhar - 144 001  
Tel. : 0181 - 5057777

- \* **LUDHIANA**  
**Padam Cars Pvt. Ltd.**  
**Showroom & Workshop :**  
Khasra No. 279/3, G.T. Road,  
Dhandari Kalan, Ludhiana  
Tel. : 0161 - 2510014  
Telefax : 0161 - 2510015
- \* **Padam Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Near Ayalli Chowk, Ferozepur Road,  
Ludhiana - 141 001  
Tel. : 0163-6225755, 9780000609
- \* **Omni Wheels Pvt. Ltd.**  
**Showroom & Workshop :**  
Plot No 73, New Kuldeep Nagar,  
Basti Jodhewal Chowk, Ludhiana - 141 007  
Tel. : 0161 - 5055900  
Fax : 0161 - 5055911
- \* **ROPAR**  
**Padam Cars Pvt. Ltd.**  
**Showroom & Workshop :**  
Chandigarh Road, Nangal Chowk, Ropar - 140 001  
Telefax : 01881 - 500099
- \* **MOGA**  
**Padam Cars Pvt. Ltd.**  
**Showroom & Workshop :**  
Near Majestic Resorts, Ferozepur Road,  
Moga - 142 001  
Tel. : 01636 - 225755
- \* **NAWASHAHAR**  
**Aakriti World**  
**Showroom & Workshop :**  
Chandigarh Road, Nawashahar, Punjab - 144 514  
Tel. : 01823 - 285656  
Telefax : 01823 - 285858
- \* **PATIALA**  
**Padam Cars Pvt. Ltd.**  
**Showroom & Workshop :**  
Main Patiala - Rajpura Road,  
Opp. Caspa Resort, Bahadurgarh, Patiala - 147 001  
Tel. : 0175 - 2663813 - 14, 9217100905 - 9  
Fax : 0175 - 2663828

- \* **PATHANKOT**  
**Kashmir Automobiles Pvt. Ltd.**  
**Showroom & Workshop :**  
Simbel Chowk, Dalhousie Road, Pathankot - 145 001  
Tel. : 0186 - 2257022 - 24

- \* **SANGRUR**  
**Padam Cars Pvt. Ltd.**  
**Showroom & Workshop :**  
College Road, Opp. Kamal Palace, Sangrur - 148001  
Tel. : 9216350134, 9216911461

## STATE - RAJASTHAN

- \* **AJMER**  
**Rajdeep Autowheels (P) Ltd.**  
**Showroom :**  
12-15, ASC Road, Vaishali Nagar, Ajmer - 305001  
Tel. : 0145 - 2628989 / 2625116

- Workshop :**  
Khasara No-319 Kankarda Bhunaboy, NH-8,  
Jaipur Road, Ajmer - 305001  
Tel. : 0145 - 2788192 / 93 / 2788222 / 23

- \* **ALWAR**  
**Triumph Motors**  
**Showroom & Workshop :**  
Old Delhi Road, Near Jhankar Hotel, Alwar - 301 001  
Telefax : 0144 - 3047571 - 78

- \* **BHILWARA**  
**Rajdeep Autowheels (P) Ltd.**  
**Showroom & Workshop :**  
Payal Resort, Ajmer Road, Bhilwara - 311001  
Tel. : 01482 - 265164

- \* **BIKANER**  
**Sunehri Cars**  
**Showroom & Workshop :**  
Plot No. 15, Transport Nagar,  
NH-15, Ganganagar Road, Bikaner - 334 001  
Tel. : 8003399060 / 66 / 69

- \* **BANSWARA**  
**Atharva Motors Pvt. Ltd.**  
**Workshop :**  
Janamed, Udaipur Road, Banswara - 327 001  
Tel. : 02962 - 250227

- CHITTORGARH**  
 \* **Atharva Motors Pvt. Ltd.**  
**Showroom :**  
 Plot No. 86, Kabir Colony, Bhlwara Road,  
 Chittorgarh - 312001  
 Tel. : 01472 - 247598  
 Fax : 01472 - 247598
- Workshop :**  
 Near Saint Paul's School, Opp. Rajasthan State  
 Seed Corp., Nimbhera Road, Chittorgarh - 312 001  
 Tel. : 01472 - 240598
- CHOMU**  
 \* **Triumph Motors**  
**Showroom & Workshop :**  
 Near Radha Soami Bagh, Jaipur Road,  
 Chomu - 303 702  
 Tel. : 0142 - 3304000
- JAIPUR**  
 \* **Triumph Motors**  
**Showroom 1 :**  
 Corporate Tower, A-1, Jawahar Lal Marg,  
 Jaipur - 302 015  
 Tel. : 0141 - 4057575  
 Fax : 0141 - 4057500
- Showroom 2 :**  
 C7D, Sawai Jai Singh Highway,  
 Bani Park, Jaipur - 302 016  
 Tel. : 0141 - 4122222  
 Fax : 0141 - 4122233
- Workshop 1 :**  
 G-109A, Sitapura Industrial Area, Jaipur - 302 004  
 Tel. : 0141 - 5122333, 5113636, 5143737,  
 5122797, 5122798, 5143636, 4090409  
 Fax : 0141 - 5122552
- Workshop 2 :**  
 E-12B, Vishwakarma Ind. Area, Road No. 01,  
 Jaipur - 302 013  
 Tel. : 0141 - 4255555
- Workshop 3 :**  
 E1 - 2295, Ramchandrapura Industrial Area,  
 Sitapura Ext, Jaipur - 302 022  
 Tel. : 0141 - 4090409

- JHUNJUNU**  
 \* **Triumph Motors**  
**Showroom & Workshop :**  
 G1-8, 9 & H1-16,17, Phase - 2, RIICO Industrial Area,  
 Jhunjunu - 333 001  
 Tel. : 01592 - 203163, 250001 - 3, 250145, 250146
- JODHPUR**  
 \* **Atharva Motors Pvt. Ltd.**  
**Showroom :**  
 27/27A, Light Industrial Area,  
 Near Shastri Circle, ITI Road, Jodhpur - 342 003  
 Tel. : 0291 - 3048491
- Workshop :**  
 E-711, Mia Bsni, IInd Phase,  
 Behind Krishna Dharam Kanta, Jodhpur - 342 005  
 Tel. : 0291 - 3048217 - 22  
 Fax : 0291 - 3048223
- KOTA**  
 \* **Triumph Motors**  
**Showroom & Workshop :**  
 E - 137C, Road No. 5,  
 Indraprastha Industrial Area, Kota  
 Tel. : 0744 - 2372333, 2372666
- PALI**  
 \* **Atharva Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
 Opp. Krishi Mandi, Jodhpur Road, Pali - 306 401  
 Tel. : 9414060104
- SIKAR**  
 \* **Triumph Motors**  
**Showroom & Workshop :**  
 Near Circuit House, NH-11, Jaipur Sikar Road,  
 Sikar - 332 001  
 Tel. : 01572 - 245971
- SRI GANGANAGAR**  
 \* **Sunehri Cars**  
**Showroom & Workshop :**  
 6th Km Stone, Surat Garh Road, NH-15,  
 Sri Ganganagar  
 Tel. : 8003399070 / 71

- UDAIPUR**  
 \* **Atharva Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
 A-83, Mewar Industrial Area, Madri, NH-8,  
 Ahmedabad Bye Pass, Udaipur - 313 002  
 Tel. : 0294 - 3002730, 3002769  
 Fax : 0294 - 2490108

## STATE - UTTAR PRADESH

- ALIGARH**  
 \* **Jattari Automobile**  
**Showroom & Workshop :**  
 300 Mtr. From, Bharat Petrol Pump,  
 Khair By Pass Road, Aligarh - 202001  
 Tel. : 8938802229, 8938802214
- ALLAHABAD**  
 \* **Eldee Motors**  
**Showroom :**  
 Eldee Enclave, 2, S. P. Marg, Civil Lines,  
 Allahabad - 211 001  
 Tel. : 0532 - 2560743, 44
- Workshop :**  
 Kanodia Mill Compound 1, Luker Ganj,  
 Allahabad - 211 001  
 Tel. : 0532 - 2616368
- AGRA**  
 \* **Kalyan Auto Sales**  
**Showroom & Workshop :**  
 Opp. Bhagwati Dhaba, Near New Sabji Mandi,  
 Sikandra, Agra - 282 007  
 Tel. : 0562 - 2640460 / 62 / 63  
 Fax : 0562 - 2640461
- BAREILLY**  
 \* **VAT Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
 4.5 KM, Rampur Road, CB Ganj, Bareilly - 243 001  
 Tel. : 0581 - 2560741  
 Fax : 0581 - 2560731
- FAIZABAD**  
 \* **Megha Auto (I) Pvt. Ltd.**  
**Showroom & Workshop :**  
 Lucknow Bypass Road, Sahadatganj,  
 Faizabad - 224 001  
 Tel. : 09839099210

\* **GORAKHPUR**  
**United Motors**  
**Showroom :**  
Kasia By-pass Road, Near Dr. Riyaz Ortho Hospital,  
Mohaddipur, Gorakhpur - 273 001  
Tel.: 0551 - 2201667  
Fax.: 0551 - 2338299

**Workshop :**  
Saryu Nahar Colony, Singharia,  
Gorakhpur - Deoria Road, Gorakhpur - 273 008  
Tel.: 0551 - 2270231

\* **GHAZIABAD**  
**Shiva Motors**  
**Showroom & Workshop :**  
28/3/5, Site - IV, Industrial Area, Sahibabad,  
Ghaziabad  
Tel.: 0120 - 3008600 / 605 / 631 / 632 / 635 / 636  
Fax: 0120 - 3008643 / 45 / 48 / 49 / 50

**Workshop 2 :**  
58/3, Site 04, Sahibabad, Ghaziabad - 200 300  
Tel. : 0120 - 4558765

\* **JHANSI**  
**Sri Venkateshwar Autocare Pvt. Ltd.**  
**Showroom & Workshop :**  
Jhansi Kanpur Road, Goramachhiya, Jhansi - 284 001  
Tel. : 0510 - 2371144, 6450158

\* **KANPUR**  
**Cross Road Auto Pvt. Ltd.**  
**Showroom :**  
40, Government Industrial Estate,  
Opp. Sindh Colony, Fazal Ganj, Kanpur - 208 012  
Tel.: 0512 - 2221276 / 2220043

**Workshop 1 :**  
C-15A, Panki Industrial Area, Site-1, Kanpur - 208 012  
Tel.: 0512 - 2691293, 2691377

**Workshop 2 :**  
122/236, A-1 & C-1, Fazalganj,  
Near Sangam Talkies, Kanpur - 208 012  
Tel.: 8009461111

\* **Romi Motors Pvt. Ltd.**  
**Showroom :**  
14/63, Civil Lines, Kanpur - 208 001  
Tel.: 0512 - 3224703

**Workshop :**  
120/192 (4), Lajpat Nagar,  
Near Mariampur Crossing, Kanpur - 208 012  
Tel. : 0512 - 3224701 / 3224702

\* **LUCKNOW**  
**Megha Auto (I) Pvt. Ltd.**  
**Showroom & Workshop :**  
10/CP/5, Ring Road, Vikasnagar,  
Opp. Jagrani Hospital, Lucknow - 226 020  
Tel. : 0522 - 4057999 / 4007977 / 2330180

**Workshop 2:**  
Mishipur Depot, Near Sanatan Cold  
Storage, Kursi Road, Lucknow - 226 026  
Tel. : 0522 - 2890631

\* **MEERUT**  
**Vardajyoti Automobiles Pvt. Ltd.**  
**Showroom & Workshop :**  
Madhuban Cinema Bldg., Madhuban Colony,  
Baghpath Road, Meerut - 250 002  
Tel. : 0121 - 2404005 - 08  
Fax : 0121 - 2404009

\* **MORADABAD**  
**Sigma Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Near Radhakrishna Mandir,  
Delhi Road, Moradabad - 244 001  
Tel. : 0591 - 2550100 - 05, 7351007701 - 05,  
7351003805

\* **MIRZAPUR**  
**Saraswati Industries**  
**Showroom & Workshop :**  
Pili Kothi, Station Road, Mirzapur - 231 001  
Tel. : 05442 - 223923

\* **NOIDA**  
**Shiva Motors**  
**Showroom :**  
G-24, Sector 11, Noida - 210 301  
Tel. : 0120 - 3920150 / 158

**Workshop :**  
C-80/81A, Sector - 8, Noida  
Tel. : 0120 - 3359807 / 813

\* **SAHARANPUR**  
**DPM Autosales**  
**Workshop :**  
Ambala Road, Near Badi Nahar, Saharanpur  
Tel. : 0135 - 2640877

\* **VARANASI**  
**Vinayak Automotive Pvt. Ltd. (Vinayak Chevrolet)**  
**Showroom & Workshop :**  
Adjacent to Essar Petrol Pump,  
Jagatpur, Rohania, Varanasi - 221 313  
Tel. : 7703003320, 7703003330, 7703003321,  
7703003333

## STATE - UTTARAKHAND

\* **DEHRADUN**  
**DPM Autosales**  
**Showroom & Workshop :**  
Mohabewala Industrial Area,  
Saharanpur Road, Dehradun  
Tel. : 0135 - 2642051 / 52 / 53  
Fax : 0135 - 2642054

\* **HALDWANI**  
**Analysis Motors**  
**Workshop :**  
7.5 km Stone, Gora Padav, Bareilly Road,  
Halldwani - 263 641  
Tel. : 05946 - 232050

## STATE - JAMMU & KASHMIR

\* **JAMMU**  
**K. C. Motors**  
**Showroom & Workshop :**  
NH-1, Bypass Road, Jammu - 180 004  
Tel. : 0191 - 2465769 / 59, 2460829  
Fax : 0191 - 2476660

\* **RS PURA**  
**K. C. Motors**  
**Showroom & Workshop :**  
Bagha Marh, RS Pura, Jammu  
Tel. : 01923 - 252809  
Fax : 01923 - 252809

---

\* **SRINAGAR**  
**K. C. Motors**  
**Showroom & Workshop :**  
By Pass Road, Hyderpora, Srinagar - 190 014  
Tel. : 0194 - 2443188

## WEST ZONE

### STATE - GOA

- \* **VASCO-DA-GAMA**  
**Subrai Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
F L Gomes Road, Vasco-Da-Gama, Goa - 403 802  
Tel. : 0832 - 2517421 / 22  
Fax : 0832 - 2513924

### STATE - GUJARAT

- \* **AHMEDABAD**  
**Gallops Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Near JCB Service Station, S.G. Highway,  
Sarkhej, Ahmedabad - 380 015  
Tel. : 079 - 2474346, 39835544, 39835501  
Fax : 079 - 39835588  
  
**Showroom 2 :**  
A/8,9,10,11,12,13 & 14, Radhe Shopping Mall,  
Khokhra, Maninagar, Ahmedabad  
Tel. : 079 - 32941862 / 32440235  
  
**Showroom 3 :**  
Vedas Ground Floor, Opp SBI Saijpur Branch,  
NH 8 Naroda, Patia Cross Road, Ahmedabad - 382 325  
Tel. : 079 - 22820106  
  
**Workshop 2 :**  
Opp. Amraivadi Post Office, Near Hatkeswar Circle,  
Maninagar, Ahmedabad - 380 026  
Tel. : 079 - 30486501 / 02 / 03
- \* **ANAND**  
**Shree Gopinathji Agencies**  
**Workshop :**  
Survey No. 570 - A/2, Near Indira Statue,  
Lambhavel Road, Anand - 388 001  
Tel. : 02692 - 247979 / 247878
- \* **BHARUCH**  
**Shree Gopinathji Agencies**  
**Showroom & Workshop :**  
Beside K.U & Company Petrol Pump,  
NH-8, Village Vadadala, Bharuch - 392 015  
Tel. : 02642 - 654245, 291303, 654845  
Telefax : 02642 - 231584

- \* **BHAVNAGAR**  
**V Raj Motors**  
**Showroom & Workshop :**  
Plot No. 150, Near Press Quarter,  
Opp. Maruti Showroom, Bhavnagar-Rajkot Road,  
Chitra, Bhavnagar - 364 003  
Tel. : 0218 - 2444590, 2444445

- \* **BHUJ**  
**Cargo Motors**  
**Showroom & Workshop :**  
Plot No. 10, Survey No. 29/1,  
Bhuj - Mirzapur Road, Bhuj - 370001  
Tel. : 02832 - 654191 / 654192

- \* **GANDHIDHAM**  
**Cargo Motors**  
**Showroom & Workshop :**  
NH-8A, Kandla Port Road, Gandhidham - 370 201  
Tel. : 02833 - 654370, 653317, 9825611692

- \* **GODHRA**  
**Shree Gopinathji Agencies**  
**Showroom & Workshop :**  
Moonlight Cinema Compound, Vavdi,  
Godhra - 389 001  
Tel. : 02672 - 645828, 265270, 265271

- \* **GANDHI NAGAR**  
**Gallops Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Near Nigam Petrol Pump, Rajshree Cinema Road,  
Sector-21, Gandhinagar - 382 010  
Tel. : 0232 - 30516107

- \* **HIMMATNAGAR**  
**Gallops Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Near Motipura Circle, Opp. S.T. Workshop,  
Shamlaji Highway, Himmatnagar - 383 001  
Tel. : 02772 - 229525, 229524, 308000, 308001

- \* **JAM NAGAR**  
**Gallops Motors Pvt. Ltd.**  
**Showroom :**  
Jamnagar - Rajkot Highway, Hapa,  
Opp. Tata IB Motors, Jamnagar  
Tel. : 0288 - 3216060

- \* **Workshop :**  
Jamnagar to Rajkot Highway, 8 - Happa,  
Jamnagar - 320 120  
Tel. : 0288 - 3921194 - 98

- \* **MEHSANA**  
**Gallops Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Opp. Wide Angle, Nagalpur Highway,  
Mehsana - 384 002  
Tel. : 02762 - 241010, 302401 / 02 / 06  
Fax : 02762 - 245151

- \* **NAVSARI**  
**Monarch Motors**  
**Showroom & Workshop :**  
Mahalaxmi Estate, Near Bhana Petrol Pump,  
Near Grid Char Rasta, N.H. No. 8, Navsari - 396 424  
Tel. : 02637 - 265788 / 265599

- \* **PALANPUR**  
**Gallops Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Survey No. 525/1, Palanpur - Delhi Highway,  
Near Palanpur - Deesa Char Rasta, Palanpur - 385 001

- \* **RAJKOT**  
**Gallops Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Survey No. 219/220, Opp. Parin furniture,  
Next to Jay Ganesh, AT & PO,  
Kotharia Gondal Highway, Rajkot - 360 003  
Tel. : 0281 - 3205151, 2370006 / 8 / 9 / 10,  
3983400, 3983407

- \* **Showroom 2 :**  
Ground Floor, Fortune Square, Jalaram Street,  
Near Kotecha Circle, Kotecha, Rajkot - 360 001  
Tel. : 9909992033

- \* **SURAT**  
**Empire Cars Pvt. Ltd.**  
**Showroom & Workshop :**  
Plot No. 3, Near Rangoli Hotel, Rundh,  
Dumas Road, Surat - 395 007  
Tel. : 0261 - 6713300 / 33

\* **Monarch Cars Pvt. Ltd.**  
**Showroom:**  
Umia Nagar Society,  
Near Shree Choshath Joganiyo Mata Mandir,  
Udhna Magdalla Road, Surat - 394 210  
Tel.: 0261-2720481, 2720482, 09825274707

**Workshop :**  
Next To Sameeti School, Patel Nagar Circle,  
Udhna Gam, Surat - 394 210  
Tel.: 0261 - 3091001

\* **Nanavati Motors**  
**Showroom:**  
Orchid Tower, Opp Intercity Township,  
Puna Kumbharia road, Surat - 395 010  
Tel.: 9879114447

**Workshop :**  
Opp. SBI Bank, Puna Patiya,  
Puna Kumbharia Road, Surat - 395 010  
Tel. : 0261 - 6456449/429/430  
Fax : 0261 - 2647771

\* **SURENDRA NAGAR**  
**Gallops Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Plot No. 267, GIDC Vadhvan, Opp. Market Yards,  
Near Rekha Bearings, Surendra Nagar  
Tel. : 02752 - 321542 - 43

\* **VAPI**  
**Desai Automobiles**  
**Showroom & Workshop :**  
At & Po : Balitha, Near Woodland Hotel,  
National Highway No. 8,  
Taluka Pardi, Vapi, Valsad - 395 015  
Tel. : 0260 - 6531783, 2400250 - 51  
Fax : 0260 - 2426525

\* **VADODARA**  
**Shree Gopinathji Agencies**  
**Showroom & Workshop :**  
Opp. Gujarat Elec. Board Sub Station,  
(Near Prakuti Resort), Chhani, Baroda - 390 002  
Tel. : 0265 - 2761105 / 06

**Showroom & Workshop 2 :**  
R. S. No. 7, Opp. Atladra Railway Station,  
Atladra, Vadodara - 390 012  
Tel. : 0265 - 2681050, 1060, 0187, 1010, 1020  
Fax : 0265 - 2681050, 2354984

**Showroom & Workshop 3 :**  
3/A, Sahajanand Industrial Estate,  
Munjmahuda, Akota, Vadodara - 390 020  
Tel. : 0265 - 2681010, 2681020, 2359898, 2334109  
Fax : 0265 - 2681050, 2681060

## STATE - MADHYA PRADESH

\* **BHOPAL**  
**Super Cars Ltd.**  
**Showroom & Workshop :**  
Plot No. 21 Sector G, Govindpura Industrial Area,  
J.K. Road, Bhopal - 462 021  
Tel. : 0755 - 4028400, 4228201  
Fax : 0755 - 4228203

\* **Varenyam Motors**  
**Showroom & Workshop :**  
189, Angoori Bagh, Jinsi Road, Bhopal - 462 008  
Tel. : 0755 - 2575288 / 299 / 300  
Fax : 0755 - 2579918

\* **CHHINDWARA**  
**Sunshine Motors**  
**Showroom & Workshop :**  
College Road, Lalbagh, Chhindwara - 480 001  
Tel. : 0716 - 244125, 244129, 244193 / 194  
Fax : 0716 - 244126

\* **GWALIOR**  
**Sumedha Vehicles Pvt. Ltd.**  
**Showroom & Workshop :**  
Opp. Jhansi Road Police Station,  
Jhansi Road, Gwalior - 474 009  
Tel. : 0751 - 2422067, 4015789, 3291856  
Fax : 0751 - 2348024

\* **INDORE**  
**Super Cars Ltd.**  
**Showroom :**  
Saket Tower - 3A, Ratlam Kothi,  
Near Geeta Bhavan Square, AB Road, Indore - 452 001  
Tel. : 0731 - 4700053, 54  
Telefax : 0731 - 4700052

**Workshop :**  
49, United Compound, Iasudiya Mori,  
Dewas Naka, Indore  
Tel. : 0731 - 470055, 56, 57  
Fax : 0731 - 470054

\* **Chhabra Autolink Pvt. Ltd.**  
**Showroom :**  
Plot No -10 Vishnupuri Main, Near Medisquare  
Hospital, Indore - 452001  
Tel : 0731- 4267800

**Workshop :**  
Plot No.- 11/11,11/12, Survey No.- 26, Gram Palada,  
Khandwa Road, Indore - 452011  
Tel : 0731 - 6656000

\* **JABALPUR**  
**Oriental Motors**  
**Showroom & Workshop :**  
497, Karmeta, Near Padwar Kala,  
Katangee Bye Pass Road, Jabalpur - 482 003  
Tel. : 0761 - 3250007, 3260002, 3250003, 3290001  
Fax : 0761 - 4027011

\* **KHANDWA**  
**Bedi Motors**  
**Showroom & Workshop :**  
Gram Rehmapur, Indore Road, Khandwa - 450 001  
Tel. : 0733 - 2244075

\* **RATLAM**  
**Super Cars Ltd.**  
**Showroom & Workshop :**  
Jaora Road, Near RTO Office, Ratlam - 457 001  
Tel. : 07412 - 260040

\* **SAGAR**  
**Varenyam Motorcars Pvt. Ltd.**  
**Showroom :**  
Opposite Hotel Paradise, Jabalpur Road, Makroniya,  
Sagar - 470 004  
Tel. : 07582 - 263566

**Workshop :**  
Behind HDFC Bank, Makroniya  
Sagar - 470 004  
Tel. : 07582 - 239288

**SATNA**\* **Oriental Motors****Showroom :**

Virat Nagar Colony, Pateri, Panna Road, Satna - 485 001  
Tel. : 07672 - 229495

**Workshop :**

27, Industrial Area Near Union Floor, Rewa Road,  
Satna - 485 001  
Tel. : 7672 -252763

**STATE - MAHARASHTRA****AHMEDNAGAR**\* **Saideep Cars Pvt. Ltd.****Showroom & Workshop :**

Survey No. 55/1B/2/1, Nagar Manmad Road,  
Ahmednagar - 414 111  
Tel. : 0241 - 2779225 - 7  
Fax : 0241 - 2779228

**AKOLA**\* **Star Motors****Showroom & Workshop :**

9/1, Geeta Nagar Near, Alankar Petrol Pump,  
Akola - 444 005  
Tel. : 07242800087 / 7350008428

**AMRAVATI**\* **Star Motors****Showroom & Workshop :**

Plot No. 8, Navathe Square Bandnera Road, Amravati  
Tel. : 0721 - 2510199, 9921008861, 7350008426

**AURANGABAD**\* **Mishrikotkar Motors LLP (Arihant Chevrolet)****Showroom :**

Sector P, Town Centre, Jalna Road, CIDCO,  
Aurangabad - 431 005  
Tel. : 0240-2482819

**Workshop :**

Plot No. E-35, Chikalathana MIDC Area,  
Aurangabad - 431 006  
Tel. : 7745011919, 7745021919

**BARAMATI**\* **Mota Automotive Pvt. Ltd.****Showroom & Workshop :**

41 / 1 / B / 17, Nira Road, Kasba, Tehsil - Baramati,  
Dist - Pune - 413 102  
Tel. : 02112 - 222212, 220212

**CHANDRAPUR**\* **ND Cars Pvt. Ltd.****Showroom & Workshop :**

Gajanan Maharaj Mandir Square, Bapat Nagar,  
Nagpur Road, Chandrapur - 442 401  
Tel. : 07172 - 646344/22

**DHULE**\* **Jitendra Wheels Pvt. Ltd.****Showroom & Workshop :**

P-62, Behind Hotel Manas, MIDC Avdhan,  
Dhule - 424 001  
Tel. : 02562 - 281222 / 232

**JALGAON**\* **Soham Motors Pvt. Ltd.****Showroom & Workshop :**

93/1, MIDC, RL Square Aurangabad Road,  
Jalgaon - 425 003  
Tel. : 0257-2211151, 2270085

**KOLHAPUR**\* **Unique Automobiles****Showroom & Workshop :**

122/1, Pulachi Shirol, Opp. Sangli Phata,  
Kolhapur - 416 122  
Tel. : 0230 - 2461518 - 19  
Fax : 0230 - 2461520

**Showroom 2 :**

Ayodhya Park, Opp. Sangam Talkies,  
Kavala Naka, Kolhapur - 416 001  
Tel. : 0231 - 2535315, 2535425  
Fax : 0231 - 2535615

**LATUR**\* **Ajinkya Cars Pvt. Ltd.****Showroom & Workshop :**

Barshi Road, Near Bidave Engineering College,  
Beside Pramod Petrol Pump, Latur - 413 531  
Tel. : 02382 - 222600

**MUMBAI**\* **Ashtavinayak Auto Pvt. Ltd.****Showroom :**

D Mall, Off Veera Desai Road, Andheri (West),  
Mumbai - 400 053  
Tel. : 022 - 66488888  
Fax : 022 - 66488880

**Workshop :**

Ram Mandir Road, Somani Gram,  
Next to Central Warehouse Corporation,  
Oshiwara, Goregaon (West), Mumbai - 400 051  
Tel. : 022 - 26765555

\* **AVK Automart Pvt. Ltd.****Workshop :**

Fida Hussain Industrial Estate,  
Near Samrat Hotel, Pandurang Wadi Road,  
Mira Road (West), Mumbai - 401 104  
Tel. : 022 - 28453178, 28455507, 28453564

\* **Nikhil Automobiles Pvt. Ltd.****Showroom & Workshop 1 :**

A 70, TTC Industry Area, Thane Belapur Road,  
Kharghar, Near ICI Color Company,  
Khoparkaine West, Navi Mumbai - 400 709  
Tel. : 022 - 27780801, 40708888  
Fax : 022 - 40708899, 27780805

**Showroom 2 :**

264-265, Vaswani Chambers, Opp. Old Passport  
Office, Prabhadevi, Mumbai - 400 025  
Tel. : 022 - 434594444, 24221711-12  
Fax : 022 - 24222713

**Workshop 2 :**

C/o Bharat Tiles & Marbles Ltd.,  
Jaibhimganagar, Dharukhana Road, Reay Road (East),  
Near Sujala Hotel, Mumbai - 400 010  
Tel. : 022 - 64560303, 23774514 / 15 / 16  
Fax : 022 - 23774505

**Workshop 3 :**

Plot No. D - 238 - A, TTC Industrial Area,  
MIDC Shiravane, Nerul, Navi Mumbai - 400 706  
Tel. : 022 - 43448800

**Workshop 4 :**

RC 27 F - O/W/P23, Brick Bunder Sewri,  
Haybunder Road, Kala Chowki, Mumbai - 400 033  
Tel. : 022 - 64560303

\* **JMD VFM Cars India Pvt. Ltd.****Showroom :**

471 A- 1st Floor KK Square, Adjoining Solitaire  
Corporate Park, Near P&G Plaza Andheri (East),  
Mumbai - 400 099  
Tel. : 022 - 28565900/02/03

- Workshop :**  
Plot No. 48-A, Khairani Road, Opp. Gundecha Chambers off, Sakivihar Road, Sakinaka Andhri (East), Mumbai - 400 072  
Tel : 022 - 28565900 / 01 / 02
- ★ **NASIK**  
**Jitendra Wheels Pvt. Ltd.**  
**Showroom & Workshop :**  
B-88, Arihant Plaza, MIDC, Ambad, Next to Hotel Taj, Mumbai - Agra Highway, Nasik - 422 010  
Tel. : 0253 - 2384432 / 632 / 832, 6636666, 6637777  
Fax : 0253 - 2384532
- ★ **NAGPUR**  
**Star Motors**  
**Showroom & Workshop :**  
44 / 4, Wahajara, Kamptee Road, NH - 7, Nagpur - 440 026  
Tel. : 0712 - 6507836/37, 6507916, 6461503 / 04  
Fax : 0712 - 2632429
- ★ **Tajshree Motors Pvt. Ltd.**  
**Showroom :**  
Plot No. 1 Hindustan Colony, Wardha Road, Nagpur - 440 002  
Tel. : 0712 - 2250242 / 2250243 / 2250244
- Workshop :**  
Plot No. 679, Ghat Road, Near Cotton Market Square, Nagpur - 440 018  
Tel. : 0712 - 2734466 / 2734467
- ★ **NANDED**  
**Bafna Automotives**  
**Showroom & Workshop :**  
Gut No. 235, Pimpalgaon (Mahadeo), Nanded-Akola Road, Nanded - 431 607  
Tel. : 02462 - 274069 / 652099, 311102
- PUNE**  
★ **Platinum Chevrolet**  
**Showroom & Workshop 1 :**  
Sr No 45/1/B/A, Shankarseth Road, Gutkewadi, Pune - 411 037  
Tel. : 020 - 26440029
- Showroom & Workshop 2 :**  
Survey No 5/4, Najhate Nagar, Kalewadi Main Road, Thergaon, Pune - 411 033  
Tel. : 020 - 66326600, 66326632, 66326666

- ★ **Singh Cycle & Motor Co.**  
**Showroom 1 :**  
S. No. 38/4, Krishna Complex, Hadapsar Bypass Road, Near Radisson Hotel, Kharadi, Pune - 411 014  
Tel. : 020 - 32419385 / 32319526
- Showroom 2 :**  
ICC Trade Centre, Showroom No. 4, Survey No. 403 A/2, Senapati Bapat Road, Pune - 411 016  
Tel. : 020 - 25666941 / 2 / 3 / 4
- Workshop 1 :**  
Reality Warehousing Pvt. Ltd., Gate No. 1337 / 1, Pune Nagpur, Wagholi, Pune - 412 307  
Tel. : 020 - 46609999
- Workshop 2 :**  
Patel Tiles Compound, Sr.No. 42/1, Shivaji Nagar, Behind ST Bus Stand, Pune - 411 005  
Tel. : 020 - 32424202, 65270809, 7774010500
- ★ **SATARA**  
**Uniqe Automobiles**  
**Showroom & Workshop :**  
41, Mutha Colony, Sadar Bazar, Satara - 416 002  
Tel. : 09623225299
- SOLAPUR**  
★ **Mota Automotive Pvt. Ltd.**  
**Workshop :**  
MRC Cable India, A/20/6, MIDC Chincholi, Solapur - 413 255  
Tel. : 9272222233
- ★ **SANGLI**  
**Uniqe Automobiles**  
**Showroom :**  
442-3, Kulkarni Complex, 100 feet road, South Sivaji Nagar, Sangli - 416 416  
Tel. : 0233 - 2326544  
Fax : 0233 - 2326594
- Workshop :**  
Kulkarni Complex, 100 Feet Road, Near MSEB Sub-Station, Sangli - 416 416  
Tel. : 0233 - 2326544  
Fax : 0233 - 2326594

- YAVATMAL**  
★ **SARAS MOTORS**  
**Pobaru Marketing & Agencies Pvt. Ltd.**  
**Showroom :**  
Shop No. 5, 6, 7, 8 Udhyog Bhavan, Dharwha Road, Yavatmal - 445 001  
Tel. : 07232 - 255991  
Fax : 07232 - 255992
- Workshop :**  
Block No. B-16 MIDC (Lohara), Yavatmal - 445 001  
Tel. : 07798883816  
Fax : 07232 - 255992
- ★ **THANE**  
**SC Auto Corporation**  
**Showroom:**  
Modi House, Opp. to LIC Building, Naupada, Eastern Express Highway, Thane (West), Thane - 400 602  
Tel. : 022 - 67610000  
Fax : 022 - 67610209
- Workshop :**  
Pioneer Estate Corporation, 133-134, Pokhran Road No.2, Opp. Oswal Park, Thane (West) - 400601  
Tel. : 022 - 66040000  
Fax : 022 - 66040102
- ★ **Angel Auto World Pvt. Ltd.**  
**Showroom & Workshop 1 :**  
Grishma garden, Gokhivare, Vasai East, Thane, Mumbai (Vasai) - 401208  
Tel :0250-6453030 /6061777
- Showroom & Workshop 2 :**  
J-176, MIDC, Tarapur Road, Boisar (West) - 401505  
Tel. : 02525 - 655454 / 655353
- ★ **Nikhil Automobiles Pvt. Ltd.**  
**Showroom & Workshop :**  
Survey No. 6, Hissa No. 6, Manpada Gaon, Kalyan Shill Road, Dombivali (East) - 421 204.  
Tel. : 0251 - 3048888 / 3048899

---

<b>STATE - CHATTISGARH</b>
----------------------------

**RAIPUR**

★ **Vardhaman Motors**

**Showroom & Workshop :**

9/1, Mahoba Bazar, GE Road, NH-6,  
Kumhari Dist. - Durg, Raipur - 492 001  
Tel. : 7489177999, 7883221999

**Showroom 2 :**

Ashoka Millenium, Ring Road,  
Raipur - 492 011  
Tel. : 7714030104, 7712410008

## SOUTH ZONE

### STATE - ANDAMAN & NICOBAR

- PORTBLAIR**  
\* **Group Engineers**  
**Showroom :**  
Prem Nagar Junction, (SY No 1394/1),  
Haddo Post Port Blair - 744 102  
Tel. : 03192 - 230301, 242901

**Workshop :**  
Opp Womens Working Hostel, Dollygunj,  
Port Blair, Junglighat Post, Portblair - 744 103  
Tel. : 03192 - 253044 / 253011

### STATE - ANDHRA PRADESH

- BHIMAVARAM**  
\* **Orange Auto Pvt. Ltd.**  
**Showroom & Workshop :**  
Door No. 2-25, # 6, Near Bharath petroleum bunk,  
Undi Road, Bhimavaram - 534 202  
Tel. : 9052781234 / 905224678
- CHITTOOR**  
\* **M.G. Brothers Automobiles (P) Limited**  
**Showroom & Workshop :**  
NH 4, Near Iruvaram Check Post, Chittoor - 517 001  
Tel.: 92470 00003, 9247000027
- GUNTUR**  
\* **Fusion Motors**  
**Showroom & Workshop :**  
Plot No. 296 & 297, Opp. Sarvani Diesel Engineering,  
Autonagar Main Road, Autonagar, Guntur - 522 001  
Tel. : 0863 - 6454545
- KURNOOL**  
\* **Dheeraj Motors**  
**Workshop :**  
NH-7 Road, Near APSP 2nd Battalian,  
Ballary Chowrasta, Kurnool - 518 004  
Tel. : 8518 - 253777
- NELLORE**  
\* **M.G. Brothers Automobiles (P) Limited**  
**Showroom:**  
26-2-1777, Near Ayyappa Temple, Vedayapalem Area,  
Nellore - 524 004  
Tel.: 9247000000

**Workshop :**  
Plot No. 95 & 96, Wood Complex,  
Near Ayyappa Temple, Nellore - 524 004  
Tel. : 9247000022

- \* **RAJAHMUNDRY**  
**Orange Auto Pvt. Ltd.**  
**Showroom & Workshop :**  
D. No. 82-10-2, Venkateswara Nagar,  
Near Lalacheruvu, Near ONGC Complex, NH-5 Road,  
Rajahmundry - 533 103  
Tel. : 0883 - 6575555 / 6580888

\* **TIRUPATHI**  
**M.G. Brothers Automobiles (P) Limited**  
**Showroom:**  
11-46/A, Renigunta Road, Tirupathi - 517 501  
Tel.: 9299999970

**Workshop :**  
Plot No: 254, Auto Nagar,  
Near Vinayaka Temple, Renigunta Road,  
Tirupathi - 517 506  
Tel.: 9247000024

- \* **VISHAKHAPATNAM**  
**Orange Auto Pvt. Ltd.**  
**Showroom & Workshop :**  
D. No.38-22-87, Varun Avenue, NH-5, Murali Nagar,  
NH. Birla Junction, Vishakhapatnam - 530 075  
Tel.: 0891 - 2572222, 9052402345

**Showroom 2 :**  
D. No. 4-46-12, G. K. Mansiom, Pedawaltier,  
Vishakhapatnam - 530 017  
Tel.: 0891 - 2572222, 4444  
Fax: 0891 - 6645555

- \* **VIJAYWADA**  
**Fusion Motors**  
**Showroom :**  
Fusion Towers, 36-12-2, Opposite to Siddhartha  
Public School, Moghul Rajapuram,  
Vijayawada - 520 010  
Tel. : 0866 - 6645555 / 9603123666  
Fax : 0866 - 6645592

**Workshop :**  
Opposite to Fusion Towers, 36-12-2,  
Near Siddhartha Public School, Moghul Rajapuram,  
Vijayawada - 520 010  
Tel. : 0866 - 6645593 / 94, 9603123777

### STATE - KARNATAKA

- BANGALORE**  
\* **Kropex India Ltd.**  
**Showroom & Workshop :**  
49/1, Singasandara, Hosur Main Road,  
Bangalore - 560 068  
Tel. : 080 - 43574357  
Fax : 080 - 43574353
- Workshop 2 :**  
Sy. No. 26, Hanumareddy Layout,  
Chinnapanahalli Main Road, Marathahalli Post,  
Bangalore - 560 037  
Tel. : 9663388812
- \* **Trident Automobiles Pvt. Ltd.**  
**Showroom & Workshop :**  
SY.No. 18/1B, (Old No 18/1C), Nayanda Halli Grama,  
Kengeri Hobli, Bangalore - 560 038  
Tel. :080 - 67149191/292, 67149001
- Showroom & Workshop 2 :**  
No. 122/1, C. Shankar Reddy Layout, Kalyana Nagar,  
Outer Ring Road, Bangalore - 560 043  
Tel. : 080 - 43430300, 43430500  
Fax : 080 - 43430308, 43430517
- Showroom 3 :**  
14, Langford Avenue, Langford Road,  
Bangalore - 560 025  
Tel. : 080 - 4330300
- Showroom 4 :**  
No. 300 A - 70, 36th Cross, 10th Main,  
5th Block, Jay Nagar, Bangalore - 560 041  
Tel. : 080 - 42542999
- Showroom 5 :**  
#95/3, Doddanekundi Village, Karthik Nagar,  
Marathahalli, Bangalore - 560 037  
Tel. : 080 - 30651404

**Workshop 3 :**

No. 558/1,60 ft Road, 9th Cross, HAL 2nd Stage,  
Old Airport Road, Behind Leela Palace,  
Kodihalli, Indiranagar, Bangalore - 560 008  
Tel. : 080 - 49155858

\* **K.H.T. Chevrolet (A Division Of Morzaria Real  
Tech Private Limited)**

**Showroom :**

No: 725, West of Cord Road, Rajajinagar,  
1st Stage, Mahalakshmi Layout, Bangalore - 560 086  
Tel. : 080 - 49363636

**Workshop :**

No. 305, 5th Main Road, 2nd Cross, 4th Phase,  
Peenya Industrial Area, Bangalore - 560 058  
Tel. : 080 - 49353637

**BELGAUM**

\* **Bellad Enterprises Pvt. Ltd.**

**Showroom & Workshop :**

Shri Krishna Weaving Mill Compound,  
Vengual Road, Vijaya Nagar, Belgaum - 591 108  
Tel. : 0831 - 2449556 / 557, 6514911  
Fax : 0831 - 2472209

**BELLARY**

\* **Bellad Enterprises Pvt. Ltd.**

**Showroom & Workshop :**

Near Bellary Rolling Mills, Anantpur Road,  
Bellary - 583 101  
Tel. : 08392 - 261234 / 5  
Fax : 08392 - 261235

**DAVANGERE**

\* **Modi Motors**

**Showroom & Workshop :**

#869/1-2, PB Road, Opposite Sai International Hotel,  
Davangere - 577 006  
Tel. : 08192 - 233896

**GULBARGA**

\* **VKG Motor World**

**Showroom & Workshop :**

Plot - 1&2, Survey No. 116/2, Behind Mahendrakar  
Complex, Kapnoor Humnabad Road,  
Gulbarga - 585104  
Tel. : 08472 - 224555  
Fax : 08472 - 258019

**HUBLI**

\* **Bellad Enterprises Pvt. Ltd.**

**Showroom & Workshop :**

Opp. NGEF, Rayapura, Dharwad,  
P. B. Road, Hubli - 580 025  
Tel. : 0836 - 2218338 / 39  
Telefax : 0836 - 2218337

**MANGALORE**

\* **Vibrant Motors**

**Showroom :**

Mont Tiera Apartments, Vivekanand Road,  
Kadri, Nantoor-Padav, Mangalore - 575004  
Tel.: 0824 - 2225544

**Workshop :**

C/O Manjunath Retreading Works, Kulshekara  
Chowki, Near KMF Milk Dairy, Kulshekar,  
Mangalore - 575 005  
Tel. : 0824 - 2231202

**MYSORE**

\* **Dyuthi Motors Pvt. Ltd.**

**Showroom & Workshop :**

No. 201 / 1 & 2, Hunsur Road, Hinkal Village,  
Mysore - 570 017  
Tel. : 0821 - 4240500 - 16  
Fax : 0821 - 4241899

**SHIMOGA**

\* **Frontline Automobiles**

**Workshop :**

Shankar Muth Road, Shimoga - 577 201  
Tel. : 08182 - 229099  
Fax : 08182 - 229098

**STATE - KERALA****ALLEPPEY**

\* **Geeyam Motors Pvt. Ltd.**

**Showroom :**

Koorayil Annex, Opp. Bhattathiripurayidom,  
Near MCH Junction, Alappuzha, Alleppey - 688 001  
Tel. : 0477 - 2238501

**CALICUT**

\* **German Motors**

**Showroom & Workshop :**

118-A, Chungam Junction, West Hill,  
Calicut - 673 005  
Tel. : 0495 - 2383680 / 81, 2383770 / 71  
Fax : 0495 - 3041100, 2381909

**COCHIN**

\* **Geeyem Motors Pvt. Ltd.**

**Showroom & Workshop :**

11/336, NH-47 Bye Pass, Nettor P.O.,  
Emakulam, Cochin - 682 304  
Tel. : 0484 - 2703245 - 49, 3097100, 3097101  
Fax : 0484 - 2703244

**Showroom 2 :**

33/2440B, Geetanjali Junction, NH Bypass  
Chakkarakarambu, Cochin - 682 032  
Tel. : 0484 - 2343146

**CHALAKKUDY**

\* **Geeyem Motors Pvt. Ltd.**

**Showroom :**

IX/461A, B, Panampilly College, NH-47, Potta,  
Chalakkudy - 680 722  
Tel. : 0480 - 2705125, 2705123

**KANJRAPALLI**

\* **Geeyem Motors Pvt. Ltd.**

**Showroom :**

Near A K J M School, K K Road, Kanjirappally  
(Kottayam Dt.)  
Tel. : 0482 - 8201616

**KANNUR**

\* **German Motors**

**Showroom & Workshop :**

BP6-14A, Valapattanam, Kannur - 670 010  
Tel. : 0497 - 2774466 - 67, 3057200  
Fax : 0497 - 27744666, 3057200

**KASARGOD**

\* **German Motors**

**Showroom & Workshop :**

15/89B, Citizen Nagar, Chengala, Kasargod - 671123  
Tel. : 04994 - 302200 - 10  
Fax : 04994 - 302211

- KAYAKULAM**  
 \* **Geeyam Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
 NH-47, Near MSM College, Kayakulam - 690 502  
 Telefax : 0479 - 2446650
- KODANGULUR**  
 \* **Geeyam Motors Pvt. Ltd.**  
**Showroom :**  
 XII/ 121-122, Opp. Medicare Hospital,  
 Kottapuram PO, TKS Puram, Kodangalur - 680 667  
 Tel. : 0480 - 2803561 / 62
- KOTAYYAM**  
 \* **Geeyam Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
 Karithas Junction, Thellakom P.O., Kotayyam-686016  
 Tel. : 0481 - 2792203  
 Fax : 0481 - 2792383
- KOLLAM**  
 \* **Deedi Motors**  
**Showroom :**  
 Post Office Junction, Pallimukku, Kollam - 691 010  
 Tel. : 0474 - 3257777 / 2725959  
 Fax : 0474 - 2725900
- Workshop :**  
 Cantonment, North Nagar, Pullikada, Kollam - 691001  
 Tel. : 0474 - 2750010 / 11
- KOTTAKKAL**  
 \* **German Motors**  
**Showroom & Workshop :**  
 260A, Palathara, Cherusola P.O., Kottakkal,  
 Malappuram  
 Tel. : 0494 - 2611666
- MUVATTUPUZHA**  
 \* **Geeyam Motors Pvt. Ltd.**  
**Showroom :**  
 Mackar Plaza, EEC Market Road, PNB Junction,  
 Muvattupuzha - 686 673  
 Tel. : 0485 - 606600, 2835272 / 73  
 Fax : 0485 - 2832554
- Workshop :**  
 902/903, Opp. Mackar Plaza, EEC Market Road,  
 PNB Junction, Muvattupuzha - 686 673  
 Tel. : 0485 - 2835272 / 73  
 Fax : 0485 - 2832554

- MUTTUM**  
 \* **Geeyam Motors**  
**Showroom & Workshop :**  
 SY NO: 70/15, 71/10, Thai Kkattukara P.O, N H Road,  
 Distt. Aluva, Muttum, Cochin - 683 106  
 Tel. : 0484 - 2632193 / 94 / 95 / 96 / 97
- PERINTHALMANNA**  
 \* **German Motors**  
**Showroom & Workshop :**  
 AP-IV 664F, Opp. ITC, Tirurkad,  
 Perinthalmanna - 679 531  
 Tel. : 04933 - 325060, 237000, 239878  
 Telefax : 04933 - 2737000
- PALAKKAD**  
 \* **Geeyam Motors**  
**Showroom & Workshop :**  
 Door No. 8/1198, NH Bypass Road,  
 Chandra Nagar, Palakkad - 678 007  
 Tel. : 0491 - 2504133  
 Fax : 0491 - 2504143
- PATHANAMTHITTA**  
 \* **Deedi Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
 Kumbazhethu Buildings, Churulicode P.O.,  
 Kozhencherry Road, Pathanamthitta - 689 645  
 Tel. : 0468 - 2272079, 2272080  
 Fax : 0468 - 2272078
- THIRUVALLA**  
 \* **Deedi Motors Pvt. Ltd.**  
**Showroom :**  
 No. 54/2, Kurusumootil Buildings,  
 M C Road, Mazhuvangad, Thiruvalla - 689 101  
 Tel. : 0469 - 2740800
- THRISSUR**  
 \* **Geeyam Motors Pvt. Ltd.**  
**Showroom :**  
 14/3-A1, Guruvayoor Road Puzhakkal,  
 Ayyanthole P.O., Thrissur - 680 003  
 Tel. : 0487 - 2388945 - 46, 2388851 - 52  
 Fax : 0487 - 2388851
- Workshop :**  
 Near Boating Station, Puzhakkal Post Office,  
 Thrissur - 680 553  
 Tel. : 0487 - 2225100, 2225101

- TRIVENDRUM**  
 \* **Deedi Motors Pvt. Ltd.**  
**Showroom / Workshop :**  
 Erumalathoppu, N.H. Bye Pass Road, Venpalvattom,  
 Anayara P.O., Trivendrum - 695 029  
 Tel. : 0471 - 2556006, 3257777, 2558599, 2558499  
 Fax : 0471 - 2551020
- WAYNAD**  
 \* **German Motors**  
**Showroom / Workshop :**  
 Muttill - Post, North Kalpetta, Waynad - 673 122  
 Tel. : 04936 - 304200 / 202414  
 Fax : 04936 - 304201

## STATE - PONDICHERRY

- PONDICHERRY**  
 \* **Aakash Auto Pvt. Ltd.**  
**Showroom :**  
 No. 1, Sounderrajan, 100 ft. Road, Sounder Rajan  
 Nagar, Mudaliarpet, Pondicherry - 605 004  
 Tel. : 0413 - 2204400  
 Fax : 0413 - 2204033
- Workshop :**  
 No. 23, 9th Cross, Metupallyam,  
 Industrial Estate, Pondicherry - 605 009  
 Tel. : 0413 - 2279900

## STATE - TAMIL NADU

- CHENNAI**  
 \* **Sundaram Motors**  
**Showroom & Workshop :**  
 180, Anna salai Road, Chennai - 600 006  
 Tel. : 044 - 28579203 / 28 / 32  
 Fax : 044 - 28579210
- Workshop 2:**  
 116/4 Mahalakshmi Nagar Extention,  
 Numbal Village Thirverkadu Post, Chennai - 600 077  
 Tel. : 044 - 26493020/21
- \* **KLN Motors Agencies Pvt. Ltd.**  
**Showroom 1 :**  
 Old No. 861, New No. 232, Poonamallee High Road,  
 Kilpauk, Chennai - 600 010  
 Tel. : 044 - 23452937 / 38  
 Telefax : 044 - 23452936

**Workshop 1 :**

Shop No. 50, SIDCO Industrial Area,  
Ambattur, Chennai - 600 058  
Tel. : 044 - 23452930 - 32

**Showroom & Workshop 2 :**

No. 8-NP, Developed Plot, Guindy Industrial Estate,  
Ekattuthangal, Near Kasi Theatre, Chennai - 600 097  
Tel. : 044 - 23458941 / 42

**CUDDALORE**\* **Aakash Auto Pvt. Ltd.****Showroom & Workshop:**

RS No.155/11, Vadalur Main Road, Periamedu,  
Karaikadu Village, Cuddalore Taluk,  
Cuddalore - 607 005  
Tel.: 04142 - 297997, 7373299933, 7373599933

**COIMBATORE**\* **Anamallais Agencies (P) Ltd.****Showroom :**

252, Mettupalayam Road, Coimbatore - 641 043  
Tel. : 0422 - 2435555 / 2432999  
Fax : 0422 - 2446151

**Workshop :**

249A, Mettupalayam Bye Pass Road,  
Coimbatore - 641 043  
Tel. : 0422 - 2433444

\* **Pressana Automobile****Showroom :**

No. 1987, Trichy Main Road, LCT Complex,  
Coimbatore - 641 005  
Tel. : 0422 - 4041111

**Workshop :**

505/1, Sowaripalayam Main Road,  
Ramanathapuram, Coimbatore - 641 045  
Tel. : 0422 - 4051111

**ERODE**\* **Pressana Automobile****Showroom & Workshop :**

No.1, ChinnaKadu Thottam,  
Veerapampalayam, Dhindal P.O., Erode - 638 012  
Tel. : 0424 - 2276046 / 47  
Fax : 0424 - 2276048

**HOSUR**\* **Thrive Cars****Showroom :**

2, Rajappa Mudaliar Building,  
NH-7, Krishnagiri, Bangalore Bypass Road, Hosur  
Tel. : 04344 - 644588

**Workshop :**

2/2, 1E, Balaji Nagar, Rayakottai Road,  
Opp. to LUK India, Hosur - 635 109  
Tel. : 04344 - 291033

**KARUR**\* **Pressana Automobile****Showroom & Workshop :**

No.3, Salem Bypass Road, Kulathupalayam,  
Karur - 635 006  
Tel. : 04324 - 222301  
Fax : 04324 - 222302

**MADURAI**\* **A.R.A.S. Motors (P) Ltd.****Showroom :**

35/1, Dindigul National Highway,  
Near A. R. C. Parcel Service, Villangudi,  
Madurai - 625 018  
Tel. : 0452 - 2669617, 3091917  
Fax : 0452 - 2669618

**Workshop :**

Plot No. 64 & 68, Thiruvallavayanallur Post,  
National Highway No. 7, Opp Aroky Milk  
Processing Unit, Nagari, Madurai - 625 221  
Tel. : 0452 - 2463612 / 13 / 14

**NAGERCOIL**\* **A.R.A.S. Motors (P) Ltd.****Showroom & Workshop:**

2/86, Tirunelveli Main road,  
Ozhuginasery, Nagercoil - 629 001  
Tel. : 04652 - 644664 (Showroom)  
04652 - 272443 (Workshop)

**NAMAKAL**\* **Thrive Cars****Showroom :**

5/58, Salem Main Road, Namakal  
Tel. : 04286 - 275603

**Workshop :**

276/85, Tiruchengode Main Road,  
Opp. Old Lakshmi Kalyana Mandapam,  
Namakkak - 637 001

\* **PUDUKOTTAI****Jayaraj Karz****Showroom & Workshop :**

5915/1, Khalif Nagar, Thirumayam Road,  
Pudukottai - 622 001  
Tel. : 04322 - 262223

**PERAMBALUR**\* **Jayaraj Karz****Showroom & Workshop :**

No. 36, Trichy to Chennai Highway, Erariyur,  
Veppanthattai, Perambalur, Tamilnadu - 621 133  
Tel. : 924422728

**SALEM**\* **Thrive Cars****Showroom & Workshop :**

1116, Salem Chennai Highway Road,  
Near Holy Cross, Hr. Sec. School,  
Ammamet, Salem - 636 014  
Tel. : 0427 - 2242603  
Fax : 0427 - 2242604

**TRICHY**\* **Jayaraj Karz****Showroom & Workshop :**

Madurai Main Road, Panjapur, Trichy - 620 012  
Tel. : 0431 - 2906420 / 6541207  
Fax : 0431 - 2202187

\* **THIRUNELVELLI****A.R.A.S. Motors (P) Ltd.****Showroom & Workshop :**

1183/3, National Highway Jothipuram,  
Konganthamparai, Thirunelveli - 627 007  
Tel. : 0462 - 2551070, 3269638  
Fax : 0462 - 2554111

**TIRUPUR**\* **Anamallais Agencies Pvt. Ltd.****Showroom & Workshop :**

396/6, Kamaraj Road, Palladam Road,  
Tirupur - 641 604  
Tel. : 0421 - 2918999

**THANJAVUR**  
★ **Jayaraj Karz**  
**Showroom & Workshop :**  
Pudukottai Bye - Pass Road, Thanjavur  
Tel. : 04362 - 226452

**VELLORE**  
★ **Sayar Cars**  
**Showroom & Workshop :**  
S.F. No. 3004, New By Pass Road,  
Near Collectorate, Vellore - 632 004  
Tel.: 0416 - 2222017

## STATE - TELANGANA

**HYDERABAD**  
★ **Kun Automobiles (P) Ltd.**  
**Showroom & Workshop 1 :**  
Plot No. 74, Snehapuri Colony, Near Andhra Bank,  
Nagole Main Road, Nagole, Hyderabad - 500 035  
Tel. : 040 - 24220013, 44886666, 44886767/700/701  
Fax : 040 - 24220313

**Showroom 2 :**  
House No. 1-3-1045, Viceroy Hotel Lane,  
Kawadiguda Road, Hyderabad - 500 080  
Tel. : 040 - 27532385 - 89  
Fax : 040 - 27532384

**Showroom 3 :**  
Plot No.3 & 4, Ravi Colony, Main Road,  
Kondapur, Hyderabad - 500 084  
Tel. : 040 - 45469999 / 89 / 79 / 69  
Fax : 040 - 45469959

**Workshop 2 :**  
1-8-670, Azamabad, RTC 'X' Road, Hyderabad-500020  
Tel. : 040 - 27668678 / 27668761  
Fax : 040 - 27668632

**Workshop 3 :**  
Plot No. 21, Mini Industrial Estate,  
Hafeezpet Road, Kondapur, Hyderabad - 500 049  
Tel. : 040 - 31906677

**Workshop 4 :**  
Plot No.37, Survey No.45, Vignan Junior College  
Road, Kundapur, Hyderabad - 500 081  
Tel. : 040 - 31906699

★ **Orange Auto Pvt. Ltd.**  
**Showroom 1 :**  
6-3-249/3, Abhinandan Towers, Road No. 1,  
Banjara Hills, Hyderabad - 500 034  
Tel. : 040 - 66515555  
Fax : 040 - 66469999

**Workshop 1 :**  
B-45/46, Industrial Estate, Near Andhra Bank  
Sanatnagar, Hyderabad - 500 018  
Tel. : 040 - 66265555 / 66269999

**Showroom & Workshop 2 :**  
16-2-705/1/1, Malakpet, Opp. Srukupa Market,  
Hyderabad - 500 036  
Tel. : 040 - 66815555  
Fax : 040 - 66179999

**Showroom & Workshop 3 :**  
A2, Balanagar Techno Craft Industrial Estate,  
Balanagar, Hyderabad - 500 037  
Tel. : 040 - 23721111  
Fax : 040 - 23729999

**KARIMNAGAR**  
★ **Kun Automobiles (P) Ltd.**  
**Showroom & Workshop :**  
M.No.8-6-128, Kothi Rampur, Hyderabad Highway  
Road, Karim Nagar - 505 001  
Tel. : 0878 - 2276633 / 9885520022  
Fax : 0878 - 2276633

**KHAMMAM**  
★ **Fusion Motors**  
**Showroom & Workshop :**  
Plot No. 11, Sri Sri Circle, Opp. Reliance Petrol Bunk,  
Rotary Nagar, Bypass Road, Khammam - 507 002  
Tel.: 9247623666, 8096991122

**WARANGAL**  
★ **Kun Automobiles (P) Ltd.**  
**Showroom :**  
Door No. 15-2-4-1-1 & 15-2-4,  
Mulugu Cross, Warangal - 506 007  
Tel. : 0870 - 2421955  
Fax : 0870 - 2421955

**Workshop :**  
H. No. 23-6-132, Hunter Road,  
Opp. Citizens Club, Warangal  
Tel. : 0870 - 2523377 / 88 / 99  
Fax : 0870 - 2523399

## EAST ZONE

### STATE - ARUNACHHAL PRADESH

- ITANAGAR**  
★ **Sango Motors**  
**Showroom & Workshop :**  
NH-52A, Near Shiv Mandir, 6 Km  
Between Nahalagun, Dist. Papumpare  
Itanagar, Arunachal Pradesh - 791 110  
Tel. : 0360 - 2001166 / 67, 2033153

### STATE - ASSAM

- BONGAIGAON**  
★ **Raj N Dibyani Automobiles**  
**Showroom & Workshop :**  
Near Lower Assam Hospital, Chapaguri Road,  
North Bongaigaon, Bongaigaon  
Tel. : 03664 - 231890, 230545
- DIBRUGARH**  
★ **Pashupati Traders**  
**Showroom & Workshop :**  
P. N. Road, Chiring Chapori, Dibrugarh - 786 001  
Tel. : 0373 - 2323281  
Telefax : 0373 - 2323296
- GUWAHATI**  
★ **Srishti Automobiles Pvt. Ltd.**  
**Showroom :**  
Opp. Pantaloons, G S Road, Rukminigaon,  
Guwahati, Assam - 781 022  
Tel. : 0361 - 2223666  
Fax : 0361 - 2223888
- Workshop :**  
Radha Nagar, VIP Road, Six mile, Guwahati,  
Assam - 781 022
- SHIBSAGAR**  
★ **Pashupati Traders**  
**Showroom & Workshop :**  
KPM Chariali, Shivasagar, Shivasagar - 785 640  
Tel. : 03772 - 220082 / 88

- SILCHAR**  
★ **Smart Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
NH-54, Ramnagar, Silchar - 788 008  
Tel. : 03842 - 268701, 9207042806
- NAGAON**  
★ **LB Motor (A Unit of Borah & Sons Pvt. Ltd)**  
**Showroom & Workshop :**  
AT Road, Dimarguri, Nagaon - 782 003  
Tel. : 03672 - 253157
- TEZPUR**  
★ **GNB Motors**  
**Showroom :**  
P.O. Nikamul, Beside Udyanpath,  
Tezpur - 784 001  
Tel. : 03712 - 255999
- Workshop :**  
P.O. Nikamul, Udyanpath,  
Tezpur - 784 001  
Tel. : 03712 - 255998
- TINSUKIA**  
★ **Dhansri Motors**  
**Showroom & Workshop :**  
Opposite New Tinsukia Railway Junction,  
A.T. Road, Hijuguri, Tinsukia - 786 125.  
Tel. : 0374 - 2311397

### STATE - BIHAR

- MUZAFARPUR**  
★ **Pandey Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Mithila Body Builders, NH-18,  
Bhagwanpur, Muzaafarpur - 842 001  
Tel. : 0621 - 2252762
- PATNA**  
★ **Pandey Motors Pvt. Ltd.**  
**Showroom :**  
Pandey Plaza, Exhibition Road, Patna - 800 001  
Tel. : 0612 - 2205195, 3955491  
Fax : 0612 - 2205196

**Workshop :**  
Bhootnath Road, Sahadurpur, PS Agamkuan,  
Patna - 800 020  
Tel. : 0612 - 2341151

- ★ **GAYA**  
**Brijaandan Automobile Pvt. Ltd.**  
**Showroom & Workshop :**  
727 Old 1026 / New No. NH - 83,  
Near BMP - 3, Gaya - 823 004  
Tel. : 0631 - 2200131

- PURNEA**  
★ **Hare Krishna Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
Damka Chowk, NH - 31, Gulababagh, Purnea - 854 326  
Tel. : 9234323211

### STATE - JHARKHAND

- BOKARO**  
★ **Power Motors**  
**Showroom & Workshop :**  
N-1, City Centre, Sector - 4,  
Bokaro Steel City, Bokaro - 827 004  
Tel. : 06542 - 233555 / 232977  
Fax : 06542 - 232988
- ★ **DHANBAD**  
**Sorabh Automobiles**  
**Showroom :**  
Indramani Palace, Opp Flair Bajaj, Saraidhela,  
Dhanbad - 826 001  
Tel. : 0326 - 2201366
- Workshop :**  
Tilakraidih, Govindpur Road, Dhanbad - 826 004  
Tel. : 9470580855
- ★ **HAZARIBAGH**  
**Laxmi Auto**  
**Showroom & Workshop :**  
Zulu Park Road, Near SBI Main Branch,  
Hazaribagh - 825 301  
Tel. : 06546 - 222929

- JAMSHEDPUR**  
 \* **Narbheram Motors Pvt. Ltd.**  
**Showroom & Workshop :**  
 M-4, Phase-VI, Adityapur Industrial Area,  
 P.O. Gamaria, Jamshepur - 832 108  
 Tel. : 0657 - 3293612, 3297763, 3290649, 6510531  
 Telefax : 0657 - 2200532

- RANCHI**  
 \* **Rahul Automobiles Pvt. Ltd.**  
**Showroom 1 :**  
 Piska More, Ratu Road, Ranchi - 834 005  
 Tel. : 0651 - 2510251 / 52

**Showroom 2 :**  
 Line Tank Road, MR Tower, Ranchi - 834 001  
 Tel. : 0651 - 3298436  
 Fax : 0651 - 2510252

**Workshop :**  
 Ratu Road, Near Kamre Ashram, Ranchi - 834 005  
 Tel. : 0651 - 2511558 / 564, 3241206

## STATE - ORISSA

- BALASORE**  
 \* **Venus Auto Works Pvt. Ltd.**  
**Showroom & Workshop :**  
 NH - 5, Remuna Golai, Janaganj,  
 Near Bhattar Mill, Balasore -756 019  
 Tel. : 06782 - 244013, 244014
- BHUBANESWAR**  
 \* **Venus Auto Works Pvt. Ltd.**  
**Showroom & Workshop :**  
 A/62, Nayapalli, Bhubaneswar - 751 003  
 Tel. : 0674 - 3019999 (Showroom)  
 0674 - 3019900, 3270444, 9337070444  
 (Workshop)  
 Telefax : 0674 - 3019908
- \* **Super Sales Automobiles Pvt. Ltd.**  
**Showroom & Workshop :**  
 Plot No. 644/2148, NH-5, Pahal,  
 Bhubneswar, Dist - khurda - 752 101  
 Tel. : 0674 - 2463913, 2463914, 6543010 / 11

- SAMBALPUR**  
 \* **Bharat Motors Ltd.**  
**Showroom & Workshop :**  
 9, Industrial Estate, Near Central School,  
 Bareipali, Sambalpur - 768 006  
 Tel. : 0663 - 2402736, 2405286  
 Fax : 0663 - 2585894

- ROURKELA**  
 \* **Balaram Motors**  
**Showroom & Workshop :**  
 Opposite Pahadi Kanta, Vedvyash, Rourkela - 769 041

## STATE - WEST BENGAL

- ASANSOL**  
 \* **Shaila Autotech**  
**Showroom & Workshop :**  
 NH-2, Chanda More, Asansol - 713 339  
 Telefax : 0341 - 2343704 / 705

- HOWRAH**  
 \* **Priti Motor Udyog (P) Ltd.**  
**Showroom :**  
 NH-6, Bombay Howrah Highway, Howrah

**Workshop :**  
 Khejurtala Kolkata Truck Terminal,  
 Khejurtala, NH-6, Howrah - 711 403.  
 Tel. : 033 - 65002070/71/72

- KOLKATA**  
 \* **OSL Autotech Pvt. Ltd.**  
**Showroom :**  
 2/1A, Sarat Bose Road, Lansdowne Towers,  
 Kolkata - 700 020  
 Tel. : 033 - 66270400

**Workshop :**  
 49 E, Topsis Road South, Kolkata - 700 046  
 Tel. : 033 - 66270500

- \* **Speed Autotech**  
**Showroom :**  
 "The Meridian", Kazi Nazrul Islam Sarani,  
 (VIP Road), Kolkata - 700 059  
 Tel. : 033 - 25007915 - 9  
 Fax : 033 - 40150824

**Workshop 1 :**  
 241/2B, APC Road, Opp. Khanna Cinema,  
 Kolkata - 700 004  
 Tel. : 033 - 25551370 / 72 / 73 / 74, 25552509

**Workshop 2 :**  
 108 F, Nilgunge Road, Agarpara, Kolkata - 700 058  
 Tel. : 033 - 25552509

- \* **Dulichand Motors Pvt. Ltd.**  
**Showroom :**  
 "Shrachi Towers", 686 Anandapur,  
 E.M. Bypass, Near Ruby Hospital, Kolkatta - 700 107  
 Tel. : 033 - 24431801 - 02, 40141616  
 Fax : 033 - 40141624

**Workshop :**  
 5/51, Jagatipota, Ahalya Nagar,  
 Opp. Jagatipota Kisan Market, Kolkatta - 700 099  
 Tel. : 033 - 40161718, 24264224, 24264214

- **Longia Motors Pvt. Ltd.**  
**Workshop 1 :**  
 15/1D, Sahanagar Road, (Near Rashbehari Avenue  
 Crossing), Kolkatta - 700 026  
 Tel. : 033 - 66270100 / 119  
 Fax : 033 - 66270121

**Workshop 2 :**  
 Budge Budge Trunk Road, Rampur, P.O. : Gobindopur,  
 P.S. : Maheshtala, Kolkata - 700 141  
 Tel. : 033 - 66270222 / 223 / 205  
 Fax : 033 - 66270208

- \* **SILIGURI**  
**Kaysons Automotive Pvt. Ltd.**  
**Showroom & Workshop :**  
 Ilird Mile, Checkpost,  
 Opp. New Eastern Bypass Road,  
 Sevoke Road, Siliguri - 734 401  
 Tel. : 0353 - 2544533 - 35, 2777723  
 Fax : 0353 - 2544456

## STATE - MANIPUR

- IMPHAL**  
 \* **Rajpri Enterprise**  
**Showroom & Workshop :**  
 Chigmeirong Mamang Leikai,  
 Imphal East, Imphal - 795 001  
 Tel. : 0385 - 2421183

---

## STATE - NAGALAND

### DIMAPUR

\* **Urban Station**

**Showroom & Workshop :**

NSC Petrol Pump, NH-39, 6th Mile, Kohima Road,  
Dimapur, Nagaland - 797 112  
Tel. : 03862 - 240994, 240992

## STATE - TRIPURA

### AGARTALA

\* **Sri Krishna Automobiles**

**Showroom & Workshop :**

Plot No. 4612 & 4615, Shanihani,  
Airport Road, Agartala, Tripura West - 799 001  
Tel. : 0381 - 2342566

## STATE - MEGHALAYA

### SHILLONG

\* **DH Royal Cars**

**Showroom & Workshop :**

Parkview, Fire Brigade,  
Shillong - 793 014  
Tel. : 0364 - 2520481, 2520477

## STATE - SIKKIM

### GANGTOK

\* **GEN X Motors**

**Workshop :**

C/o Garima Enterprise, P.S. Road, Gangtok - 737 101  
Tel. : 03592 - 202515

## STATE - MIZORAM

### AIZAWL

\* **Highland**

**Showroom & Workshop :**

A-L Road, Zemabawk, Aizawl - 796 017  
Tel. : 0389 - 2351916

---

## INTERNATIONAL

- ★ **SRI LANKA**  
**Mag City Motor Company Pvt. Ltd.**  
**Showroom & Workshop :**  
No. 320A, Darley Road,  
Colombo - 10, Sri Lanka  
Tel. : 0094777410407
  
- ★ **BHUTAN**  
**Global Trade**  
**Showroom :**  
Lkahlham, Changankha,  
Thimphu, Bhutan  
  
**Workshop :**  
Post Box No. 1037, Olarongcechu,  
Thimphu, Bhutann
  
- **NEPAL**  
**SPG Automobiles Pvt. Ltd.**  
**Workshop :**  
GPO Box 2544, Khumaltar, Lalitpur,  
Kathmandu, Nepal  
Tel.: 00977-1-4100543





## Help us serve you better!

Any feedback / complaints / grievance send us or contact at:

General Motors India Private Limited

A-16, MIDC Talegaon Industrial Area (Phase-II), Near Floriculture Park,

Talegaon Navlakh Umbre Village Road, Tehsil-Maval,

Pune – 410507, Maharashtra, India.

Tel. +91 2114 663939

For Customer Assistance Centre call at +91 124 3080000 or email at [gmi.cac@gm.com](mailto:gmi.cac@gm.com)

24 Hr. Helpline at 1800 3000 8080

24 x 7 Roadside Assistance at 1800 103 8090 (Toll Free No.) or +91 124 4388090

### Disclaimer-

All information, illustrations and specifications contained in this Owner's Manual are based on the latest production information available at the time of publication. The right is reserved to make changes at any time without notice.

Part No. : 28287013

Revision No. 03

Revision Date

11/2014/2,000